
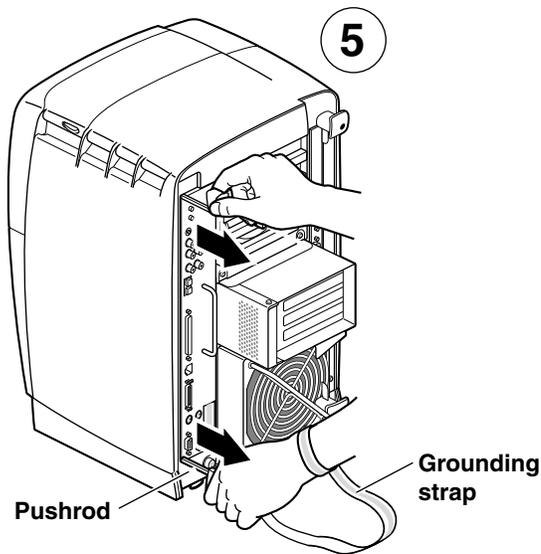
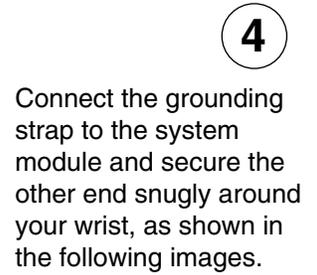
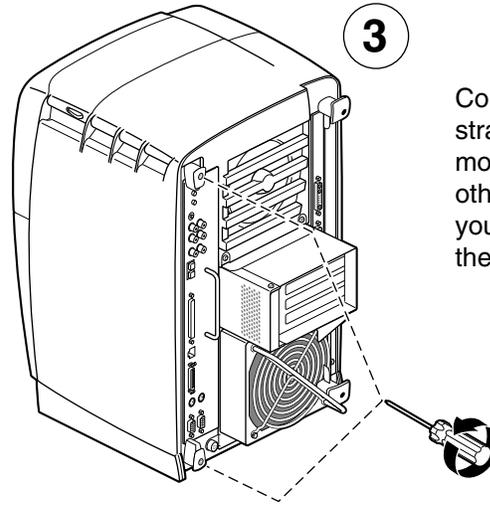
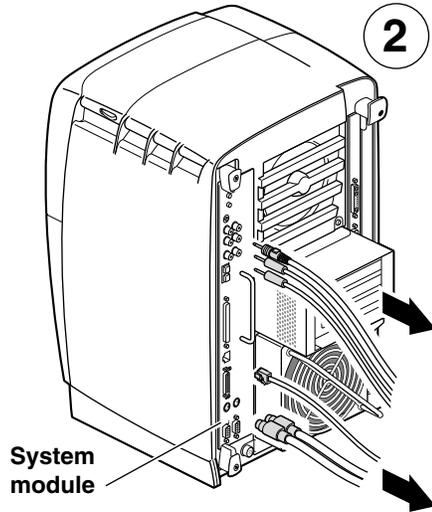


# System Module Replacement for Octane<sup>®</sup> and Octane2<sup>™</sup> Workstations


## REMOVAL

Use this procedure in place of the "Removing a System Module" procedure in both the *Octane* and *Octane2 Workstation Owner's Guide*, SGI document numbers 007-3435-00x and 007-4207-00x, respectively.

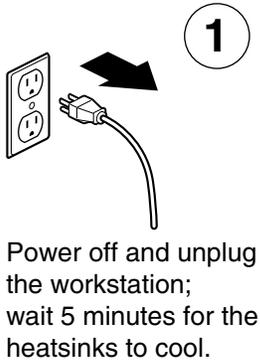



Pull the 2 pushrods until they are fully extended.

**CAUTION:** To avoid damaging the module, do not attempt to remove the module by pulling the pushrods.

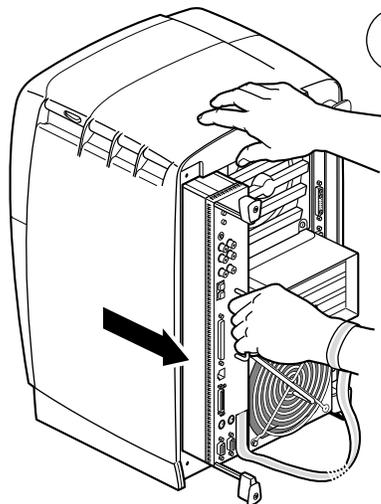


Carefully remove the module as follows:


- Grasp the module handle with your left hand and brace your right hand against the top of the workstation; then pull the module toward you slightly.
- Place your right hand below the module to support it; then pull the module out of the chassis.
- Place the module on an ESD-safe work surface with the CPU and DIMMs facing up.

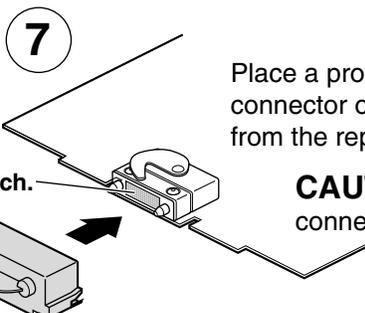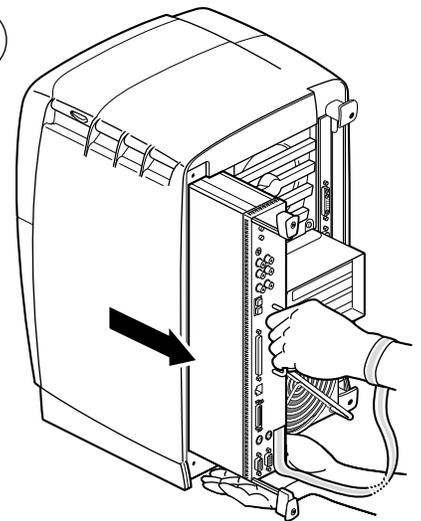

**CAUTION:** Do not touch the compression connectors directly; they are extremely delicate.

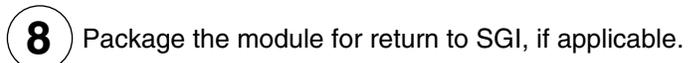


## INSTALLATION

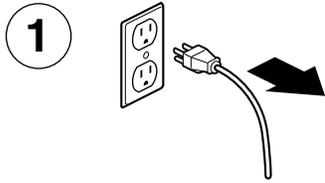

Ensure that the workstation power cord is unplugged from the electrical socket.

**CAUTION:** Inserting the module into a workstation that is connected to an electrical socket will damage the workstation.


**2** Connect the grounding strap to the system module and secure the other end snugly around your wrist.

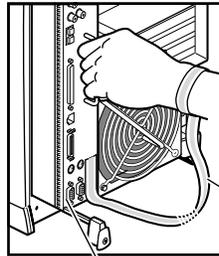

System module



Grounding strap

**3** Remove the protective caps from the compression connectors.

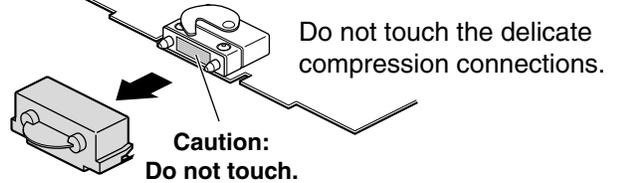

Do not touch the delicate compression connections.


**Caution:**  
Do not touch.

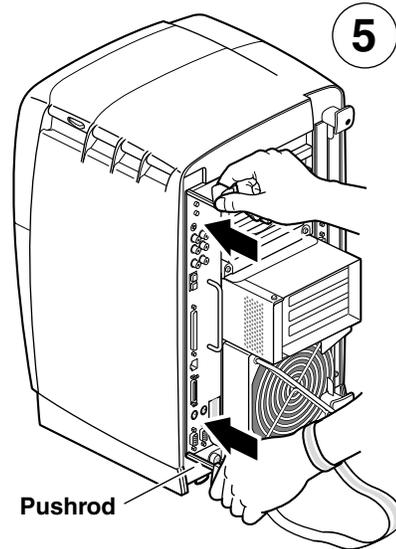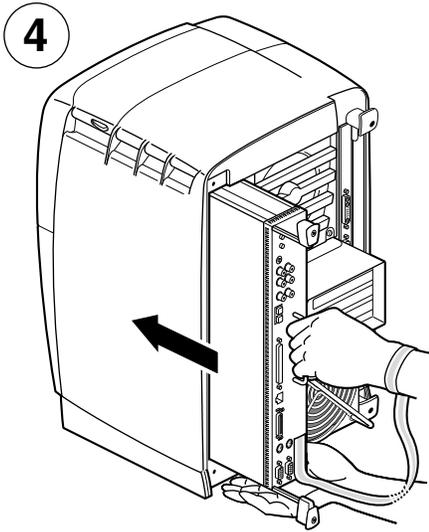


Pushrod

While you support the module with one hand and grasp the handle with the other, slide the system module into the workstation. Push the module completely into the chassis, flush with the I/O panel.


Push the 2 pushrods simultaneously to lock the module to the workstation. When the system module is fully seated and locked to the workstation, the pushrods are completely recessed and the system module is flush with the chassis.

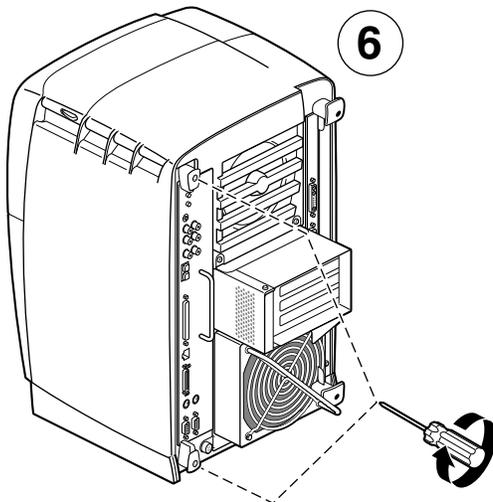

Tighten the 2 captive screws that secure the pushrods.

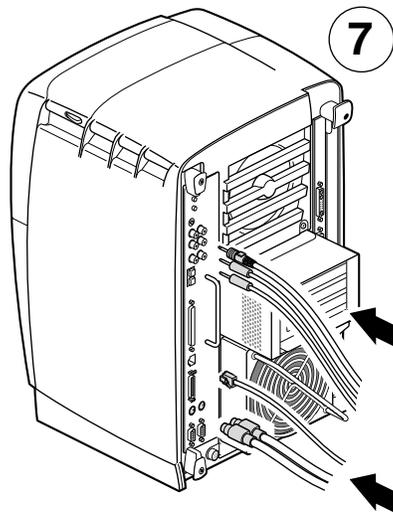

Replace any cables that you removed.

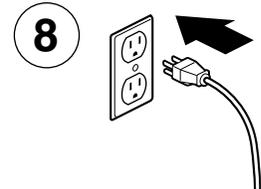

Restore power to the workstation.

**NOTE:** If the system fails to boot, reset the system module.