

## **System Controller Software 1.21 Update Guide**

System Controller Software 1.21 provides a system control platform for field service and system maintenance applications. It includes the following features:

- Advanced diagnostic support
- Maintenance of the SGI® Origin® 3000 and SGI® Altix® 3000, 4700, and 450 system serial number
- Maintenance of the SGI Origin 3000 and SGI Altix 3000 and 4700 router port enable
- Console for the L1 and L2 system controllers

You can download the System Controller Software 1.21 package from <http://support.sgi.com/apps/> or order it on CD-ROM (P/N 812-1138-022). Contact your SGI account representative if you need assistance obtaining the software package.

This guide contains the following sections:

- “Components of Release Packages” (page 2)
- “Related Information” (page 5)
- “Installing from a Downloaded Package” (page 6)
- “Installing from the CD-ROM” (page 9)

- “Reinstalling on a Silicon Graphics® 230 Visual Workstation” (page 12)
- “Installing on a Silicon Graphics 230 Visual Workstation Preinstalled with Red Hat Linux” (page 14)
- “New Features and Changes” (page 15)

## Components of Release Packages

This section lists the components of each of the following release packages:

- System Controller Software 1.21 (for an L3 controller)
- System Controller Software 1.21 (for the IRIX operating system)
- System Controller Software 1.21 (for SGIconsole™)
- System Controller Software 1.21 (for the SGI ProPack™ for Linux operating system)
- System Controller Software 1.21 (for the SGI ProPack™ for Linux x86\_64 operating system)

System Controller Software 1.21 (for an L3 controller) has the following components:

- Kernel software for the Red Hat 6.2 kernel
- L1 USB module for the Red Hat 7.1 kernel
- L1 USB module for the Red Hat 7.2 kernel

- L1 USB module for the Red Hat 7.3 kernel
- L1 USB module for the Red Hat 8.0 kernel
- L1 USB module for the Red Hat 9.0 kernel
- L1 USB module for the SGI ProPack 1.5 for the Linux kernel
- L1 USB module for the SGI XFS 1.0 kernel
- L1 USB module for the SGI XFS 1.1 kernel (supports Red Hat 7.1 and 7.2 [2.4.9-31] kernel versions)
- L1 USB module for the SGI XFS 1.1 kernel (supports Red Hat 2.4.18 vanilla kernel versions)
- L1 USB module for the SGI XFS 1.0.1 kernel
- L1 USB module for the SGI XFS 1.0.2 kernel
- L3 driver
- L1/L2 firmware utilities
- Installation tool
- Silicon Graphics 230 Red Hat 6.2 reinstallation script
- L1 USB build script
- L1 USB source files (supports Linux 2.4.x and 2.6.x kernels)

System Controller Software 1.21 (for the IRIX operating system) has the following component:

- L1/L2 firmware utilities

System Controller Software 1.21 (for SGIconsole) has the following components:

- L3 driver
- L1/L2 firmware utilities
- SGIconsole l2.loose module
- Installation tool

System Controller Software 1.21 (for the SGI ProPack for Linux operating system) has the following components:

- L1/L2 firmware utilities
- Installation tool

System Controller Software 1.21 (for the SGI ProPack for Linux x86\_64 operating system) has the following components:

- L1/L2 firmware utilities
- L3 driver
- Installation tool

## Related Information

For more information about the SGI L1, L2, and L3 controllers, see the following guides:

- *SGI Origin 3000 L3 Controller Installation Guide* (007-4363-00x)
- *SGI Origin 3000 Series Owner's Guide* (007-4240-00x)
- *SGI L1 and L2 Controller Software User's Guide* (007-3938-00x)

## Installing from a Downloaded Package

This section explains how to install the System Controller Software 1.21 software from a downloaded package onto the following platforms: an L3 controller, the IRIX operating system, an SGIconsole system, the SGI ProPack for Linux operating system, and the SGI ProPack for Linux x86\_64 operating system.

To install the System Controller Software 1.21 components on an L3 controller, follow these steps:

1. Log on to the L3 controller as root.
2. Enter the following commands:  
# **cd /dir**  
    where *dir* is the directory in which you downloaded the software  
# **chmod 755 install**  
# **chmod 755 sgi230\_13\_reinstall**  
# **./install**
3. To reboot the system, enter the following command:  
# **reboot**
4. After the system reboots, remove the files that you downloaded.

To install the System Controller Software 1.21 components for the IRIX operating system, follow these steps:

1. Log on to the IRIX system as root.
2. Enter the following commands:  
# **cd /dir**  
where *dir* is the directory in which you downloaded the software  
# **tar -xf 6.5.12-30\_field\_diags\_sysco.tar**  
# **inst -f field\_diags\_sysco**  
# **tar -xf patchSG0007149.tar**  
# **inst -f patchSG0007149**
3. After the installation is complete, remove the files that you downloaded.

To install the System Controller Software 1.21 components on an SGIconsole system, follow these steps:

1. Log on to the SGIconsole system as root.
2. Enter the following commands:  
# **cd /dir**  
where *dir* is the directory in which you downloaded the software  
# **chmod 755 install**  
# **./install**
3. After the installation is complete, remove the files that you downloaded.

To install the System Controller Software 1.21 components for the SGI ProPack for Linux operating system, follow these steps:

1. Log on to the SGI ProPack system as root.
2. Enter the following commands:  
# **cd /dir**  
where *dir* is the directory in which you downloaded the software  
# **chmod 755 install**  
# **./install**
3. After the installation is complete, remove the files that you downloaded.

To install the System Controller Software 1.21 components for the SGI ProPack for Linux x86\_64 operating system, follow these steps:

1. Log on to the SGI ProPack x86\_64 system as root.
2. Enter the following commands:  
# **cd /dir**  
where *dir* is the directory in which you downloaded the software  
# **chmod 755 install**  
# **./install**
3. After the installation is complete, remove the files that you downloaded.



## Installing from the CD-ROM

This section explains how to install the System Controller Software 1.21 software from the CD-ROM onto the following platforms: an L3 controller, the IRIX operating system, an SGIconsole system, the SGI ProPack for Linux operating system, and the SGI ProPack for Linux x86\_64 operating system.

To install the System Controller Software 1.21 components on an L3 controller, follow these steps:

1. Log on to the L3 controller as root.
2. Insert the System Controller Software 1.21 CD-ROM into the CD-ROM drive.
3. Enter the following commands:  

```
# cd /mnt/cdrom/RPMS/i386  
# ./install
```
4. Remove the CD-ROM from the CD-ROM drive.
5. To reboot the system, enter the following command:  

```
# reboot
```

To install the System Controller Software 1.21 components for the IRIX operating system, follow these steps:

1. Log on to the IRIX system as root.
2. Insert the System Controller Software 1.21 CD-ROM into the CD-ROM drive.
3. Enter the following commands:  
# **cd /mnt/cdrom/dist**  
# **inst -f field\_diags\_sysco**  
# **inst -f patchSG0007149**
4. Remove the CD-ROM from the CD-ROM drive.

To install the System Controller Software 1.21 components on an SGIconsole system, follow these steps:

1. Log on to the SGIconsole system as root.
2. Insert the System Controller Software 1.21 CD-ROM into the CD-ROM drive.
3. Enter the following commands:  
# **cd /mnt/cdrom/RPMS/i386**  
# **./install**
4. Remove the CD-ROM from the CD-ROM drive.

To install the System Controller Software 1.21 components for the SGI ProPack for Linux operating system, follow these steps:

1. Log on to the SGI ProPack system as root.
2. Insert the System Controller Software 1.21 CD-ROM into the CD-ROM drive.
3. Enter the following commands:  
# **cd /mnt/cdrom/RPMS/ia64**  
# **./install**
4. Remove the CD-ROM from the CD-ROM drive.

To install the System Controller Software 1.21 components for the SGI ProPack for Linux x86\_64 operating system, follow these steps:

1. Log on to the SGI ProPack x86\_64 system as root.
2. Insert the System Controller Software 1.21 CD-ROM into the CD-ROM drive.
3. Enter the following commands:  
# **cd /mnt/cdrom/RPMS/x86\_64**  
# **./install**
4. Remove the CD-ROM from the CD-ROM drive.

## Reinstalling on a Silicon Graphics® 230 Visual Workstation

If you install System Controller Software 1.21 for an L3 controller on a Silicon Graphics 230 visual workstation and later need to restore the workstation to the original factory configuration and reload the system controller software, you must complete the following steps:

1. Complete the steps in the “Installing the Auxiliary Linux Software” section of the *SGI Origin 3000 L3 Controller Installation Guide*. (The section starts on page 18 of that document.)
2. To run the `sgi230_13_reinstall` script, enter the following command:

```
# ./sgi230_13_reinstall
```

The `sgi230_13_reinstall` script automatically installs additional Red Hat Linux components that are normally installed at the factory. The script takes several minutes to run; it lists each package it installs and displays a progress bar as it installs each package.

3. Perform one of the following actions:
  - To install System Controller Software 1.21 from a downloaded package, complete steps 2 through 4 of the procedure for installing the software for an L3 controller in the “Installing from a Downloaded Package” section on page 6 of this document.
  - To install System Controller Software 1.21 from the CD-ROM, complete steps 2 through 5 of the procedure for installing the software for an L3 controller in the “Installing from the CD-ROM” section on page 9 of this document.

## Installing on a Silicon Graphics 230 Visual Workstation Preinstalled with Red Hat Linux

To install System Controller Software 1.21 for an L3 controller on a Silicon Graphics 230 visual workstation preinstalled with the Red Hat Linux 6.2 operating system, you must load additional software packages before you can load the L3 controller software. Follow these steps:

1. Complete the steps in the “Installing the Auxiliary Linux Software” section of the *SGI Origin 3000 L3 Controller Installation Guide*. (This section ends on page 18 of that document.)
2. Perform one of the following actions:
  - To install System Controller Software 1.21 from a downloaded package, complete steps 2 through 4 of the procedure for installing the software for an L3 controller in the “Installing from a Downloaded Package” section on page 6 of this document.
  - To install System Controller Software 1.21 from the CD-ROM, complete steps 2 through 5 of the procedure for installing the software for an L3 controller in the “Installing from the CD-ROM” section on page 9 of this document.

**Note:** To use the Network Configurator GUI to configure the network after the workstation has booted the operating system, see the “Configuring Network Settings” section on page 12 of the *SGI Origin 3000 L3 Controller Installation*

*Guide.* To use the User Configurator GUI to configure user accounts, see the “Configuring the Account” section on page 15. To connect the Silicon Graphics 230 visual workstation to an SGI Origin 3000 series server, see pages 21-27 of the *SGI Origin 3000 L3 Controller Installation Guide* for the sections that are appropriate for your system configuration.

## New Features and Changes

This section lists the new features and changes included in this release for firmware and software in the following sections:

- “L1 Firmware” (page 17)
- “L2 Firmware” (page 19)
- “L3 Software” (page 20)
- “x86\_64 L3 Software” (page 21)
- “IA64 Software” (page 22)
- “x86\_64 Software” (page 23)

**Caution:** Before you install the L1 or L2 firmware, follow the instructions in service bulletin GIB 200215. If you currently have L1 firmware version 1.4.1 or older installed, upgrade to the L1 firmware in System Controller Software 1.21

release. This release enables the router port security and system serial number security features. If the system is not configured properly, these features may prevent R bricks from powering on or booting.



## L1 Firmware

This section lists the changes in the L1 firmware.

### Other Changes

- The following changes relate to PV 947627:
  - Added code to check for excessive bad blocks (>50) and, if found, run the `nandfix` utility to reset.
  - Added code to accept the name of the file system to fix, as a command line argument.
- Included an updated `/etc/inittab` file, with a web server process removed (PV 977799).
- Added a ? selection to show modes producing console output (PV 960327).
- Upgraded IOC4 IO9 firmware to 0.83 (was 0.79A) (PV 978599).
- Upgraded IOC4 IO10 firmware to 0.83 (was 0.79) (PV 978599).
- Upgraded SGI ImageSync™ 3 firmware to revision 2.0.

### Bugs Addressed

947627 FLASHDRV\_PROGRAM\_FAILED while flashing the Tollhouse L1  
960327 console input lost a on kexec/kdump boot on multiple nodes systems

977799 webservice on system controller not utilized - remove  
978599 Update IOC4 Bitstream from 79A/79 to 83...

## **L2 Firmware**

This section lists the changes in the L2 firmware.

### **Added Features**

- Disabled the `ftp` and `telnet` port 5000 access, if the L2 password is set (PVs 945698 and 945760).

### **Bugs Addressed**

- 945698 L2 has anonymous ftp server with root privileges
- 945760 S/W L2 allows unauthenticated root shell via port 5000 even if l2 password

## **L3 Software**

This section lists the changes in the L3 software.

### **Changes from Previous Release**

- No changes from the previous release.

## **x86\_64 L3 Software**

This section lists the changes in the x86\_64 L3 software.

### **Changes from Previous Release**

All changes for `snxsc_firmware-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `snxsc_firmware-1.58.x-1.x86_64.rpm`.

All changes for `snxsc_l3-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `snxsc_l3-1.58.x-1.x86_64.rpm`.

All changes for `snxscan-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `snxscan-1.58.x-1.x86_64.rpm`.

All changes for `sgidiag-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `sgidiag-1.58.x-1.x86_64.rpm`.

All changes for `sscope-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `sscope-1.58.x-1.x86_64.rpm`.

All changes for `sysco_tools-1.58.x-1.i386.rpm` also apply to the x86\_64 software package `sysco_tools-1.58.x-1.x86_64.rpm`.

## **IA64 Software**

This section lists the changes in the IA64 software.

### **Changes from Previous Release**

- All changes for `snxsc_firmware-1.58.x-1.i386.rpm` also apply to the IA64 software package `snxsc_firmware-1.58.x-1.ia64.rpm`.

## **x86\_64 Software**

This section lists the changes in the x86\_64 software.

### Changes from Previous Release

All changes for snxsc\_firmware-1.58.x-1.i386.rpm also apply to the x86\_64 software package snxsc\_firmware-1.58.x-1.x86\_64.rpm.

All changes for snxsc\_l3-1.58.x-1.i386.rpm also apply to the x86\_64 software package snxsc\_l3-1.58.x-1.x86\_64.rpm.x86\_64 Software

This section lists the changes in the x86\_64 software.

### Changes from Previous Release

All changes for snxsc\_firmware-1.58.x-1.i386.rpm also apply to the x86\_64 software package snxsc\_firmware-1.58.x-1.x86\_64.rpm.

All changes for snxsc\_l3-1.58.x-1.i386.rpm also apply to the x86\_64 software package snxsc\_l3-1.58.x-1.x86\_64.rpm.x86\_64 Software

This section lists the changes in the x86\_64 software.

### Changes from Previous Release

All changes for snxsc\_firmware-1.58.x-1.i386.rpm also apply to the x86\_64 software package snxsc\_firmware-1.58.x-1.x86\_64.rpm.

All changes for `snxsc_l3-1.58.x-1.i386.rpm` also apply to the `x86_64` software package `snxsc_l3-1.58.x-1.x86_64.rpm`. `x86_64` Software  
This section lists the changes in the `x86_64` software.

### Changes from Previous Release

- All changes for `snxsc_firmware-1.58.x-1.i386.rpm` also apply to the `x86_64` software package `snxsc_firmware-1.58.x-1.x86_64.rpm`.
- All changes for `snxsc_l3-1.58.x-1.i386.rpm` also apply to the `x86_64` software package `snxsc_l3-1.58.x-1.x86_64.rpm`.

© 2008 SGI. All rights reserved; provided portions may be copyright in third parties, as indicated elsewhere herein. No permission is granted to copy, distribute, or create derivative works from the contents of this electronic documentation in any manner, in whole or in part, without the prior written permission of SGI. SGI, the SGI logo, Altix, IRIX, Origin, and XFS are registered trademarks, and Prism, NUMALink, SGIconsole, SGI ImageSync, and SGI ProPack are trademarks, of SGI, in the United States and/or other countries worldwide. Linux is a registered trademark of Linus Torvalds in several countries. SUSE is a registered trademark of SUSE LINUX AG. Red Hat is a registered trademark of Red Hat, Inc. All other trademarks mentioned herein are the property of their respective owners.