



SGI InfiniteStorage 4000 Series and 5000 Series System Upgrade Guide

(ISSM 10.83)

The information in this document supports the SGI InfiniteStorage 4000 series and 5000 series storage systems (ISSM 10.83). Refer to the table below to match your specific SGI InfiniteStorage product with the model numbers used in this document.

SGI Model #	Netapp Model	Netapp Compliance Model	Notes
TP9600H	6091	1500	
TP9700F	6091	1500	
IS4500F	6091	1500	
TP9600F	3994 and 3992	4600	
IS4000H	3994	4600	
IS350	3992	4600	
IS220	1932 1333 DE1300	3600	
IS4100	4900	4600	FC HICs only
IS-DMODULE16-Z	FC4600	4600	
IS-DMODULE60	DE6900	6900	
IS4600	7091	1550	4Gb FC, 8Gb FC, HICs only
IS5012	2600	3650	FC and SAS HICs only
IS5024	2600	5350	
IS5060	2600	6600	
IS-DMODULE12 & IS2212 (JBOD)	DE1600	3650	
IS-DMODULE24 & IS2224 (JBOD)	DE5600	5350	
IS-DMODULE60-SAS	DE6600	6600	
IS5512	5400	3650	
IS5524	5400	5350	
IS5560	5400	6600	

Copyright information

Copyright © 1994–2012 NetApp, Inc. All rights reserved. Printed in the U.S.A.

No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987)

Trademark information

NetApp, the NetApp logo, Network Appliance, the Network Appliance logo, Akorri, ApplianceWatch, ASUP, AutoSupport, BalancePoint, BalancePoint Predictor, Bycast, Campaign Express, ComplianceClock, Cryptainer, CryptoShred, Data ONTAP, DataFabric, DataFort, Decru, Decru DataFort, DenseStak, Engenio, Engenio logo, E-Stack, FAServer, FastStak, FilerView, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexSuite, FlexVol, FPolicy, GetSuccessful, gFiler, Go further, faster, Imagine Virtually Anything, Lifetime Key Management, LockVault, Manage ONTAP, MetroCluster, MultiStore, NearStore, NetCache, NOW (NetApp on the Web), Onaro, OnCommand, ONTAPI, OpenKey, PerformanceStak, RAID-DP, ReplicatorX, SANscreen, SANshare, SANtricity, SecureAdmin, SecureShare, Select, Service Builder, Shadow Tape, Simplicity, Simulate ONTAP, SnapCopy, SnapDirector, SnapDrive, SnapFilter, SnapLock, SnapManager, SnapMigrator, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapSuite, SnapValidator, SnapVault, StorageGRID, StoreVault, the StoreVault logo, SyncMirror, Tech OnTap, The evolution of storage, Topio, vFiler, VFM, Virtual File Manager, VPolicy, WAFL, Web Filer, and XBB are trademarks or registered trademarks of NetApp, Inc. in the United States, other countries, or both.

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. A complete and current list of other IBM trademarks is available on the Web at www.ibm.com/legal/copytrade.shtml.

Apple is a registered trademark and QuickTime is a trademark of Apple, Inc. in the U.S.A. and/or other countries. Microsoft is a registered trademark and Windows Media is a trademark of Microsoft Corporation in the U.S.A. and/or other countries. RealAudio, RealNetworks, RealPlayer, RealSystem, RealText, and RealVideo are registered trademarks and RealMedia, RealProxy, and SureStream are trademarks of RealNetworks, Inc. in the U.S.A. and/or other countries.

All other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such.

NetApp, Inc. is a licensee of the CompactFlash and CF Logo trademarks.

NetApp, Inc. NetCache is certified RealSystem compatible.

Table of Contents

Chapter 1	Preparing to Upgrade Your Storage Management Software 1
	Upgrading the Storage Management Software and the Controller Firmware . . . 1
	Storage Management Software Packages 3
	Installation Options 5
	Checking the Current Version of the Storage Management Software 5
	Supported Controller Trays and Controller-Drive Trays 6
	Maximum Number of Drives and Volumes for Controller-Drive Trays and Controller Trays 6
	Supported Storage Array Configurations 8
Chapter 2	Upgrading Trays in the Storage Array 9
	Upgrading Options for Supported Trays 10
	Upgrading Cache Memory 10
	Upgrading Cache Memory for the CE7900 Controller Tray 11
	Upgrading Cache Memory for the E2600 Controller-Drive Trays 21
	Upgrading Cache Memory for the E5400 Controller-Drive Trays 39
	Upgrading Host Adapters 59
	Upgrading a Host Interface Card in the CE7900 Controller Tray 59
	Upgrading a Host Interface Card in the E2600 Controller-Drive Trays . . . 67
	Upgrading a Host Interface Card in the E5400 Controller-Drive Trays . . . 83
Chapter 3	Using the Firmware Upgrade Utility 103
Chapter 4	Upgrade Instructions for the HP-UX OS 105
	System Requirements for HP-UX 105
	Installing the Storage Management Software on the HP-UX OS 106
	Checking the Installation on the HP-UX OS 108
	Uninstalling the Storage Management Software on the HP-UX OS 109

Chapter 5	Upgrade Instructions for the Solaris OS 111
	Supported Components for Solaris. 111
	Installing the Storage Management Software on the Solaris OS 113
	Checking the Installation on the Solaris OS. 115
	Uninstalling the Storage Management Software on the Solaris OS. 116
 Chapter 6	 Upgrade Instructions for the Linux OS. 117
	System Requirements for Linux. 117
	System Requirements for Linux with InfiniBand 120
	Installing the Storage Management Software on the Linux OS. 121
	Checking the Installation on the Linux OS 124
	Uninstalling Storage Management Software on the Linux OS 125
 Chapter 7	 Upgrade Instructions for the Windows OS. 127
	System Requirements for Windows Server 2003 and XP 127
	System Requirements for Windows Server 2008, Hyper-V and Vista 130
	Installing the Storage Management Software on the Windows OS 132
	Checking the Installation on the Windows OS. 136
	Uninstalling Storage Management Software on the Windows OS 136
 Chapter 8	 Upgrade Instructions for Asymmetric Logical Unit Access (ALUA) with the VMware OS 139
	System Requirements for VMware 139
	Installing ALUA Support for VMware Versions ESX4.1U2, ESXi5.0, and Prior Versions 142
	Installing ALUA Support for VMware Versions ESX4.1U3, ESXi5.0U1, and Subsequent Versions 143
 Appendix A	 Boot Device Installation. 145
	Boot Device Support 145
	Installing the Boot Device 145
	Storage Array and Host Preparation 146

Preparing the Storage Array as a Boot Device	146
Preparing the Host.	151
Completing the Installation Process	151

Preparing to Upgrade Your Storage Management Software **1**

The following table shows the supported upgrade paths for controller trays and controller-drive trays for storage management software version 10.83 and controller firmware version 7.83.

Table 1 Supported Trays and Software Upgrade Paths

Tray Name	Installed Storage Management Software Version	Installed Controller Firmware Version
Controller-drive trays		
E2612, E2624, E2660	10.70 or later	7.70 or later
CE4900	10.60 or later	7.60 or later
E5412, E5424, E5460	10.80 or later	7.80 or later
Controller tray		
CE7900, CE7922	10.30 or later	7.30 or later

NOTE If you are upgrading from controller firmware version 7.75.26, you must first upgrade to 7.75.28, and then upgrade to 7.83. All other supported upgrades are performed directly without an intermediate step.

Upgrading the Storage Management Software and the Controller Firmware

NOTE To make sure that your failover driver is compatible with the new hardware, firmware, and software, refer to the *SANtricity™ ES Storage Manager Failover Drivers User Guide for Version 10.83*. For the RHEL 6.1 and SLES operating systems, if you are setting up a configuration to support Asynchronous Logical Unit Access (ALUA), additional steps are required to install software patches.

These steps are required for a successful upgrade to storage management software version 10.83 and controller firmware version 7.83. Perform the steps in order. You might find it helpful to print the Upgrade Checklist and refer to it as you work through the upgrade steps.

1. Make sure that the controller trays and the controller-drive trays in your storage array are compatible with the software level and the firmware level to which you are upgrading.
2. Check that the host bus adapters (HBAs), switches, driver versions, firmware levels, and specific hardware restrictions are supported.

NOTE Install all storage area network (SAN) hardware before you work with the storage management software.

3. Start the existing storage management software with the procedure for your operating system.
4. Check that the storage array has Optimal status.
5. Save and print the storage array profile from the current Array Management Window of the storage management software for each storage array.
 - a. In the Array Management Window, select **Monitor >> Report >> Storage Array Profile**.
 - b. Click **Save As**
 - c. Select the **All sections** radio button.
 - d. Type a file name in the **File name** text box.
 - e. Click **Save**.

The storage array profile is used for this information:

- Configuration information that you might provide to your Technical Support representative
 - The current NVSRAM and controller firmware versions
 - The current environmental services module (ESM) firmware version
6. Locate the cache and processor memory size (MB) in the storage array profile, and record the listed size for later verification.
 7. Locate the host interface in the storage array profile, and record the number listed in the Preferred ID area for each Fibre Channel interface for later verification.
 8. Make sure that your storage array has the minimum system requirements for your operating system.

See the system requirements topics for each operating system in this document.

9. Make sure that your failover driver is compatible with the new hardware, firmware, and software. Refer to the topics under *SANtricity ES Storage Manager Failover Drivers User Guide for Version 10.83*.

NOTE Read the "dependence" section in the SANtricity ES Storage Manager `readme.txt` file.

10. Make sure that the current version of storage management software can be upgraded to SANtricity ES Storage Manager Version 10.83.
11. Install storage management software version 10.83 for your operating system (OS). Use the procedure for your OS to install the storage management software.
12. Make sure that the installation was successful. Use the procedure for your operating system to start the storage management software.

13. Check that the storage array has an Optimal status. If one or more managed devices has a Needs Attention status, contact your Technical Support representative.
14. If you determined from the storage array profile that the NVSRAM firmware, the controller firmware, or the ESM firmware is not the current version, download the compatible firmware.

NOTE With the I/O Shipping feature, a storage array can use asymmetric logical unit access (ALUA). ALUA enables a controller tray or a controller-drive tray to service I/O requests through either controller in a duplex configuration. To use the I/O Shipping feature with VMware, you must take additional steps to update the VMware configuration. See [Upgrade Instructions for Asymmetric Logical Unit Access \(ALUA\) with the VMware OS](#) on page 139 for instructions.

Storage Management Software Packages

All storage management software packages are generally installed in the same directory on the same system, whether the system is the host or a separate storage management station.

Table 2 Storage Management Software Packages

Software Package	Description and Usage
SMclient	This package contains the graphical user interface for managing the storage array. This package also contains an optional monitor service that sends alerts when a critical problem exists with the storage array.
SMagent	The storage management software that is installed only on a host machine to enable in-band management. ¹
SMruntime	The operating system (OS) -specific storage management software that installs the appropriate Java runtime environment (JRE), which allows Java files to be displayed.

Software Package	Description and Usage
Redundant Dual Active Controller (RDAC)/Multi-Path Proxy (MPP)	A multi-path failover driver, proprietary to NetApp, that is installed on Linux hosts. This software package manages the I/O paths into the controllers in the storage array. If a problem exists on the path or a failure occurs on one of the controllers, the driver automatically reroutes the request from the hosts to the other controller in the storage array. For information about other supported failover drivers for your operating system, refer to the topics under <i>SANtricity ES Storage Manager Failover Drivers User Guide for Version 10.83</i> .
SMutil	This package contains utilities that let the operating system recognize the volumes that you create in the storage array and to view the OS-specific device names for each volume.
SMprovider	The storage management software interface to the Volume Shadow Copy Service (VSS) and Virtual Disk Service (VDS) technologies (these technologies are included with Microsoft's .NET framework).
SMinstaller	A package that installs the InstallAnywhere utility.

¹ In-band management is a method for managing a storage array in which the controllers are managed from a storage management station attached to a host that is running host-agent software. The host-agent software receives communication from the storage management client software and passes it to the storage array controllers along the input/output (I/O) path. The controllers also use the I/O connections to send event information back to the storage management station through the host.

NOTE The Microsoft Virtual Disk Service (VDS) and Volume Shadow Copy Service (VSS) providers are a part of the SANtricity ES Storage Manager package for the Windows Server 2003 OS and the Windows Server 2008 OS.

Installation Options

Install only the packages that are required for the type of installation you are performing.

Table 3 Installation Options and Related Software Packages

Installation Option	SMruntime	SMclient	SMutil	SMagent	RDAC Failover Driver ¹
Typical installation	X	X	X	X	
Storage management station ²	X	X			
Host station	X		X		X
A host station acting as a storage management station (out-of-band management) ³	X	X	X		X
Host with in-band management	X		X	X	X

¹ The RDAC/MPP failover driver is proprietary to NetApp and is available for download to the Linux OS.

² The storage management station is a computer that runs storage management software that adds, monitors, and manages the storage arrays on a network.

³ Out-of-band management is a method to manage a storage array over the network through an Ethernet connection, from a storage management station that need not have an I/O path connection to the controllers.

Checking the Current Version of the Storage Management Software

The operating system-specific commands are listed below. To check the level of the current storage management software, type the command that corresponds to your operating system, and press **Enter**. The *<package name>* placeholder refers to the name of the software package that is installed.

- In the Linux operating system, type this command, and press **Enter**:

```
rpm -qi <package name>
```

- In the Windows operating system, perform these tasks.
 - a. Select **Start >> Run**.
 - b. Type `reged32`, and press **Enter**.
The **Register Editor** window appears.
 - c. Select **HKEY_LOCAL_MACHINE >> SOFTWARE >> STORAGE**.
The host software versions are listed under the storage directory.

Supported Controller Trays and Controller-Drive Trays

This section describes the supported controller trays and controller-drive trays.

Table 4 Controller Trays and Controller-Drive Trays

Term	Description
Controller tray	A unit that contains one or two controllers, a battery (optional), and redundant cooling fans and power supplies. Controller trays do not contain environmental services modules (ESMs).
Controller-drive tray	A unit that contains up to 16 drives, redundant cooling fans and power supplies, and (depending on the model) one or two controllers. Controller-drive trays do not contain ESMs.

Maximum Number of Drives and Volumes for Controller-Drive Trays and Controller Trays

Table 1 shows the controller-drive trays, the controller trays, and the maximum number of drives and the total number of volumes that are supported by each controller tray or controller-drive tray. The total numbers include drives or volumes that are contained in the controller-drive tray and in additional attached drive trays.

Table 5 Supported Trays and the Maximum Number of Drives and Volumes

Tray Name	Controller Type	Maximum Drives per Storage Array	Maximum Volumes per Storage Array ¹
Controller-drive trays			
E2600		192	512
CE4900	1280 or 2560	112	1024
E5400	4096 or 8192	384	2048
Controller trays			
CE7900, CE7922		480	

¹ Snapshot (Legacy) repository volumes and Synchronous Mirroring repository volumes are included in the number of volumes supported.

² Additional drive trays are not supported.

The following table lists controller-drive trays and controller trays can co-exist in a storage network with hardware running storage management software version 10.83 and controller firmware version 7.83. They cannot, however, be upgraded to storage management software version 10.83 and controller firmware version 7.83.

Table 6 Co-existing Trays and the Maximum Number of Drives and Volumes

Tray Name	Controller Type	Maximum Drives per Storage Array	Maximum Volumes per Storage Array ¹
Controller-drive trays			
SHV2520	2880 (dual)	14 ²	1024
SHV2600	2882	112	1024
SAT2700	2820-SATA	14 ²	512
SAT2800	2822-SATA	112	512
CDE3994	3992 or 3994	112	1024
Controller trays			
FC1250	4884	224	2048
FC1275	5884	224	2048
CE6998	6091	224	2048

¹ Snapshot (Legacy) repository volumes and Synchronous Mirroring repository volumes are included in the number of volumes supported.

² Additional drive trays are not supported.

Supported Storage Array Configurations

The drive tray is a unit that contains up to 16 drives, redundant cooling fans and power supplies, and one or two ESMs. Drive trays do not contain controllers.

Table 7 Supported Drive Trays

	FC4600	DE6600	Mix of CE4900 and DE6600	DE1600/DE5600	DE6600	Mix of DE1600/DE5600 and DE6600
CE7900 CE7922	Maximum of 7 drive trays per loop pair, 28 drive trays total (total drives=480 maximum)	Maximum of 2 drive trays per loop pair, 8 drive trays total (total drives=480 maximum)	6xDE6600+1xFC4600 or 1xDE6600+21xFC4600 (total drives=448 maximum)	Not supported	Not supported	Not supported
CE4900	Maximum of 6 drive trays	Not supported	Not supported	Not supported	Not supported	Not supported
E2600	Not supported	Not supported	Not supported	total drives=192 maximum	Maximum of 2 drive trays (total drives=180 maximum)	Not supported
E5400	Not supported	Not supported	Not supported	Any mixture with total drives=384 maximum and total drive trays=16 maximum		

Keep these guidelines in mind before you upgrade trays in your storage array:

- Always back up your data to an external source before starting an upgrade procedure.
- Keep in mind that requirements for SFPs and cabling might change when you upgrade a host adapter. Refer to the *Hardware Cabling Guide* for a complete description of various cabling options.

You can choose from these upgrade options:

- Upgrade cache memory
- Upgrade Host Adapters

ATTENTION Possible loss of data access – Before you start any upgrade procedure, back up your data to an external source.

Upgrading Options for Supported Trays

Table 1 Upgrading Options for Supported Trays

Tray Name	Tray Upgrading Option
Upgrade Host Adapters	
CE7900	<ul style="list-style-type: none"> ■ Upgrade 4-Gb/s FC to 8-Gb/s FC. ■ Upgrade 1-Gb/s iSCSI to 10-Gb/s iSCSI. ■ Install a second HIC (4-Gb/s FC, 8-Gb/s FC, 1-Gb/s iSCSI, 10-Gb/s iSCSI).
E5400	Install a HIC in addition to the base host ports (8-Gb/s FC or 40-Gb/s InfiniBand).
E2600	Install a HIC in addition to the base host ports (8-Gb/s FC, 1-Gb/s iSCSI, 10-Gb/s iSCSI, 6-Gb/s SAS).
Upgrade Cache Memory	
CE7900	<ul style="list-style-type: none"> ■ Populate empty DIMM slots to increase capacity to 8-GB and add an additional cache backup memory device. ■ Replace 1-GB DIMMS with 2-GB DIMMs to increase capacity to 16 GB and add an additional cache backup memory device. ■ Replace 2-GB DIMMS with 4-GB DIMMs to increase capacity to 16 GB and add an additional cache backup memory device.
E5400	<ul style="list-style-type: none"> ■ Replace 2-GB DIMMS with 4-GB DIMMs to increase capacity to 12GB and add an additional cache backup memory device. ■ Replace 4-GB DIMMS with 8-GB DIMMs to increase capacity to 24 GB and add an additional cache backup memory device.
E2600	<ul style="list-style-type: none"> ■ Replace 1-GB DIMMS with 2-GB DIMMs to increase capacity to 2 GB. ■ Replace 2-GB DIMMS with 4-GB DIMMs to increase capacity to 4 GB.

Upgrading Cache Memory

There are several options for upgrading cache memory in a controller-drive tray or a controller tray.

- Each controller canister in the CE7900 controller tray has two sockets for cache memory DIMMs and a cache backup memory device. Use this procedure to add a cache memory DIMM, if the space is available, or upgrade an existing cache memory DIMM and, if necessary, add a cache backup memory device.

- Each controller canister in the E5400 controller-drive tray has two sockets for cache memory DIMMs and a cache backup memory device. Use this procedure to upgrade existing cache memory DIMMs and, if necessary, add a cache backup memory device.
- Each controller canister in the E2600 controller-drive tray has one socket for cache memory DIMMs and a cache backup memory device. Use this procedure to upgrade existing cache memory DIMM and, if necessary, add a cache backup memory device.

Upgrading Cache Memory for the CE7900 Controller Tray

Before you start this procedure, gather antistatic protection, cache memory DIMMs, and, if necessary, cache backup memory devices. Perform each of the following tasks in order.

1. Remove the controller canisters from the controller-drive tray or a controller tray.
2. Upgrade the cache memory DIMM.
3. Upgrade the Cache Backup Memory Device.
4. Reinstall the controller canisters from the controller-drive tray or the controller tray.

ATTENTION Data loss or corruption might result if the steps in this upgrade procedure are not followed correctly – You must upgrade the cache memory DIMMs and the cache backup memory devices in both controller canisters in the controller tray or the controller-drive tray. Otherwise, you receive event messages indicating that the controllers have mismatched and incompatible configurations. This event might cause the controllers to lock down.

NOTE Do not perform this upgrade procedure with the power turned on. This procedure requires that you first set controller A offline to make sure that all of the data, which is currently in cache on both controller canisters, is successfully written to disk before the upgrade. Second, you will turn off the power to both controller canisters as described in the steps for "[Removing a Controller Canister](#)" on page 11.

Removing a Controller Canister

NOTE Before you remove the controller canisters, make sure that you set controller A to Offline, as described in the following steps, to ensure that all the data currently in the cache for controller A is successfully written to disk prior to the upgrade. This step also ensures that the data currently in the cache for controller B is successfully written to disk before you turn off the power to both controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your updated storage array by using one of these methods:

SANtricity ES From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.

Command line interface Enter the following command on the command line:
`save storageArray supportData`
This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade.
3. Put on antistatic protection.
4. Label each host interface cable, drive interface cable, and Ethernet cable that is attached to each controller canister so that you can reconnect the cables correctly after the controller canisters are reinstalled.

ATTENTION Potential degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Stop all host I/O operations.


6. Use one of the following options to place controller A offline.

SANtricity ES	From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select Advanced >> Place >> Offline .
Command line interface	Enter the following command on the command line: smCLI <DNS-network-name-or-IP-address> -c "set controller [a] availability=offline"; In this command, <DNS-network-name-or-IP-address> is the applicable address.

ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.

7. Turn off the Power switch on both of the controller canisters.
8. Wait until all LED and seven-segment display activity on the rear of the controller tray has stopped, and then unplug the power cords from both controller canisters, and set the power cords aside.
9. Disconnect all of the following cables from both controller canisters.
 - Host interface cables
 - Drive interface cables
 - Ethernet cables
10. Remove both controller canisters from the controller tray as shown in the following figures.
 - a. Unlock and rotate the release handles out to release the controller canister.
 - b. Using the release handles and your hands, pull the controller canister out of the controller tray.
 - c. Set the controller canister on a flat, static-free surface with the thumbscrews that secure the top cover to the canister facing up.


Figure 1 Removing a Controller

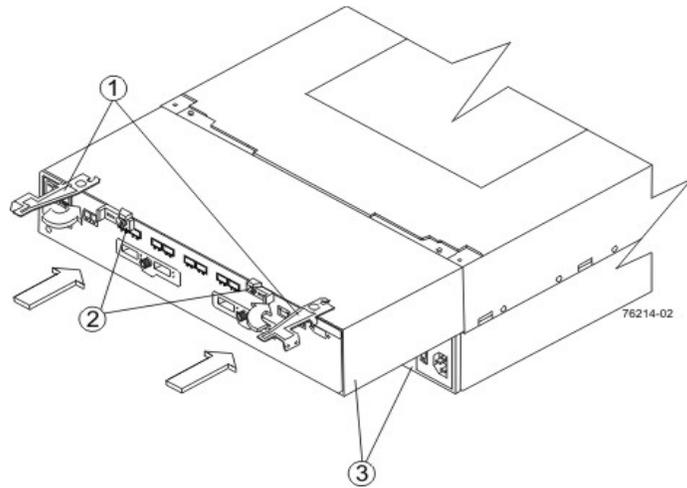

1. Release Handles
2. Locking Mechanisms
3. Controller Canister

11. Remove the cover on both controller canisters.
 - a. Loosen the thumbscrews that secure the cover to the controller canister.
 - b. Lift the cover off of the controller canister as shown in the following figures.

Figure 2 Controller Top Cover, Internal Parts, and Faceplate

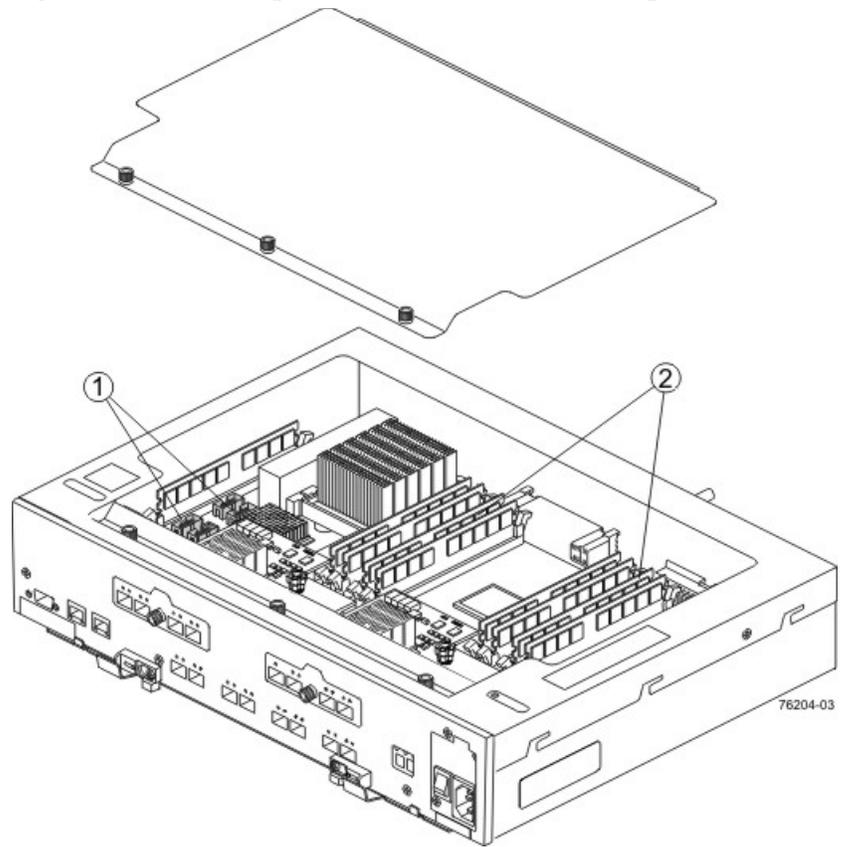

1. Cache Backup Memory Device Slot Locations
2. Cache Memory DIMM Slot Locations

12. Go to "[Upgrading a Cache Memory DIMM in the CE7900 Controller Canister](#)" on page 15.

Upgrading a Cache Memory DIMM in the CE7900 Controller Canister


If you are upgrading the cache memory DIMMs in one controller canister, you must increase the capacity of the cache memory DIMMs in the other controller canister in the CE7900 controller tray. You also must increase the capacity of the cache backup memory devices in both controller canisters.

Make sure that the size of the cache memory DIMMs that you are upgrading in both controller canisters are of equal capacity. The following table lists the cache memory DIMM configurations.

Total Cache Memory per Controller (GB)	Number of Cache Memory DIMMs per Controller	Capacity of Each Cache Memory DIMM (GB)	Cache DIMM Slots Populated
4	4	1	2, 4, 5, 7
8	8	1	All
16	8	2	All
32	8	4	All

1. Locate the cache memory DIMMs that you want to upgrade, or identify the location to add the new cache memory DIMMs. Refer to the following figure.

Figure 3 Cache Memory DIMM Locations in the CE7900 Controller Tray

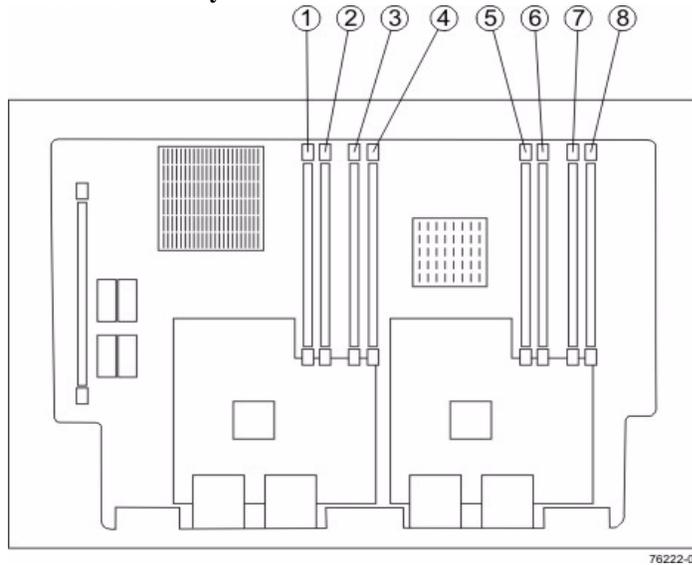


76222-02

1. Cache Memory DIMM Slot 1
2. Cache Memory DIMM Slot 2
3. Cache Memory DIMM Slot 3
4. Cache Memory DIMM Slot 4
5. Cache Memory DIMM Slot 5
6. Cache Memory DIMM Slot 6
7. Cache Memory DIMM Slot 7
8. Cache Memory DIMM Slot 8

2. Choose one of the following options:
 - **To upgrade cache memory DIMM** – Go to step 3.
 - **To add an additional cache memory DIMM** – Go to step 4.
3. Remove the cache memory DIMMs from their slots on the controller card. Refer to the following figure.
 - a. Pull back on each ejector handle to disengage the cache memory DIMM pins from the slot on the controller card.
 - b. Lift the cache memory DIMM out of the slot.
 - c. Place the cache memory DIMM that you removed on a flat, static-free surface.

Figure 4 Removing a Cache Memory DIMM

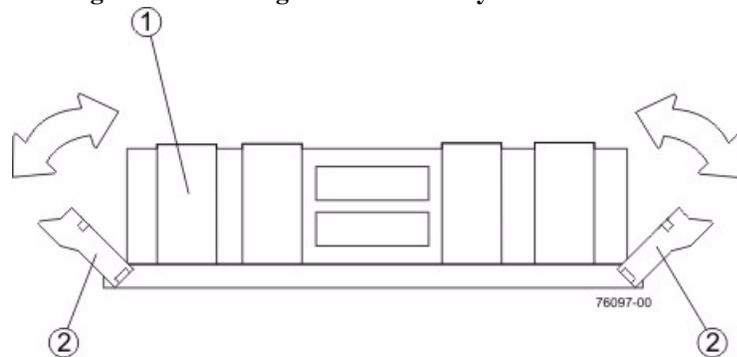

1. Cache Memory DIMM
2. Ejector Handles

4. Install the new cache memory DIMM.
 - a. Align the new cache memory DIMM in the slot.
 - b. Gently push down on the cache memory DIMM to seat the pins into the slot.

The ejector handles rise up as the cache memory DIMM is inserted into the slot. When these handles are in the vertical position, the cache memory DIMM is fully engaged and is locked in place.
5. Repeat this procedure for the other controller canister.
6. Go to "[Upgrading a Cache Backup Memory Device in the CE7900 Controller Canister](#)" on page 17.

Upgrading a Cache Backup Memory Device in the CE7900 Controller Canister


The cache backup memory device provides a backup for the cache memory DIMM. The size of the cache backup memory device must equal the capacity of the cache memory DIMM.

You must increase the size of the cache backup memory device in both controller canisters. The following table lists the cache backup memory device configurations.

Total Cache Backup Memory Device per Controller (GB)	Number of Cache Backup Memory Devices per Controller	Capacity of Each Cache Backup Memory Device (GB)	Cache Backup Memory Device Slots Populated
4	1	4	USB 3
8	2	4	USB 3, USB 4
16	4	4	All
32	4	8	All

1. Locate the cache backup memory device that you want to upgrade, or identify the location to add the new cache backup memory device.

Figure 5 Cache Backup Memory Device Locations in the CE7900 Controller Tray

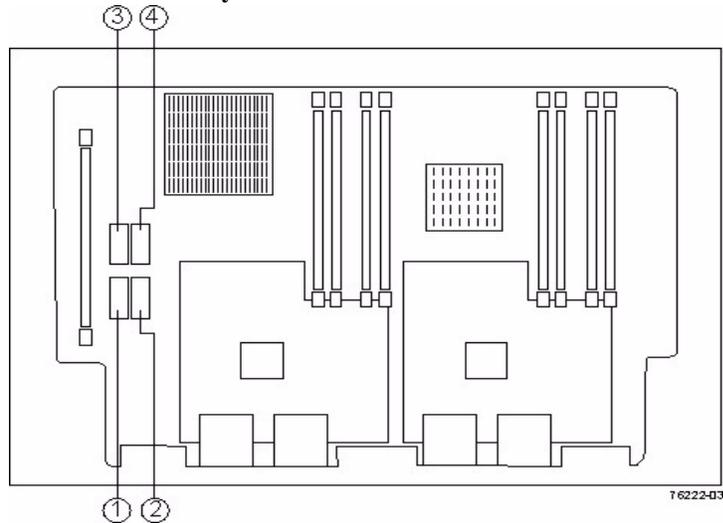

1. Cache Backup Memory Device Slot 1
2. Cache Backup Memory Device Slot 2
3. Cache Backup Memory Device Slot 3
4. Cache Backup Memory Device Slot 4

2. Choose one of the following options:
 - **To upgrade cache backup memory device** – Go to step [3](#).
 - **To install an additional cache backup memory device** – Go to step [4](#).

3. Remove the cache backup memory device from the connector on the controller card.
 - a. Gently pull back on the latch that secures one edge of the cache backup memory device to the connector on the controller card.
 - b. Lift the cache backup memory device from the connector.
4. Install the new cache backup memory device.
 - a. Carefully align the cache backup memory device with the connector on the controller card so that the pins do not bend when you install the cache backup memory device.
 - b. Install the cache backup memory device into an empty socket location by gently pressing down on the cache backup memory device until it snaps into place.
5. Repeat this procedure for the other controller canister.
6. Go to ["Reinstalling the Controller Canister in the CE7900 Controller Tray"](#) on page 19.

Reinstalling the Controller Canister in the CE7900 Controller Tray

1. Reinstall the top covers on both controller canisters, and tighten all of the thumbscrews that secure the top cover.
2. Slide both controller canisters all of the way into the controller tray. Rotate the release handles in to lock each controller canister into place.
3. Reconnect all of the following cables to the appropriate ports on both controller canisters.
 - Ethernet cables
 - Host interface cables
 - Drive interface cables
4. Plug in the power cords to both of the controller canisters.
5. Turn on the Power switches on both of the controller canisters.


Controller B comes up in Write-Through mode. Controller A comes up in an Offline state.

6. Bring controller A online. In the Array Management Window, right-click the controller, and then select **Advanced >> Place >> Online**, or use the following CLI command.

```
set controller [a] availability=online;
```

7. Look at the LEDs on the controller canister to make sure that the controllers are rebooting correctly. Refer to the following figure for the locations of the LEDs.

Figure 6 Controller Service Action LEDs

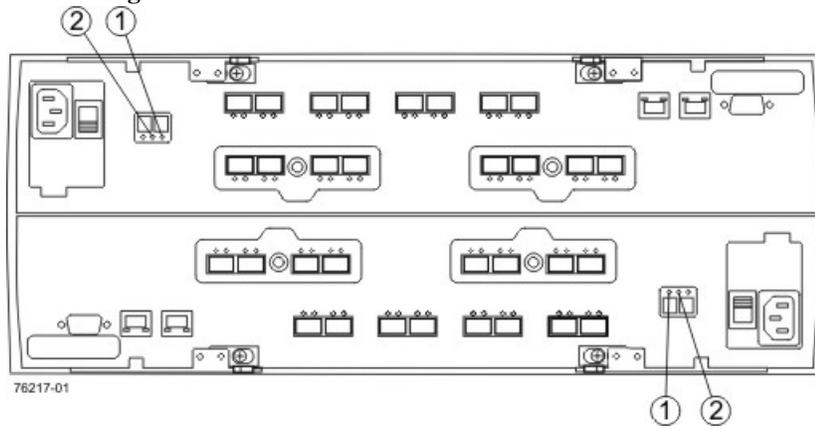

1. Controller Service Action Allowed LED (Blue)
2. Controller Service Action Required LED (Amber)

The LEDs come on and go off intermittently for approximately 60 seconds (possibly longer).

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controller canister with the new battery by using the storage management software.

8. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window indicates an Optimal status** – Go to step 11.
 - **Any of the Controller-Drive tray's Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Go to step 9.
9. Perform one of the following actions (based on the Recovery Guru display):
 - **The Recovery Guru displays the following message: `REC_CACHE_BACKUP_DEVICE_INSUFFICIENT_CAPACITY`** – The controllers might require an additional power cycle to initialize the new cache backup memory devices. Turn off the Power switches on both controller canisters. Wait until all LED and seven-segment display activity has stopped, and then turn on the Power switches to both controller canisters. Go to step 10.
 - **The Recovery Guru does not display an insufficient capacity message** – Check that the controller canister has been installed correctly. Reinstall the controller canister if necessary. Go to step 10.

10. Did this action correct the problem?
 - **Yes** – Go to step 11.
 - **No** – If the problem is not resolved, contact your Technical Support representative.
11. Using the LEDs and the storage management software, check the status of the trays in the storage array.
12. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to step 13.
13. Remove the antistatic protection.
14. Gather support data about your updated storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
---------------	---

Command line interface	Enter the following command on the command line: <pre>save storageArray supportData</pre> <p>This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i>. Running this command can temporarily impact performance on your storage array.</p>
------------------------	--

Upgrading Cache Memory for the E2600 Controller-Drive Trays

Before you start this procedure, gather antistatic protection, cache memory DIMMs, and cache backup memory devices. Perform each of the following tasks in order.

1. Choose the applicable task to remove the controller canisters:
 - Remove the controller canisters from the E2612 or E2624 controller-drive tray.
 - Remove the controller canisters from the E2660 controller-drive tray.

The remaining tasks in this section are the same for the E2612, E2624, and E2660 controller-drive trays.

2. Upgrade the cache memory DIMM.
3. Upgrade the cache backup memory device.
4. Reinstall the controller canisters from the controller-drive tray.

5. Turn on power to the controller-drive tray.

ATTENTION Data loss or corruption might result if the steps in this upgrade procedure are not followed correctly – You must upgrade the cache memory DIMMs and the cache backup memory devices in both controller canisters in the controller tray or the controller-drive tray. Otherwise, you receive event messages indicating that the controllers have mismatched and incompatible configurations. This event might cause the controllers to lock down.

NOTE Do not perform this upgrade procedure with the power turned on. This procedure requires that you first set controller A offline to make sure that all of the data, which is currently in cache on both controller canisters, is successfully written to disk before the upgrade. After the cache memory data is written to disk, you must turn off the power to both controller canisters.

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.


Command line interface Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

**Removing the
Controller Canisters
from the E2612 or
E2624 Controller-Drive
Tray**

Figure 7 Controller A Position in the E2600 Controller-Drive Tray

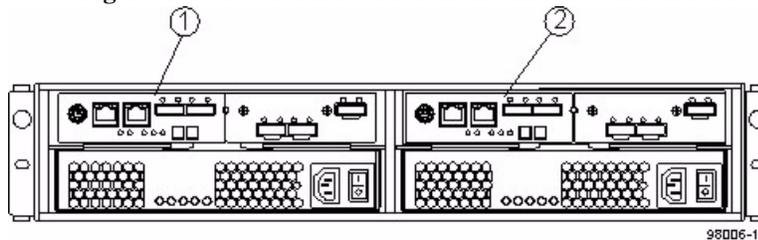

3. Put on antistatic protection.
4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.


ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Stop all host I/O operations.
6. Use one of the following options to place controller A offline.

SANtricity ES	From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select Advanced >> Place >> Offline .
Command line interface	Enter the following command on the command line: smCLI <DNS-network-name-or-IP-address> -c "set controller [a] availability=offline"; In this command, <DNS-network-name-or-IP-address> is the applicable address.


ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.

Figure 8 Controller LEDs

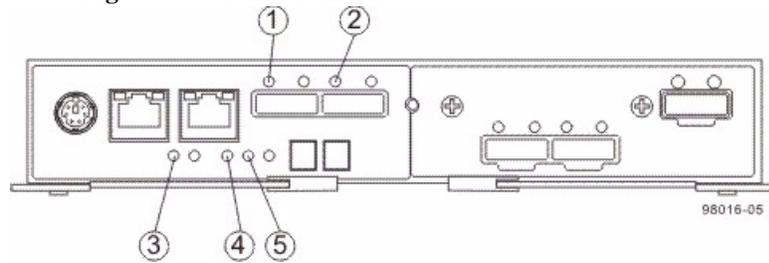

1. Host Link 1 Service Action Required LED (Amber)
 2. Host Link 2 Service Action Required LED (Amber)
 3. Battery Service Action Required LED (Amber)
 4. Controller Service Action Allowed LED (Blue)
 5. Controller Service Action Required LED (Amber)
7. Turn off the Power switch on each of the power-fan canisters, and wait until all LED and seven-segment display activity on the rear of the controller-drive tray has stopped.

Figure 9 Power Supplies in the E2600 Controller-Drive Tray

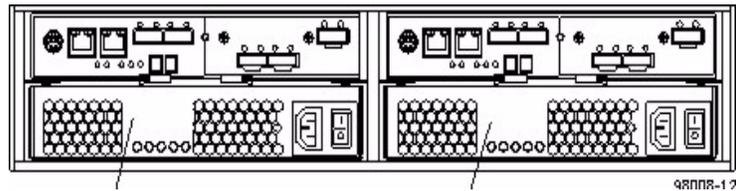


1. Power-Fan Canister for Controller A
 2. Power-Fan Canister for Controller B
8. Disconnect the following cables from both controller canisters.
- Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab.

9. Remove both controller canisters from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.


Figure 10 Removing a Controller Canister

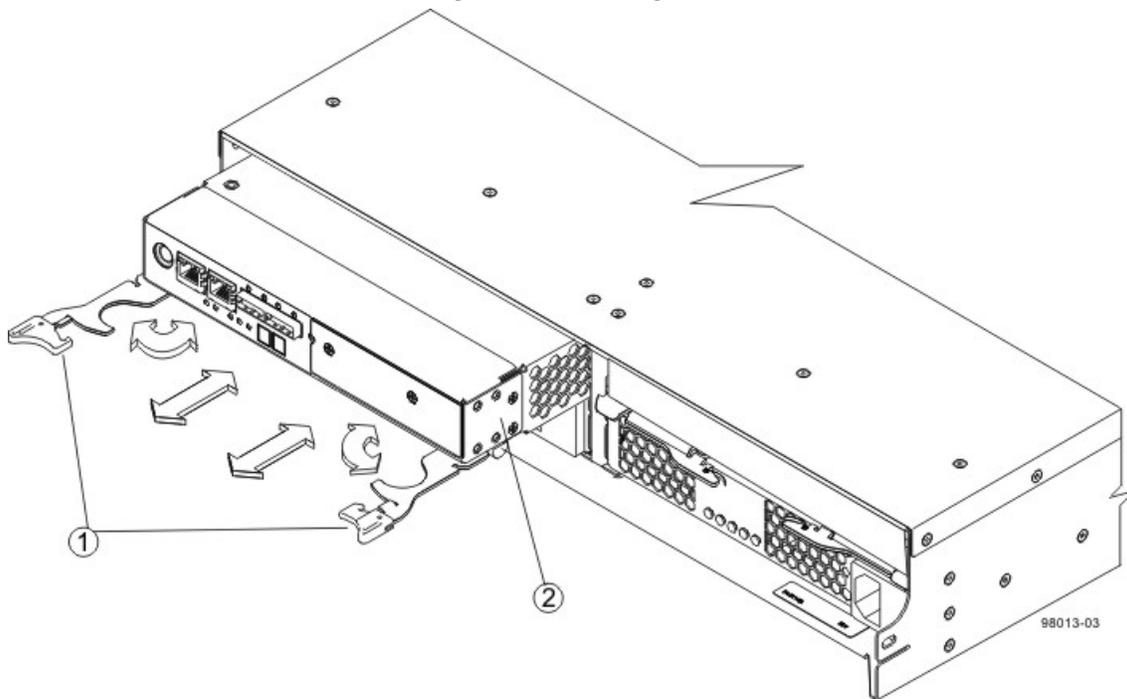

1. Release Levers
2. Controller Canister


10. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 11 Controller Air Blocker

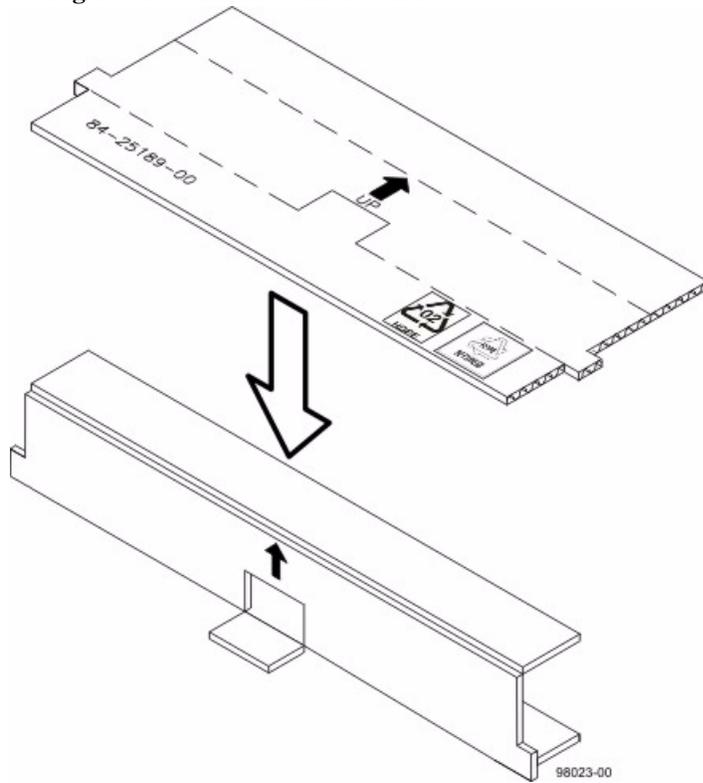


11. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 12 Inserting the Controller Air Blocker into the Open Controller Slot

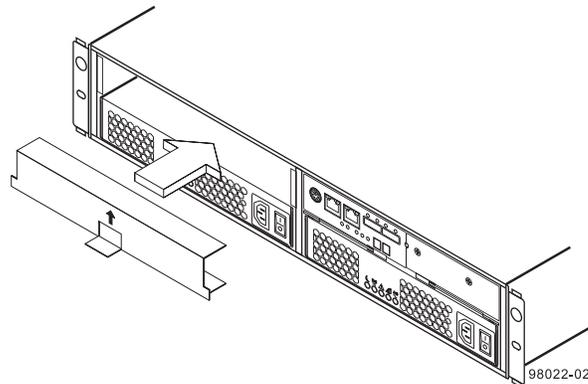

12. On each controller canister, press down on both of the top cover latch buttons, and slide the top covers to the rear as shown in the following figure.

Figure 13 Controller Cover and Internal Parts

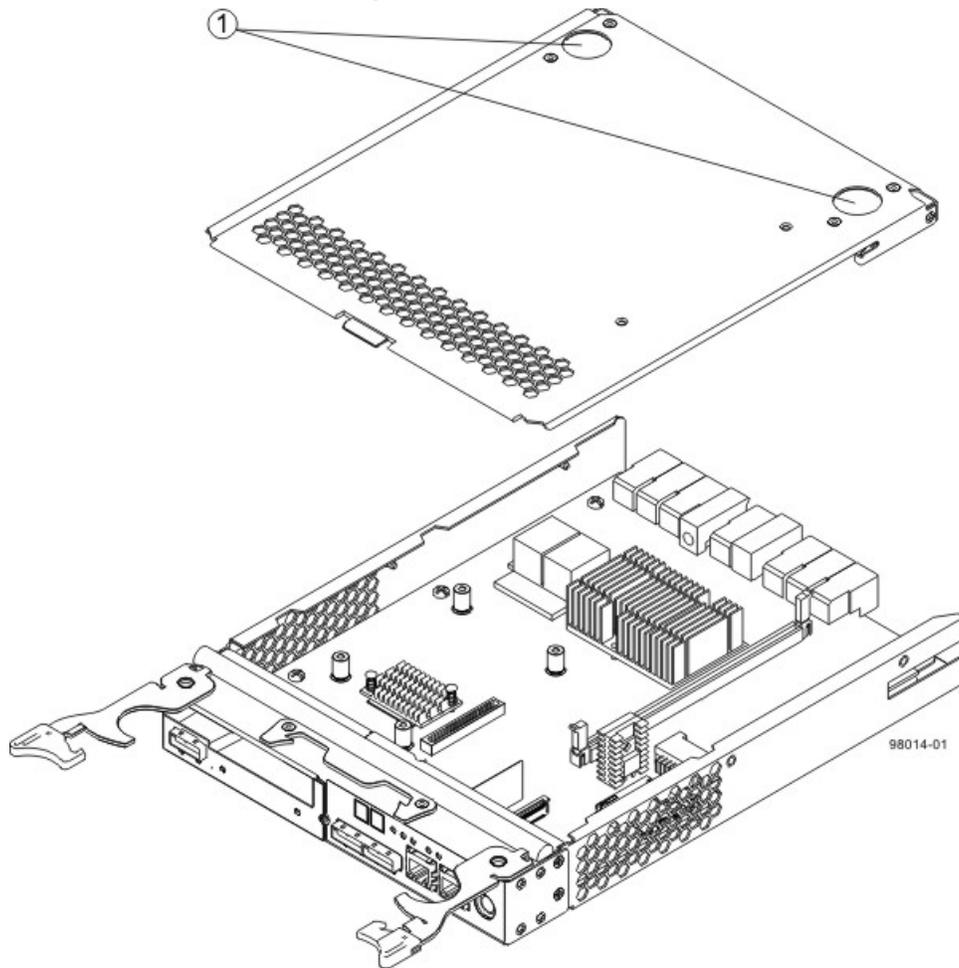

1. Top Cover Latch Buttons

13. Remove the top cover from both controller canisters.
14. Go to "[Upgrading the Cache Memory DIMM in the E2600 Controller-Drive Trays](#)" on page 33.

Removing the Controller Canisters from the E2660 Controller-Drive Tray

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.


1. Gather support data about your storage array by using one of these methods:

SANtricity ES From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.

Command line interface Enter the following command on the command line:
`save storageArray supportData`
This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

Figure 14 Controller A Position in the E2600 Controller-Drive Tray

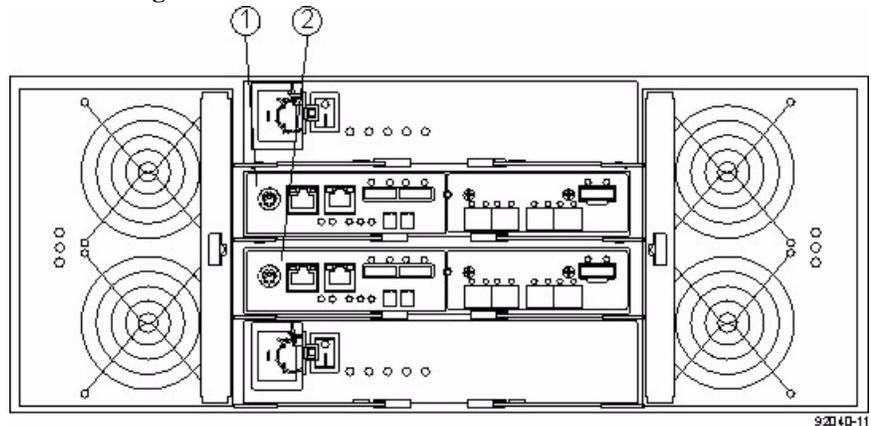

1. Controller A
2. Controller B

3. Put on antistatic protection.
4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.

ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Stop all host I/O operations.
6. Use one of the following options to place controller A offline.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=offline";

In this command,
<DNS-network-name-or-IP-address> is
the applicable address.

ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.


Figure 15 Controller LEDs

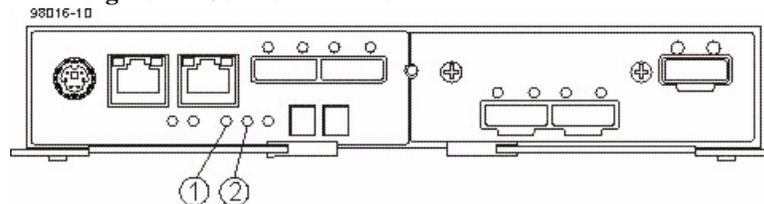

1. Controller Service Action Allowed LED (Blue)
2. Controller Service Action Required LED (Amber)

7. Turn off the Power switch on each of the power-fan canisters, and wait until all LED and seven-segment display activity on the rear of the controller-drive tray has stopped.

Figure 16 Power Supplies in the E2600 Controller-Drive Tray

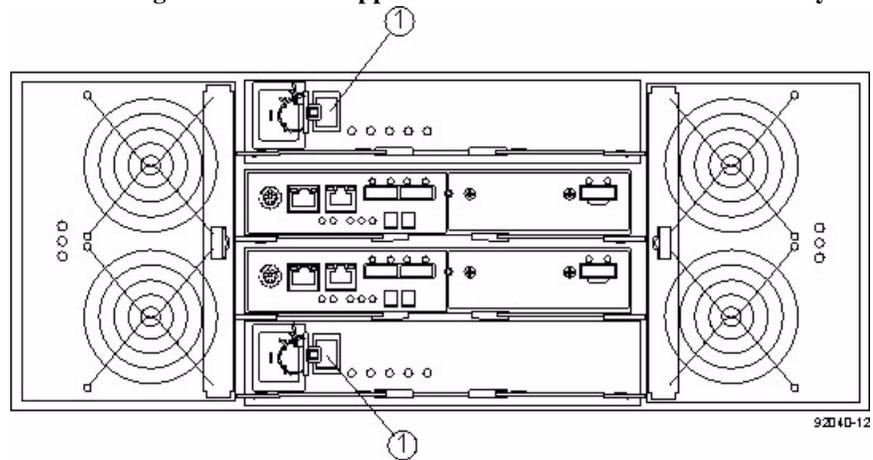

1. Power-Fan Canister for Controller A
2. Power-Fan Canister for Controller B


8. Disconnect the following cables from both controller canisters.
 - Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab.

9. Remove both controller canisters from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.


Figure 17 Removing a Controller Canister

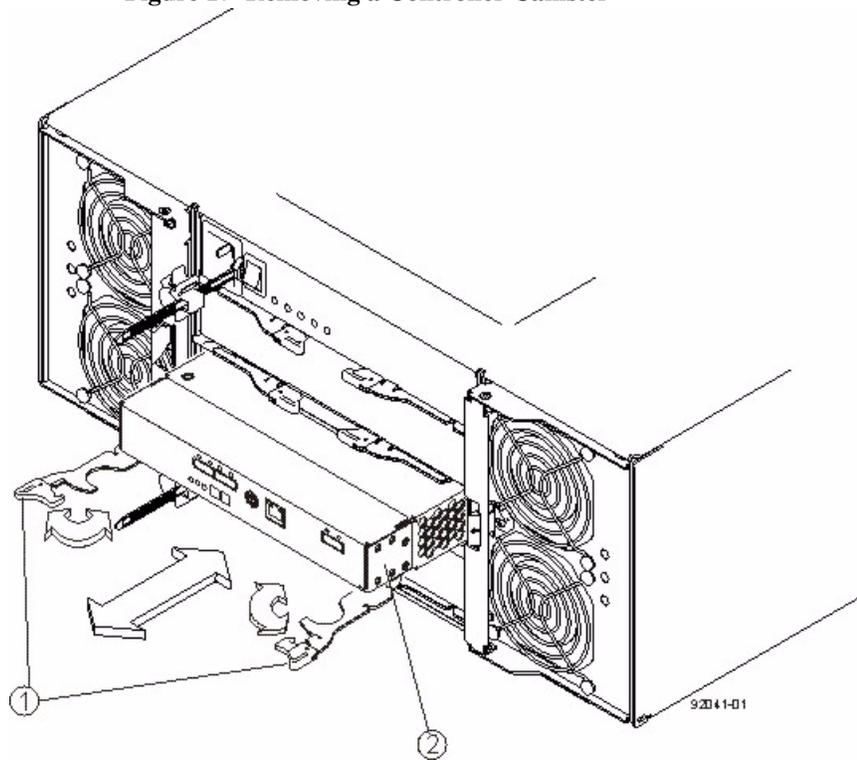

1. Release Levers
2. Controller Canister


10. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 18 Controller Air Blocker

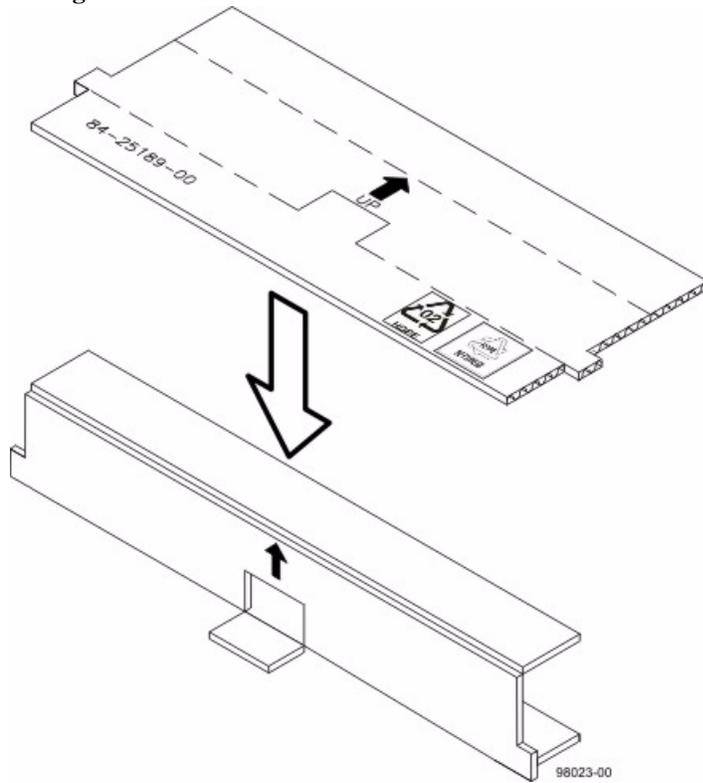


11. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 19 Inserting the Controller Air Blocker into the Open Controller Slot

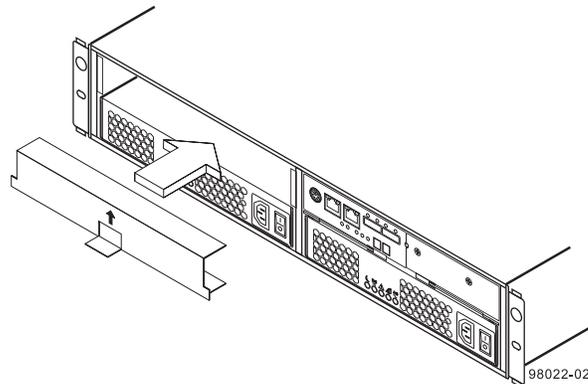

12. On each controller canister, press down on both of the top cover latch buttons, and slide the top covers to the rear as shown in the following figure.

Figure 20 Controller Cover and Internal Parts

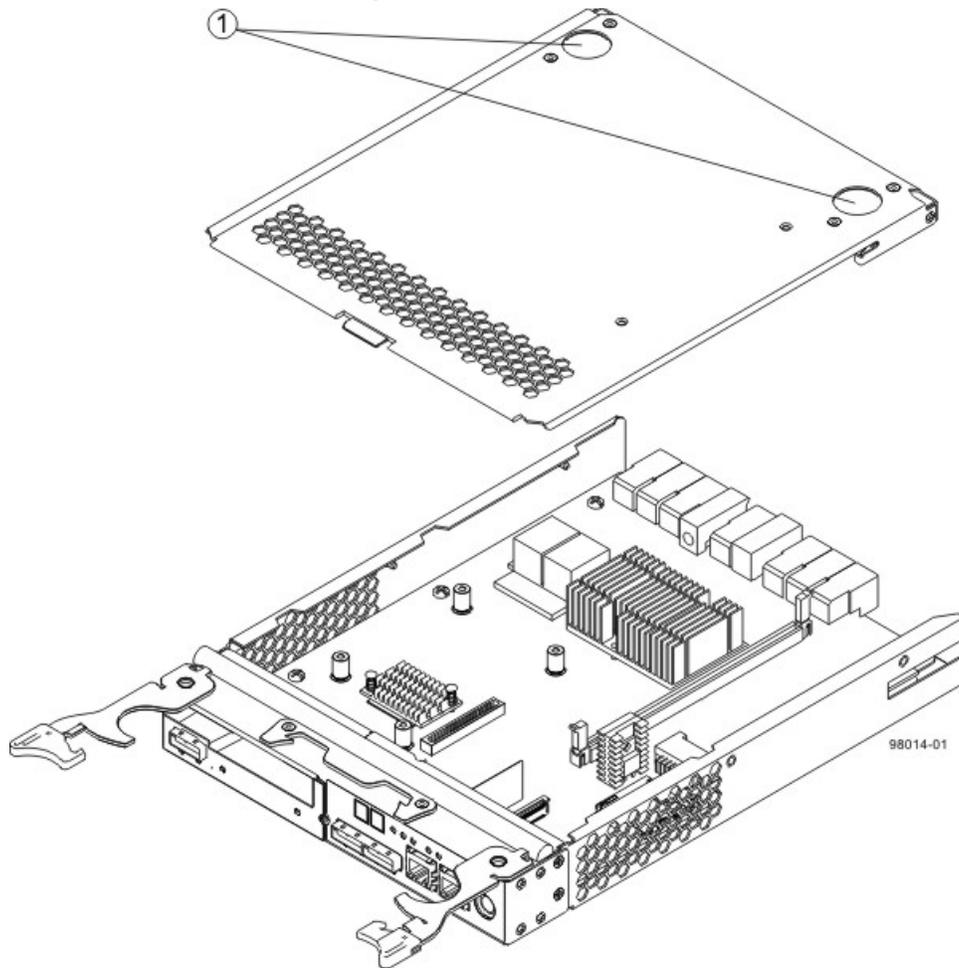

1. Top Cover Latch Buttons


13. Remove the top cover from both controller canisters.
14. Go to "[Upgrading the Cache Memory DIMM in the E2600 Controller-Drive Trays](#)" on page 33.

Upgrading the Cache Memory DIMM in the E2600 Controller-Drive Trays

If you are upgrading the cache memory DIMM in one controller canister, you must increase the capacity of the cache memory DIMM in the other controller canister in the E2600 controller-drive tray. You also must increase the capacity of the cache backup memory devices in both controller canisters.

1. Locate the cache memory DIMM shown in the following figure.


Figure 21 Cache Memory DIMM Slot – Top View

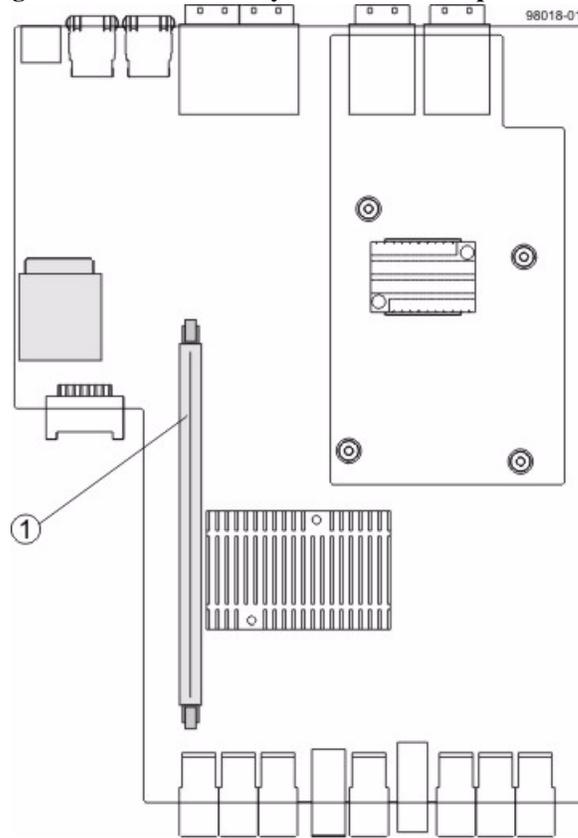

1. Cache Memory DIMM Slot

2. Remove the cache memory DIMM from the slot on the controller card shown in the following figure.
 - a. Pull back on each ejector handle to disengage the cache memory DIMM pins from the slot on the controller card.
 - b. Lift the cache memory DIMM out of the slot.
 - c. Place the cache memory DIMM that you removed on a flat, static-free surface.

Figure 22 Removing a Cache Memory DIMM

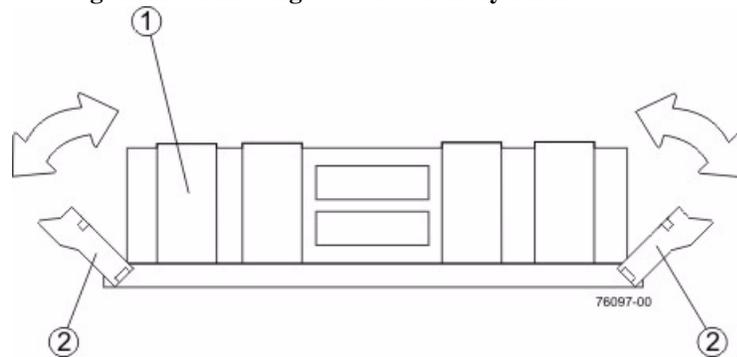

1. Cache Memory DIMM
2. Ejector Handles

3. Install the new cache memory DIMM.
 - a. Align the new cache memory DIMM in the slot.
 - b. Gently push down on the cache memory DIMM to seat the pins into the slot.

The ejector handles rise up as the cache memory DIMM is inserted into the slot. When these ejector handles are in the vertical position, the cache memory DIMM is fully engaged and is locked in place.

4. Repeat this procedure for the other controller canister.
5. Go to "[Upgrading the Cache Backup Memory Device in the E2600 Controller-Drive Trays](#)" on page 36.


Upgrading the Cache Backup Memory Device in the E2600 Controller-Drive Trays

The cache backup memory device provides a backup for the cache memory DIMM. The size of the cache backup memory device might be greater than or equal to the capacity of the cache memory DIMM.

You must increase the size of the cache backup memory device in both controller canisters.

1. Locate the cache backup memory device as shown in the following figure.

Figure 23 Cache Backup Memory Device – Top View

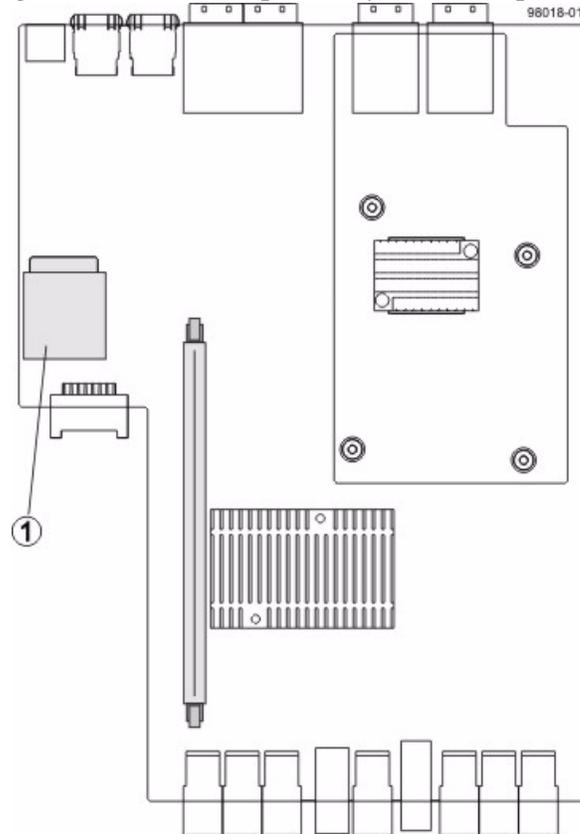

1. Cache Backup Memory Device
2. Remove the cache backup memory device from the slot.
 - a. Release the cache backup memory device by gently pushing the memory farther into the slot. The slot releases the cache backup memory device and pushes the memory out of the slot.
 - b. Carefully pull the cache backup memory device free from the slot.

3. Install the new cache backup memory device.
 - a. Unwrap the new cache backup memory device.
 - b. Install the new cache backup memory device into the empty slot location by pressing the cache backup memory device into the slot until it is fully seated.
4. Repeat this procedure for the other controller canister.
5. Go to "[Reinstalling the Controller Canister in the E2600 Controller-Drive Trays.](#)"

Reinstalling the Controller Canister in the E2600 Controller-Drive Trays

1. Reinstall the top covers on both controller canisters by sliding them forward until the top cover latch buttons click.
2. Slide each controller canister all the way into the controller-drive tray. Rotate the release levers towards the center of the controller canister to lock that component into place.
3. Reconnect the following cables to the appropriate ports on both controller canisters.
 - Ethernet cables
 - Host interface cables
 - Drive interface cables
4. Go to "[Turning On Power to the Controller Canisters in the E2600 Controller-Drive Trays.](#)"

Turning On Power to the Controller Canisters in the E2600 Controller-Drive Trays

1. Turn on the Power switches on both of the power-fan canisters.
Controller B comes up in Write-Through mode. Controller A comes up in an Offline state.
2. Use one of the following options to place controller A online.

SANtricity ES

From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Online**.

Command line interface


Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=online";

In this command,
<DNS-network-name-or-IP-address> is the applicable address.

3. Look at the LEDs on both controller canisters to make sure that the controllers are booting correctly.

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controllers by using the storage management software.

Figure 24 Controller LEDs

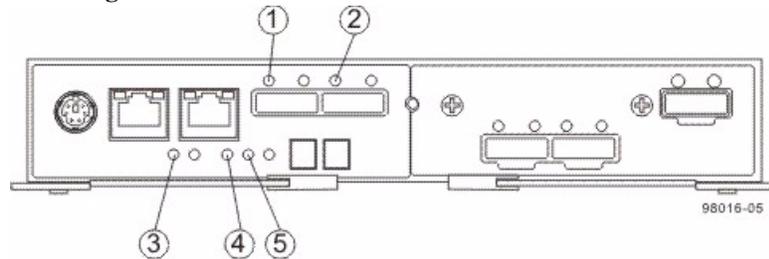

1. Host Link 1 Service Action Required LED (Amber)
2. Host Link 2 Service Action Required LED (Amber)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)

4. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window indicates an Optimal status** – Go to step 11.
 - **Any of the controller-drive tray's Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Go to step 5.
5. Based on the Recovery Guru display, perform one of the following actions:
 - **The Recovery Guru displays the following message: `REC_CACHE_BACKUP_DEVICE_INSUFFICIENT_CAPACITY`** – The controllers might require an additional power cycle to initialize the new cache backup memory devices. Turn off the Power switches on both controller canisters. Wait until all LED and seven-segment display activity has stopped, and then turn on the Power switches on both power-fan canisters. Go to step 10.
 - **The Recovery Guru does not display an insufficient capacity message** – Check that the controller canister has been installed correctly. Reinstall the controller canister if necessary. Go to step 6.
6. Did this action correct the problem?
 - **Yes** – Go to step 11.
 - **No** – If the problem is not resolved, contact your Technical Support representative.

7. Using the LEDs and the storage management software, check the status of the trays in the storage array.
8. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to step 13.
9. Remove the antistatic protection.
10. Gather support data about your updated storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
Command line interface	Enter the following command on the command line: <pre>save storageArray supportData</pre> <p>This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i>. Running this command can temporarily impact performance on your storage array.</p>

Upgrading Cache Memory for the E5400 Controller-Drive Trays

Before you start this procedure, gather antistatic protection, cache memory DIMMs, and cache backup memory devices. Perform each of the following tasks in order.

1. Choose the applicable task to remove the controller canisters:
 - Remove the controller canisters from the E5412 or E5424 controller-drive tray.
 - Remove the controller canisters from the E5460 controller-drive tray.

The remaining tasks in this section are the same for the E5412, E5424, and E5460 controller-drive trays.

2. Upgrade the cache memory DIMM.
3. Upgrade the cache backup memory device.
4. Reinstall the controller canisters from the controller-drive tray.
5. Turn on power to the controller-drive tray.

**Removing the
Controller Canisters
from the E5412 or
E5424 Controller-Drive
Tray**

ATTENTION Data loss or corruption might result if the steps in this upgrade procedure are not followed correctly – You must upgrade the cache memory DIMMs and the cache backup memory devices in both controller canisters in the controller tray or the controller-drive tray. Otherwise, you receive event messages indicating that the controllers have mismatched and incompatible configurations. This event might cause the controllers to lock down.

NOTE Do not perform this upgrade procedure with the power turned on. This procedure requires that you first set controller A offline to make sure that all of the data, which is currently in cache on both controller canisters, is successfully written to disk before the upgrade. After the cache memory data is written to disk, you must turn off the power to both controller canisters.

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.


1. Gather support data about your storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
---------------	---

Command line interface	Enter the following command on the command line: <code>save storageArray supportData</code> This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i> . Running this command can temporarily impact performance on your storage array.
------------------------	---

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

Figure 25 Controller Positions in the E5412 Controller-Drive Tray and the E5424 Controller-Drive Tray

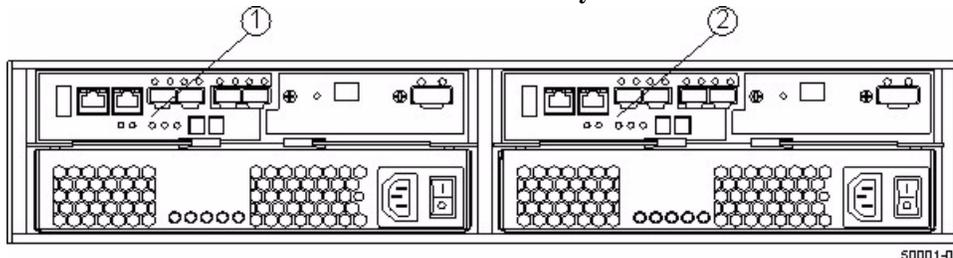

1. Controller A

3. Put on antistatic protection.
4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.

ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Stop all host I/O operations.
6. Use one of the following options to place controller A offline.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
`smCLI`
`<DNS-network-name-or-IP-address> -c`
`"set controller [a]`
`availability=offline";`

In this command,
`<DNS-network-name-or-IP-address>` is the applicable address.


ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.

Figure 26 Controller LEDs

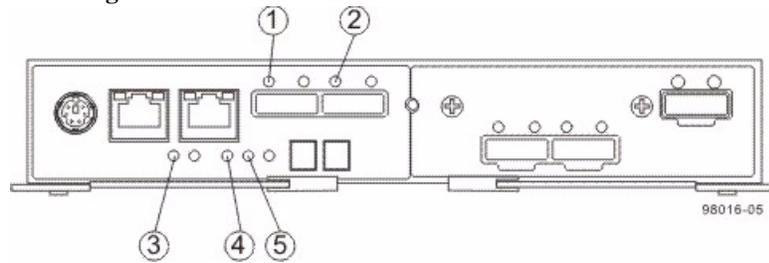

1. Host Link 1 Service Action Required LED (Amber)
 2. Host Link 2 Service Action Required LED (Amber)
 3. Battery Service Action Required LED (Amber)
 4. Controller Service Action Allowed LED (Blue)
 5. Controller Service Action Required LED (Amber)
7. Turn off the Power switch on each of the power-fan canisters, and wait until all LED and seven-segment display activity on the rear of the controller-drive tray has stopped.

Figure 27 Power Switches in the E5412 Controller-Drive Tray or the E5424 Controller-Drive Tray

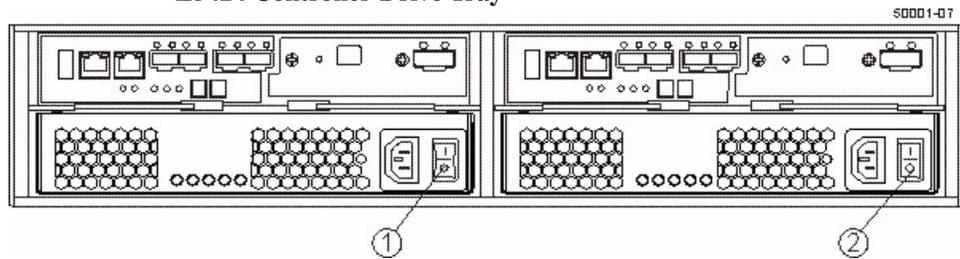


1. Power Switch for Controller A
8. Disconnect the following cables from both controller canisters.
- Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab.

9. Remove both controller canisters from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.


Figure 28 Removing a Controller Canister

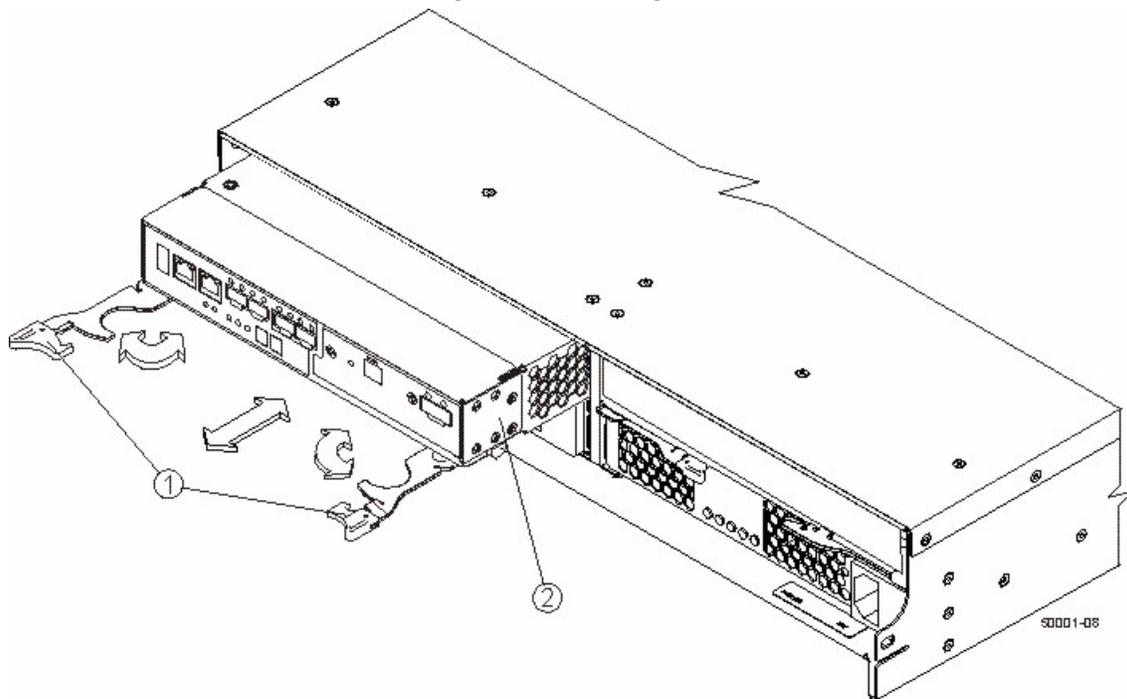

1. Release Levers
2. Controller Canister


10. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 29 Controller Air Blocker

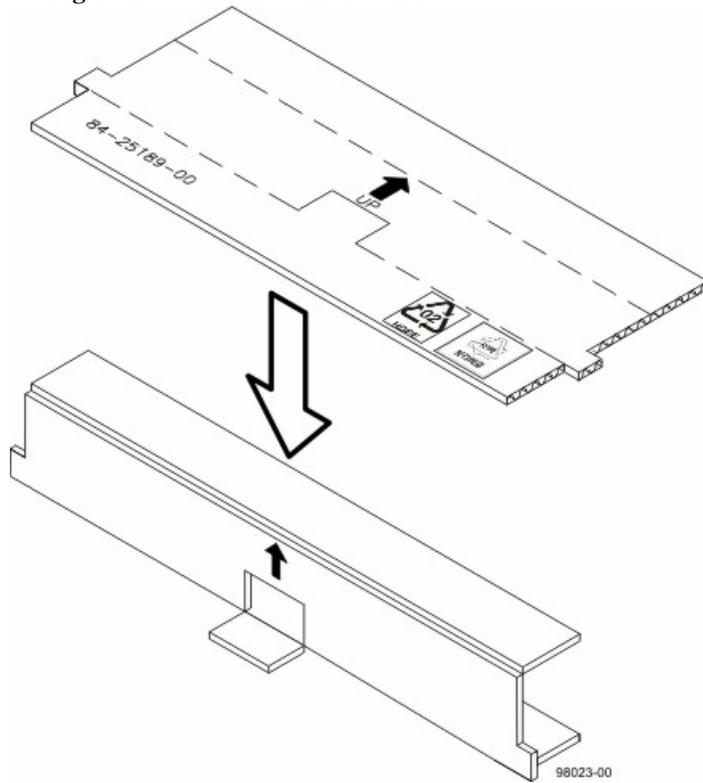


11. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 30 Inserting the Controller Air Blocker into the Open Controller Slot

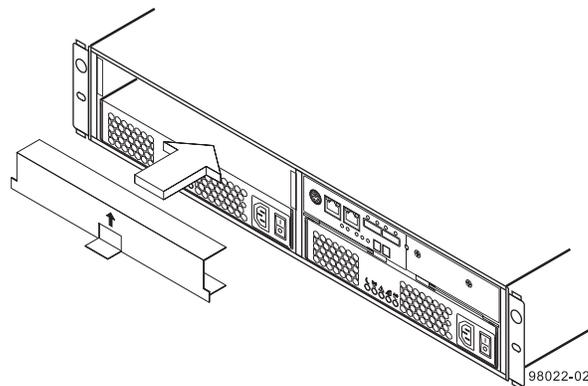

12. On each controller canister, press down on both of the top cover latch buttons, and slide the top covers to the rear as shown in the following figure.

Figure 31 Controller Cover and Internal Parts

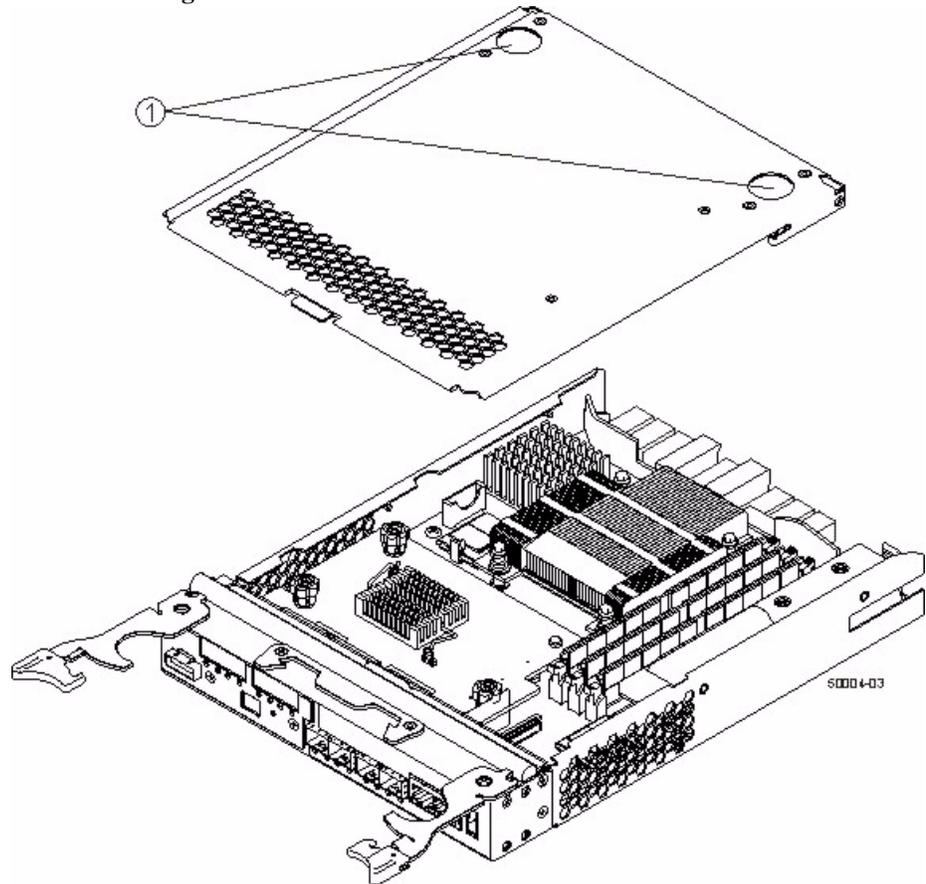

1. Top Cover Latch Buttons

13. Remove the top cover from both controller canisters.
14. Go to "[Upgrading the Cache Memory DIMM in the E5400 Controller-Drive Trays](#)" on page 52.

Removing the Controller Canisters from the E5460 Controller-Drive Tray

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES

From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.


Command line interface

Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

Figure 32 Controller Positions in the E5460 Controller-Drive Tray

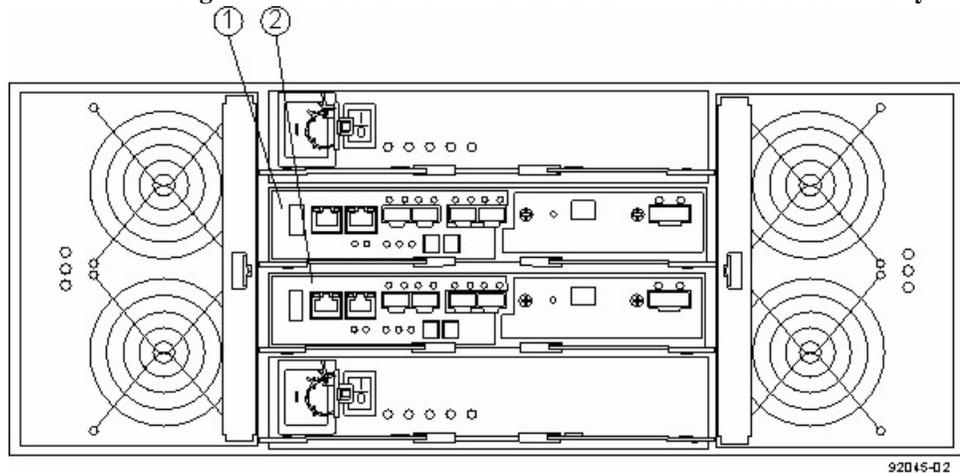

1. Controller A
2. Controller B

3. Put on antistatic protection.
4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.

ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Stop all host I/O operations.
6. Use one of the following options to place controller A offline.

SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.


Command line interface Enter the following command on the command line:

```
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=offline";
```

In this command, <DNS-network-name-or-IP-address> is the applicable address.

ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.


Figure 33 Controller LEDs

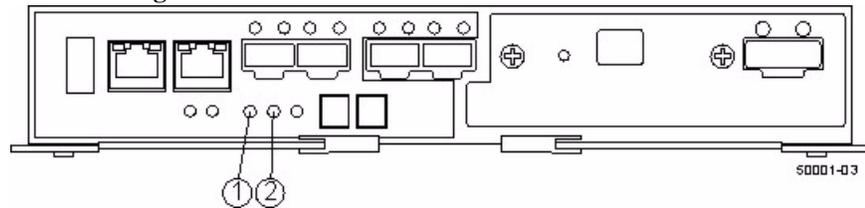

1. Controller Service Action Allowed LED (Blue)
2. Controller Service Action Required LED (Amber)

7. Turn off the Power switch on each of the power-fan canisters, and wait until all LED and seven-segment display activity on the rear of the controller-drive tray has stopped.

Figure 34 Power Switches on the E5460 Controller-Drive Tray

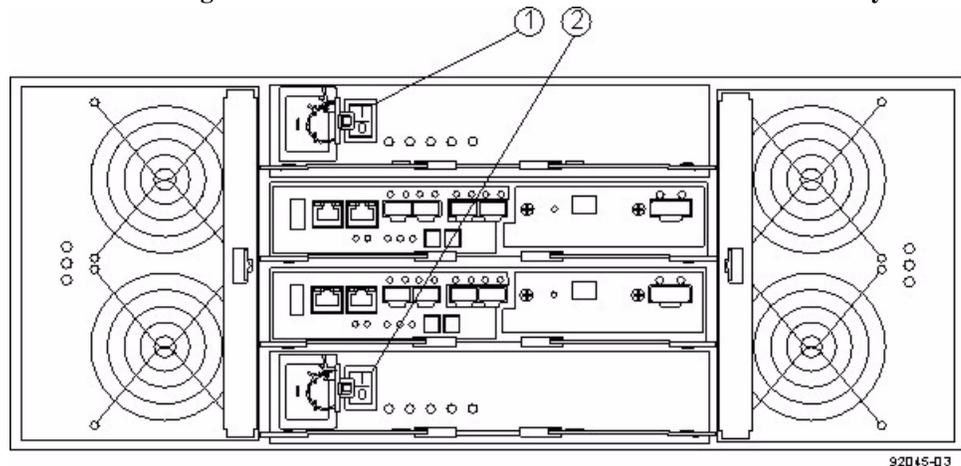

1. Power Switch for Controller A
2. Power Switch for Controller B


8. Disconnect the following cables from both controller canisters.
 - Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab.

9. Remove both controller canisters from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.


Figure 35 Removing and Reinstalling a Controller Canister

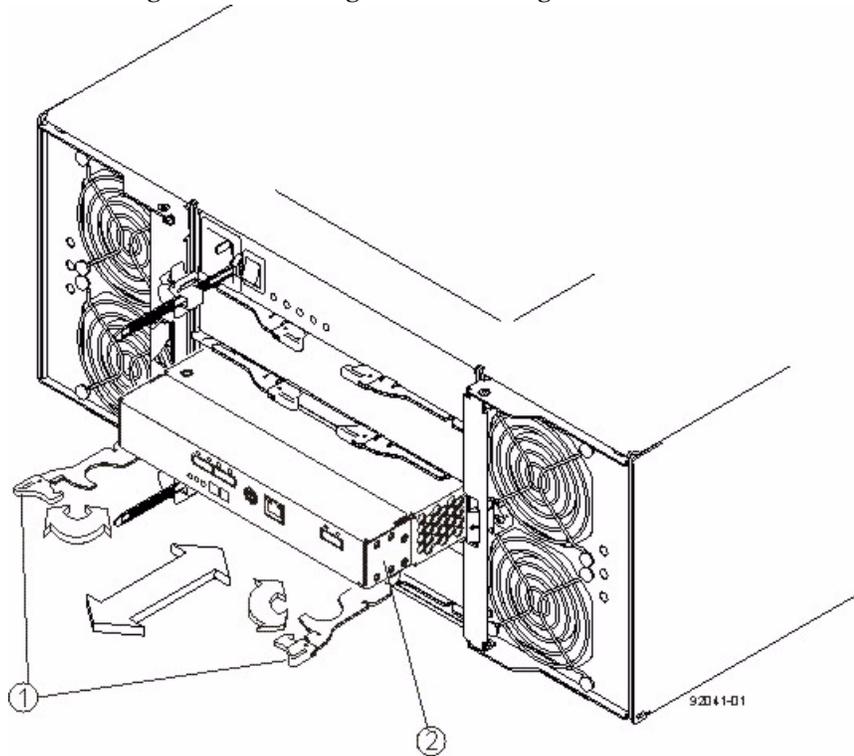

1. Release Lever
2. Controller Canister


10. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 36 Controller Air Blocker

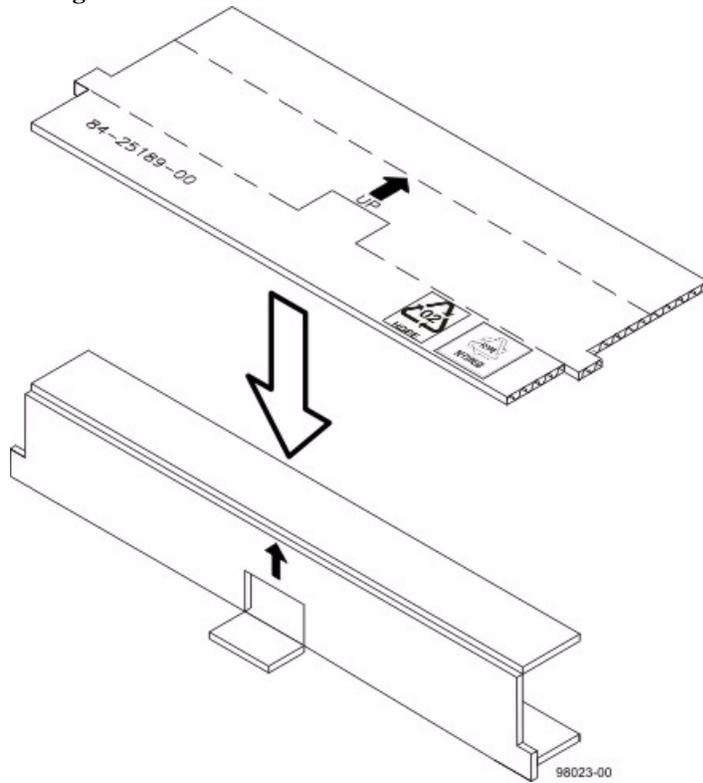


11. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 37 Inserting the Controller Air Blocker into the Open Controller Slot

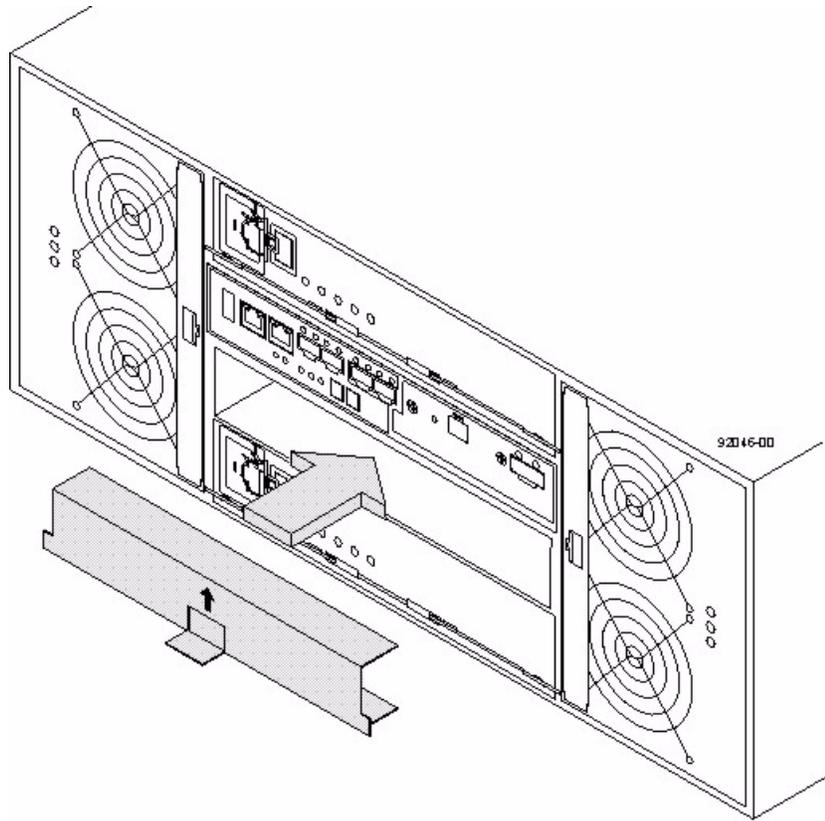

12. On each controller canister, press down on both of the top cover latch buttons, and slide the top covers to the rear as shown in the following figure.

Figure 38 Controller Cover and Internal Parts

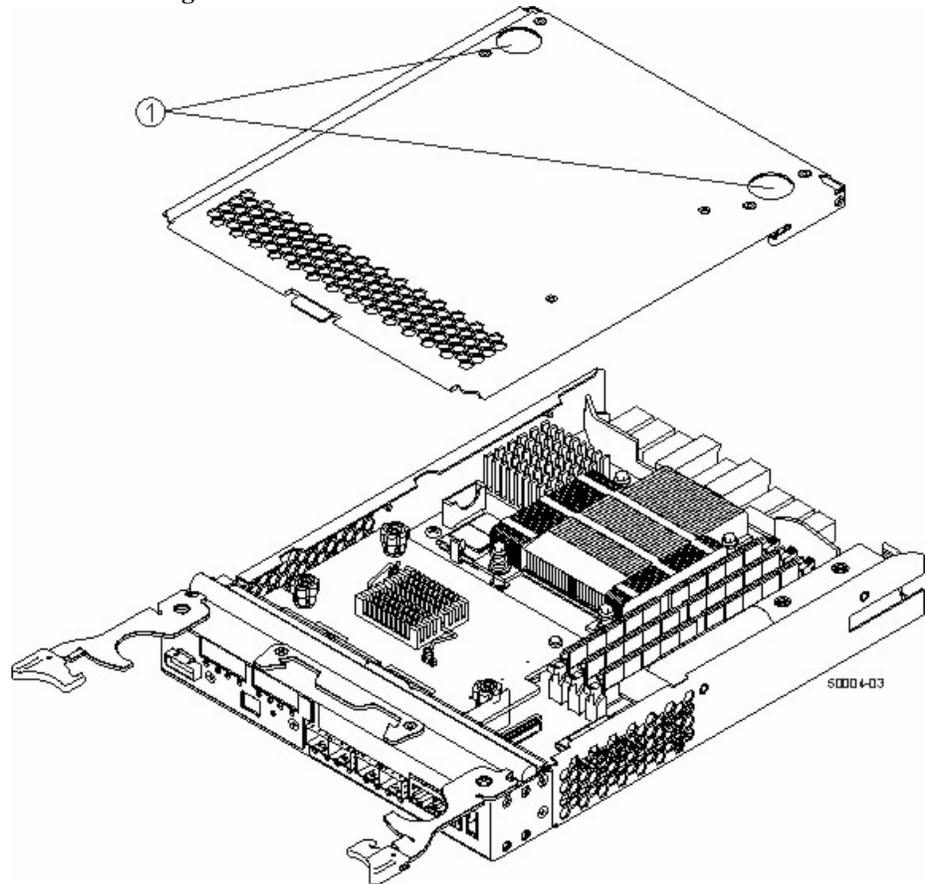

1. Top Cover Latch Buttons

13. Remove the top cover from both controller canisters.
14. Go to "[Upgrading the Cache Memory DIMM in the E5400 Controller-Drive Trays](#)" on page 52.

Upgrading the Cache Memory DIMM in the E5400 Controller-Drive Trays


If you are upgrading the cache memory DIMMs in one controller canister, you must increase the capacity of the cache memory DIMMs in the other controller canister. You also must increase the capacity of the cache backup memory device in both controller canisters if you upgrade the cache memory DIMMs from 6 GB to 12 GB.

Make sure that the sizes of the cache memory DIMMs to which you are upgrading in both controller canisters are of equal capacity. The following table lists the cache memory DIMM configurations.

Total Cache Memory per Controller	Number of Cache Memory DIMMs per Controller	Capacity of Each Cache Memory DIMM	Cache DIMM Slots Populated
6 GB	3	2	1, 2, 3
12 GB	3		1, 2, 3
24 GB	3	48	1, 2, 3

1. Locate the cache memory DIMM shown in the following figure.


Figure 39 Cache Memory DIMM Slots – Top View

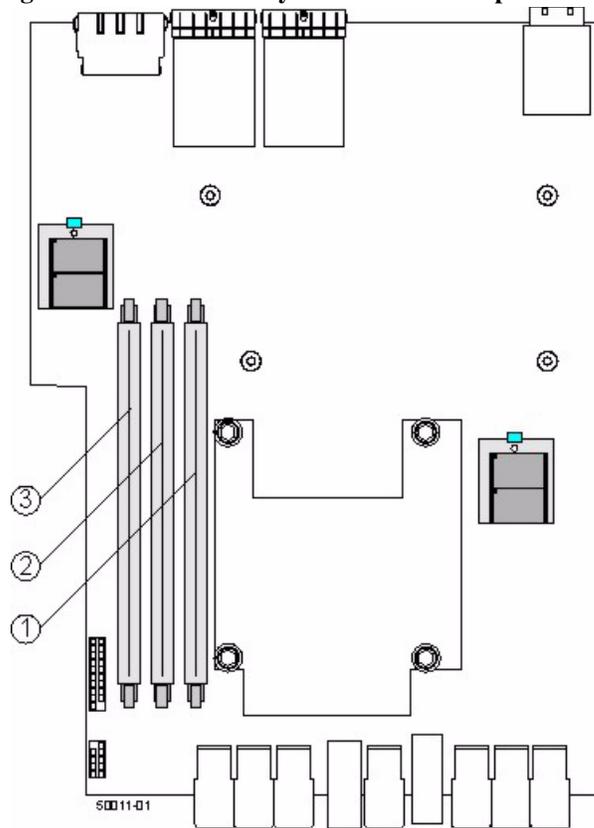

1. Cache Memory DIMM Slot 1
2. Cache Memory DIMM Slot 2

2. Remove the cache memory DIMM from the slot on the controller card shown in the following figure.
 - a. Pull back on each ejector handle to disengage the cache memory DIMM pins from the slot on the controller card.
 - b. Lift the cache memory DIMM out of the slot.
 - c. Place the cache memory DIMM that you removed on a flat, static-free surface.

Figure 40 Removing a Cache Memory DIMM

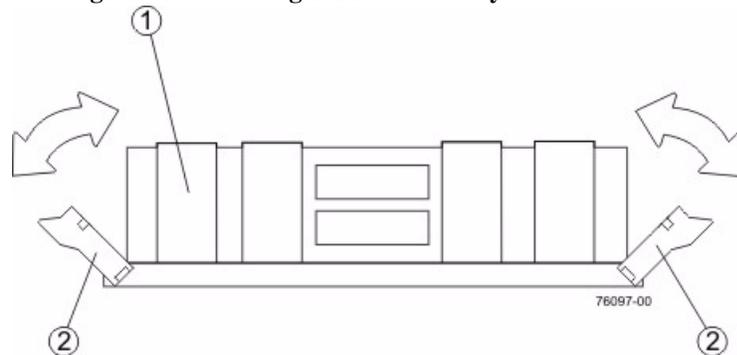

1. Cache Memory DIMM
2. Ejector Handles

3. Install the new cache memory DIMM.
 - a. Align the new cache memory DIMM in the slot.
 - b. Gently push down on the cache memory DIMM to seat the pins into the slot.

The ejector handles rise up as the cache memory DIMM is inserted into the slot. When these ejector handles are in the vertical position, the cache memory DIMM is fully engaged and is locked in place.

4. Repeat this procedure for the other controller canister.
5. Perform one of these actions:
 - If you upgraded your cache memory DIMMs from 6 GB to 12 GB, go to [Upgrading the Cache Backup Memory Device in the E5400 Controller-Drive Trays](#) on page 54.
 - If you are upgrading your cache memory DIMMs from 12 GB to 24 GB, you do not need to install an additional cache backup memory device. Go to ["Reinstalling the Controller Canister in the E5400 Controller-Drive Tray"](#) on page 57.

Upgrading the Cache Backup Memory Device in the E5400 Controller-Drive Trays

The cache backup memory device provides a backup for the cache memory DIMMs. If you are adding an additional cache backup memory device in one controller canister, you also must add an additional cache backup memory device in the other controller canister.

Follow this procedure only if you upgraded the cache memory DIMMs from 6 GB to 12 GB. If you upgraded the cache memory DIMMs from 12 GB to 24 GB, you can skip this procedure.

NOTE On the E5460 controller canister, the total cache backup memory per controller does not equal the total cache memory per controller.


The following table lists the cache backup memory device configurations.

Total Cache Memory per Controller	Number of Cache Backup Memory Devices per Controller	Cache Backup Memory Device Slots Populated
6 GB	1	1
12 GB	2	1, 2
24 GB	2	1, 2

NOTE Although the physical capacity of each cache backup memory device is 8 GB, only 4 GB of each device is used for nonvolatile cache memory offload. The remainder is used for other purposes, such as storing controller firmware images. The storage array profile displays the capacity of each cache backup memory device as 4 GB.

1. Identify the location to add the new cache backup memory device as shown in the following figure.

Figure 41 Cache Backup Memory – Top View

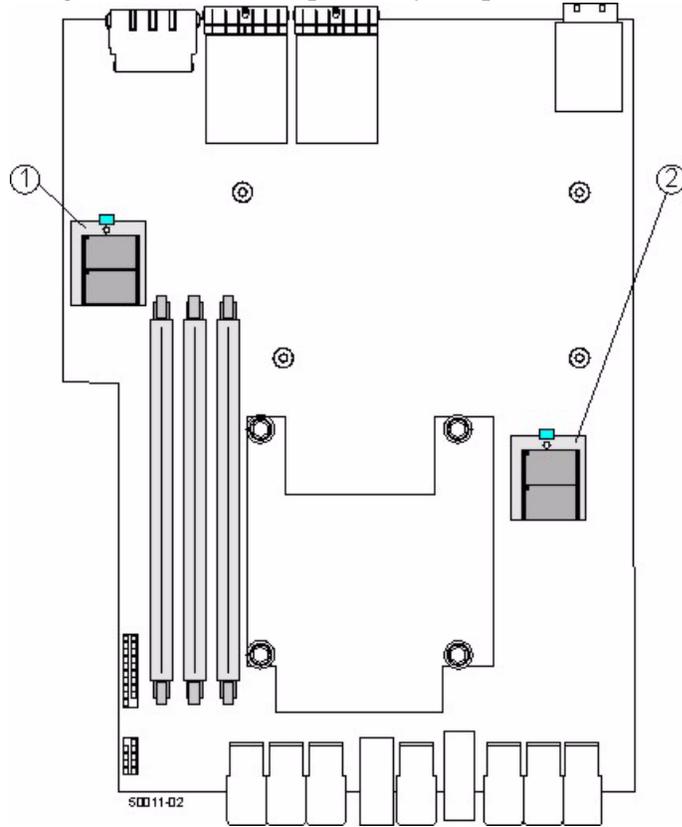

1. Cache Backup Memory Device Slot 1

Cache Backup Memory Device Slot 2

2. Install the new cache backup memory device.
 - a. Unwrap the new cache backup memory device.
 - b. Install the new cache backup memory device into the empty slot location by pressing the tab and sliding the cache backup memory device on the alignment post until it is fully seated.
3. Repeat this procedure for the other controller canister.
4. Go to ["Reinstalling the Controller Canister in the E5400 Controller-Drive Tray"](#) on page 57.

Reinstalling the Controller Canister in the E5400 Controller-Drive Tray

1. Reinstall the top covers on both controller canisters by sliding them forward until the top cover latch buttons click.
2. Slide each controller canister all the way into the controller-drive tray. Rotate the release levers towards the center of the controller canister to lock that component into place.
3. Reconnect the following cables to the appropriate ports on both controller canisters.
 - Ethernet cables
 - Host interface cables
 - Drive interface cables
4. Go to "[Turning On Power to the Controller Canisters in the E5400 Controller-Drive Tray](#)" on page 57.

Turning On Power to the Controller Canisters in the E5400 Controller-Drive Tray

1. Turn on the Power switches on both of the power-fan canisters.
Controller B comes up in Write-Through mode. Controller A comes up in an Offline state.
2. Use one of the following options to bring controller A online.

SANtricity ES

From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Online**.

Command line interface

Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=online";


In this command,

<DNS-network-name-or-IP-address> is the applicable address.

3. Look at the LEDs on both controller canisters to make sure that the controllers are booting correctly.

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controllers by using the storage management software.

Figure 42 Controller LEDs

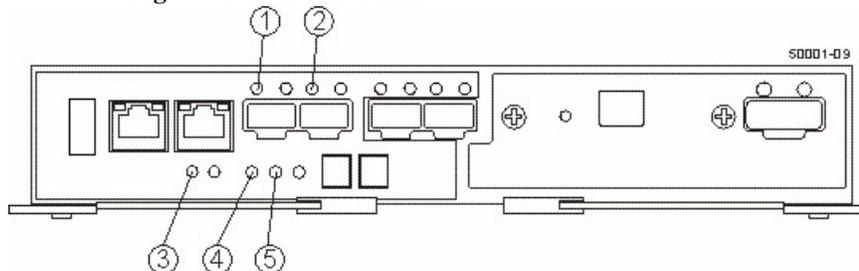

1. Host Link 1 Service Action Required LED (Green)
2. Host Link 2 Service Action Required LED (Green)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)

4. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window indicates an Optimal status** – Go to step 11.
 - **Any of the controller-drive tray’s Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Go to step 5.
5. Based on the Recovery Guru display, perform one of the following actions:
 - **The Recovery Guru displays the following message: REC_CACHE_BACKUP_DEVICE_INSUFFICIENT_CAPACITY** – The controllers might require an additional power cycle to initialize the new cache backup memory devices. Turn off the Power switches on both controller canisters. Wait until all LED and seven-segment display activity has stopped, and then turn on the Power switches on both power-fan canisters. Go to 6.
 - **The Recovery Guru does not display an insufficient capacity message** – Check that the controller canister has been installed correctly. Reinstall the controller canister if necessary. Go to step 10.
6. Did this action correct the problem?
 - **Yes** – Go to step 11.
 - **No** – If the problem is not resolved, contact your Technical Support representative.
7. Using the LEDs and the storage management software, check the status of the trays in the storage array.
8. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to step 13.

9. Remove the antistatic protection.
10. Gather support data about your updated storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
Command line interface	Enter the following command on the command line: <code>save storageArray supportData</code> This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i> . Running this command can temporarily impact performance on your storage array.

Upgrading Host Adapters

Upgrading a Host Interface Card in the CE7900 Controller Tray

The following types of host interface cards (HICs) are supported:

- 4-Gb/s Fibre Channel and 8-Gb/s Fibre Channel
- 1-Gb/s iSCSI and 10-Gb/s iSCSI

NOTE If you are upgrading from 4-Gb/s HICs to 8-Gb/s HICs, you must upgrade the controller firmware to controller firmware version 7.50 before you perform this procedure.

NOTE If you mix HICs, such as 4 Gb/s Fibre Channel and 8 Gb/s Fibre Channel, both controllers in a storage array must have exactly the same configuration.

If you are changing your current configuration, you might need to replace these items in addition to the host interface card:

- Small Form-factor Pluggable (SFP) transceivers – The 4-Gb/s Fibre Channel host interface card uses one type of SFP transceiver and both the 8-Gb/s host interface card and the 10-Gb/s iSCSI host interface cards use a different type of SFP transceiver.
- Host adapters.

Removing the Host Interface Card from the CE7900 Controller Tray

- Cables – iSCSI uses copper cable, and Fibre Channel supports copper cable and fiber-optic cable.
- Faceplate with the correct overlay.

Before you start this procedure, gather antistatic protection and the host interface card that you want to install.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

To install a host interface card or replace a failed host interface card, you must first remove the controller canister.

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your updated storage array by using one of these methods:

SANtricity ES

From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.

Command line interface

Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Did the Recovery Guru direct you to replace a failed host interface card?
 - **Yes** – Go to step 3.
 - **No** – Run the Recovery Guru to identify the failed host interface card, and go to step 3.

- Put on antistatic protection.

ATTENTION Potential degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.


- Label each cable that is attached to the controller canister so that you can reconnect the cables correctly after the controller canister is reinstalled.
- Record the information from the seven-segment display on the rear of the controller tray.
- Use one of the following options to place controller A offline. and wait for the blue Controller Service Action Allowed LED to come on.

SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
 smCLI
 <DNS-network-name-or-IP-address> -c
 "set controller [a]
 availability=offline";
 In this command,
 <DNS-network-name-or-IP-address> is
 the applicable address.

If necessary, wait for the Controller Service Action Allowed LEDs to come on.


Figure 43 Controller Service Action LEDs

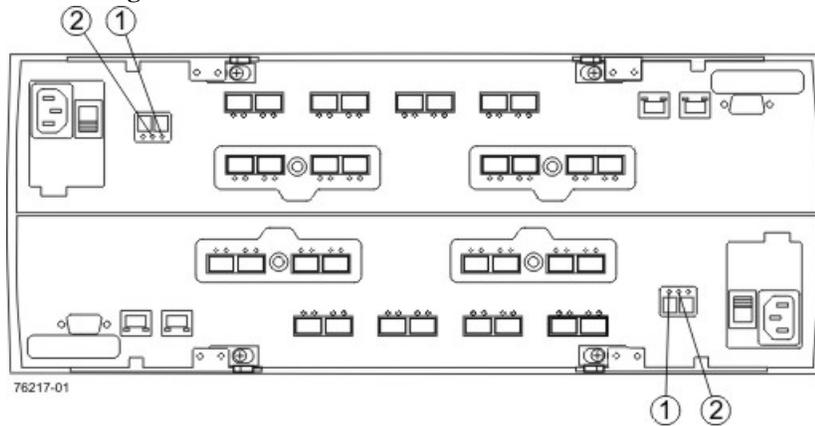

- Controller Service Action Allowed LED (Blue)
- Controller Service Action Required LED (Amber)

7. Turn off the Power switch on both controller canisters. Both controllers must be powered down.
8. Unplug the power cord from the controller canister, and set the power cord aside.
9. Disconnect all of these cables from the controller canister:
 - Host interface cables
 - Drive interface cables
 - Ethernet cables
10. Remove the SFP transceivers from the controller canister.
11. Remove the controller canister.
 - a. Unlock and rotate the release handles out to release the controller canister.
 - b. Using the release handles and your hands, pull the controller canister out of the controller tray.


Figure 44 Removing and Reinstalling a Controller Canister

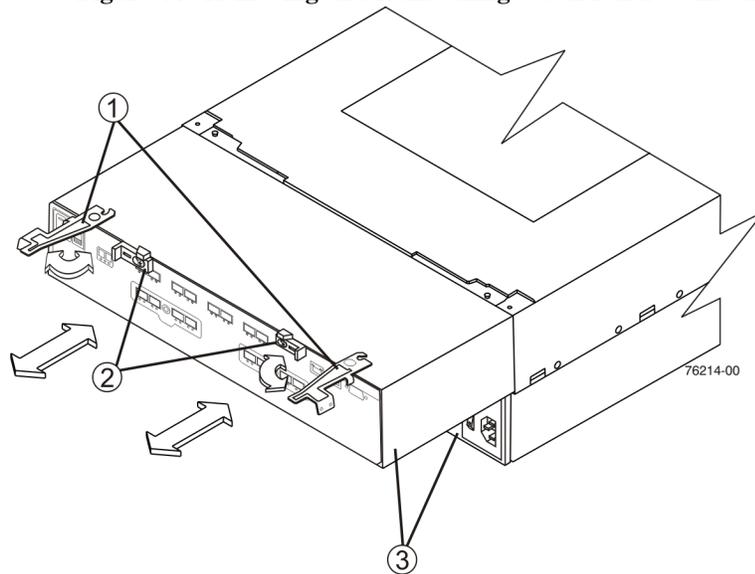

1. Release Handles
2. Locking Mechanisms
3. Controller Canister

12. Set the controller canister on a flat, static-free surface with the release handles down and the host interface ports up.
13. Loosen the three thumbscrews that secure the top cover to the controller canister.

Figure 45 Controller Top Cover, Internal Parts, and Faceplate

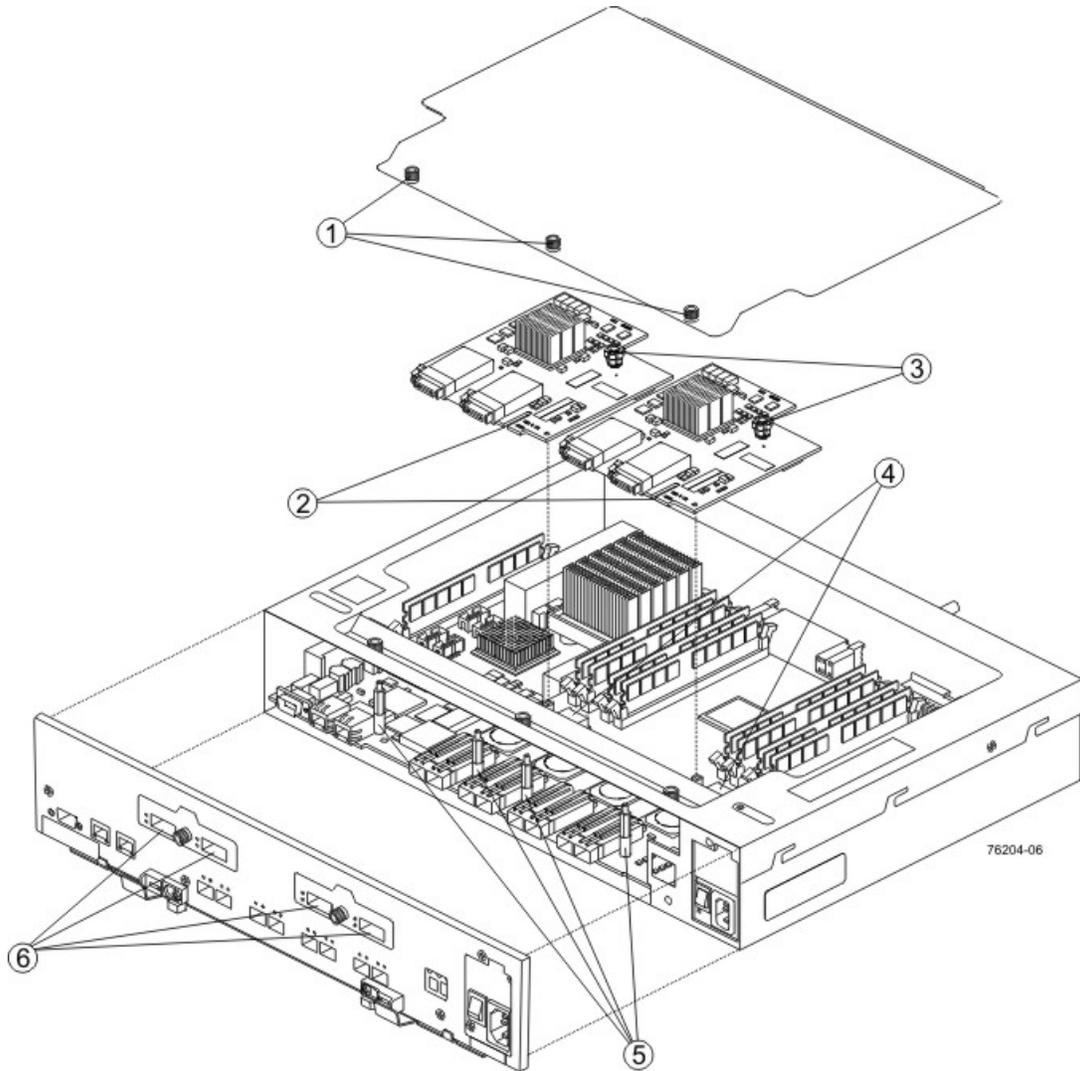

1. Top Cover Thumbscrews
2. Two Host Interface Cards with Alignment Slots
3. Host Interface Card Thumbscrews
4. Controller Card Sockets for Connecting the Host Interface Cards
5. Host Interface Card Alignment Pins
6. Host Interface Ports on the Faceplate

14. Remove the top cover.

15. Remove the faceplate by loosening the thumbscrew that secures it to the controller tray.

Installing the Host Interface Card in the CE7900 Controller Tray

ATTENTION Possible equipment damage – When you remove the host interface card, be careful not to disconnect the seven-segment display from the sheet metal cover. If you need to remove the sheet metal cover, you must first remove the seven-segment display ribbon cable from the motherboard connector. To disconnect the seven-segment display from the motherboard connector, you must lift the center piece of the motherboard connector, and remove the ribbon cable.

16. Locate the host interface card that you want to replace.
17. Loosen the thumbscrew on the host interface card that secures it to the controller card.
18. Gently lift the host interface card to disengage the pins from the connector on the controller card, and remove the host interface card from the controller canister.

NOTE The connector is located on the corner of the host interface card next to the thumbscrew. Note how the card fits against the two guide posts. These guide posts help to make sure that the connecting hardware is aligned.

19. Place the host interface card that you removed on a flat, static-free surface.

NOTE Make sure that you have the correct host interface cards (HICs), Small Form-factor Pluggable (SFP) transceivers, and host bus adapters. If you are replacing one HIC with a different type of HIC, you might not be able to reuse the SFP transceivers. Use only the correct SFP transceiver for the interface type and speed of your HIC.

1. Install the new HIC.
 - a. Align the new HIC with the guide posts.
 - b. Gently push down on the HIC to seat the pins into the connector on the controller card.
2. Tighten the thumbscrew on the HIC to make sure that it is securely fastened to the controller card.


NOTE Make sure that the seven-segment display ribbon cable is still connected to the motherboard connector. If the ribbon cable is not connected, you must lift the center piece of the motherboard connector, and insert the ribbon cable into the motherboard connector.

3. Replace the faceplate, and tighten the thumbscrew that secures it to the controller tray.

NOTE Make sure that the faceplate has the correct overlay, so that the information on the front of the faceplate corresponds with the HIC.

4. Install the top cover on the controller canister, and tighten all of the thumbscrews.
5. Slide the controller canister all of the way into the tray. Rotate the release handles in to lock the controller canister into place.
6. Install the SFP transceivers into the controller canister.
7. Reconnect all of these cables to the appropriate ports on the controller canister.
 - Ethernet cables
 - Host interface cables
 - Drive interface cables
8. Plug in the power cord to the controller canister.
9. Turn on the Power switch on both controller canister.
10. Put the controller back online. In the Array Management Window, right-click the controller, then select **Advanced >> Place >> Online**.
11. Look at the LEDs on the controller canister to make sure that the controller is rebooting correctly.

Figure 46 Controller Service Action LEDs

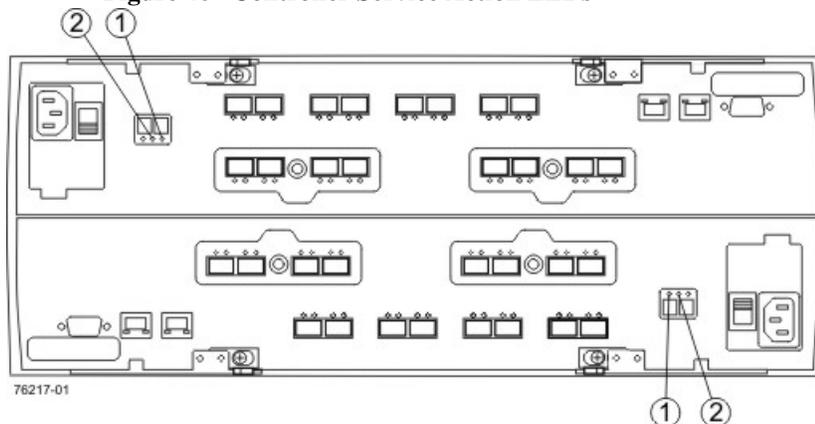

1. Controller Service Action Allowed LED (Blue)
2. Controller Service Action Required LED (Amber)

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controller through the storage management software.

NOTE Depending on your version of host interface card, you might receive an error message about a failed host I/O card. If this problem occurs, follow the instructions in the Recovery Guru.

12. Look at the Controller Service Action Required LED on the controller canister, and look at all of the controller tray's Service Action Required LEDs. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window Indicates an Optimal status** – Go to step 14.
 - **Any of the Controller-Drive tray's Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Check that the controller canister is installed correctly. Reinstall the controller canister if necessary. Go to step 13.

NOTE If your storage array does not have an Optimal status, click the **Recovery Guru** toolbar button in the Array Management Window to determine if any other actions are required.

13. Did this action correct the problem?
 - **Yes** – Go to step 14.
 - **No** – If the problem is not resolved, contact your Technical Support representative.
14. Using the LEDs and the storage management software, check the status of all of the trays in the storage array.
15. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to step 16.
16. Remove the antistatic protection.
17. Gather support data about your updated storage array by using one of these methods:
 - Use the storage management software to collect and save a support bundle of your storage array. From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.
 - Use the CLI to run the `save storageArray supportData` command to gather comprehensive support data about the storage array. For more information about this command, refer to the *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

Upgrading a Host Interface Card in the E2600 Controller-Drive Trays

ATTENTION Possible equipment damage – Only a qualified service technician should perform this procedure, or equipment damage might result.

Use this procedure to upgrade a host interface card (HIC). The replacement HIC can have iSCSI, SAS, or Fibre Channel connections.

The E2660 controller-drive tray can mix host interfaces of different types, with some restrictions. In all cases, when host interface types are mixed, both controllers in a duplex controller-drive tray must have the same arrangement of HICs. Each controller must have the same type of HIC in the same relative position as the other controller.

ATTENTION Possible data loss – If you remove all Fibre Channel HICs from a storage array and replace them with HICs of a different network protocol (such as iSCSI or SAS), you must first deactivate the Remote Volume Mirroring (RVM) premium feature if it is activated. If you do not deactivate the RVM before removing the Fibre Channel HICs, your system loses data access and data loss might occur.

NOTE iSCSI host ports do not support the Data Assurance (DA) premium feature.

NOTE IB host ports do not support the Data Assurance (DA) premium feature.

ATTENTION Potential loss of connectivity – If both controllers in a duplex controller-drive tray are powered up at the same time with different types of HICs, a mismatch results that causes both controllers to lock down (shut down and stop operating). If one controller is already running, and you replace the alternate controller with a different HIC, then only the replacement controller locks down, and the running controller remains operational.

Before you upgrade or replace a HIC, gather antistatic protection and a new HIC. If you are changing your current configuration, you might need to replace these items in addition to the HIC:

- Small Form-factor Pluggable (SFP) transceivers.
- Ethernet cables.
- Host bus adapters.
- Host-channel adapters.
- Cables – Both SAS and iSCSI use copper cable, and Fibre Channel uses copper cable and fiber-optic cable.
- The correct host interface card subplate for the front of the controller (which is included in this kit).

Removing the Host Interface Card from the E2612 or E2624 Controller-Drive Tray

Perform each of the following tasks in order.

1. Choose the applicable task to remove the controller canisters:
 - Remove the HIC from the E2612 or E2624 controller-drive tray.
 - Remove the HIC from the E2660 controller-drive tray.

The remaining tasks in this section are the same for the E2612, E2624, and E2660 controller-drive trays.

2. Install the HIC in the E2600 controller-drive tray.

ATTENTION Possible hardware damage – If you perform this procedure with the power turned on, the equipment might overheat if the controller slot is left open for more than three minutes. To prevent the possibility of overheating, you must insert the controller air blocker into the controller slot when servicing the controller.

To install a new host interface card (HIC), you must first remove the controller canister.

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
---------------	---

Command line interface	Enter the following command on the command line: <code>save storageArray supportData</code> This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i> . Running this command can temporarily impact performance on your storage array.
------------------------	---

2. Put on antistatic protection.

- Use the Locate Controller Tray function in the storage management software to identify the controller canisters to upgrade.

ATTENTION Potential degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

- Label each copper cable or fiber-optic cable that is attached to the controller canister so that you can reconnect each cable correctly after the controller canister is reinstalled.
- Use one of the following options to place controller A offline. and wait for the blue Controller Service Action Allowed LED to come on.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
 smCLI
 <DNS-network-name-or-IP-address> -c
 "set controller [a]
 availability=offline";

In this command,
 <DNS-network-name-or-IP-address> is
 the applicable address.

If necessary, wait for the Controller Service Action Allowed LED to come on.

Figure 47 Controller LEDs

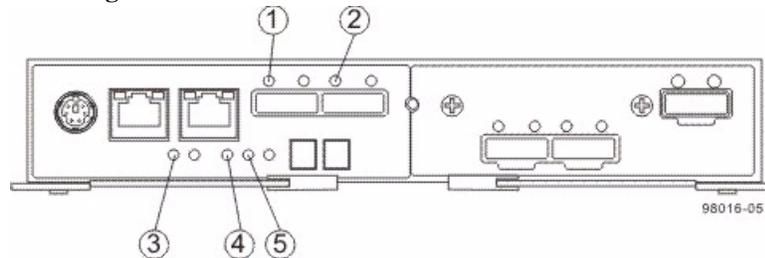


- Host Link 1 Service Action Required LED (Amber)
- Host Link 2 Service Action Required LED (Amber)
- Battery Service Action Required LED (Amber)
- Controller Service Action Allowed LED (Blue)
- Controller Service Action Required LED (Amber)

6. Disconnect all cables from the controller canister that contains the HIC.

If fiber-optic cables are present, you can use the two release levers to partially remove the controller canister. Opening these release levers makes it easier to press down the fiber-optic cable release tab. If the storage array is running while you perform this replacement, do not disturb the second controller canister.

7. Remove the controller canister.
 - a. Unlock and pull out the release levers to release the controller canister.
 - b. Using the release levers and your hands, pull the controller canister out of the controller-drive tray.

Figure 48 Removing and Reinstalling a Controller Canister

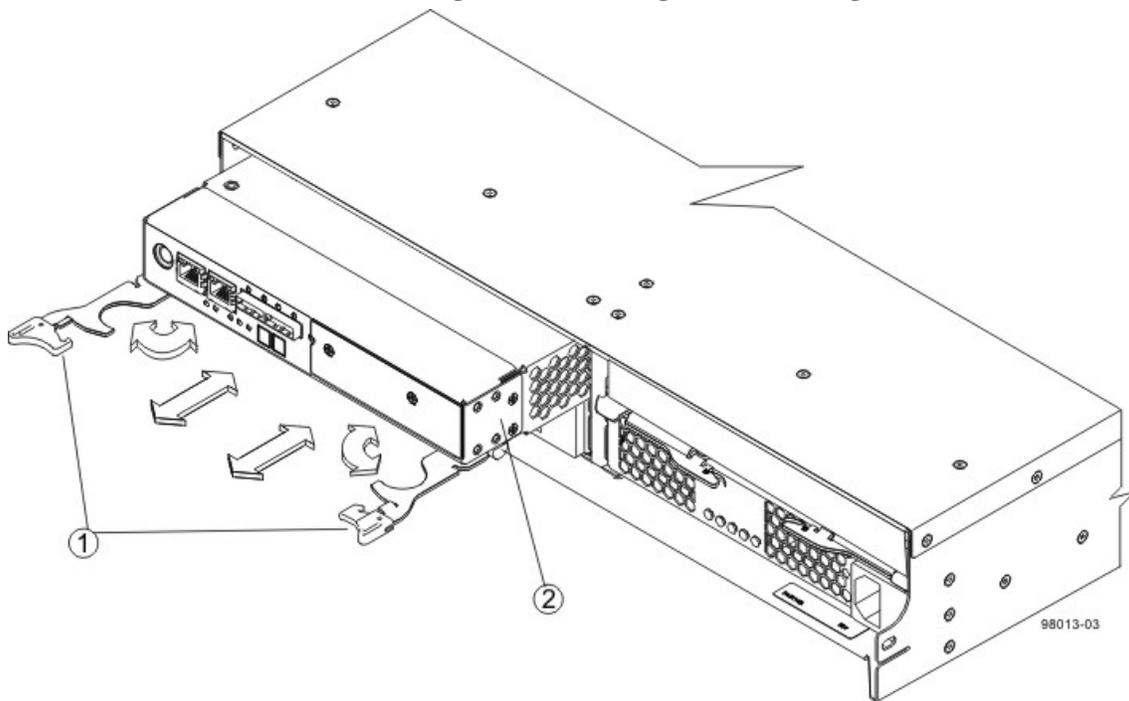


1. Release Levers
2. Controller Canister

8. Set the controller canister on a flat, static-free surface with the release levers up.

ATTENTION Possible equipment damage – The controller slot cannot remain open for more than three minutes because of the possibility of overheating the equipment. The controller air blocker fills the controller slot so that the equipment will not overheat.


9. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 49 Controller Air Blocker

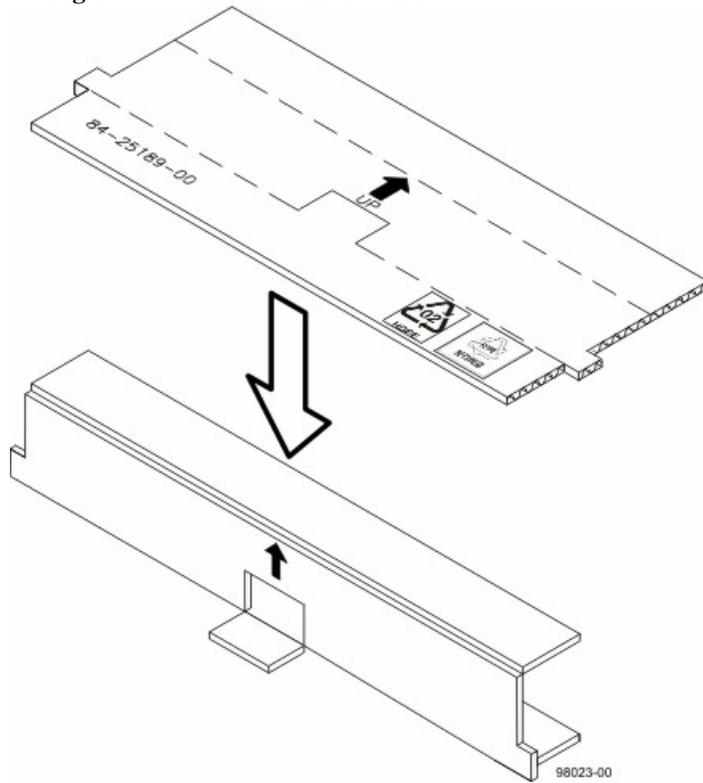

10. Insert the controller air blocker into the open controller slot to make sure that correct airflow is maintained.


Figure 50 Inserting the Controller Air Blocker into the Open Controller Slot

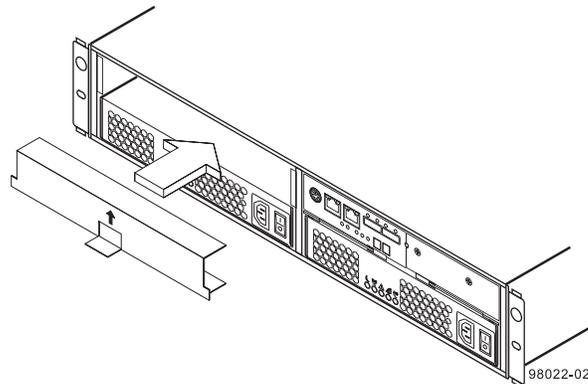

11. If Small Form-factor Pluggable (SFP) transceivers are present, record the ports to which they are attached, and remove them.

12. On the controller canister, press down on both of the top cover latch buttons, and slide the top cover to the rear. Remove the top cover.

Figure 51 Host Interface Card Replacement

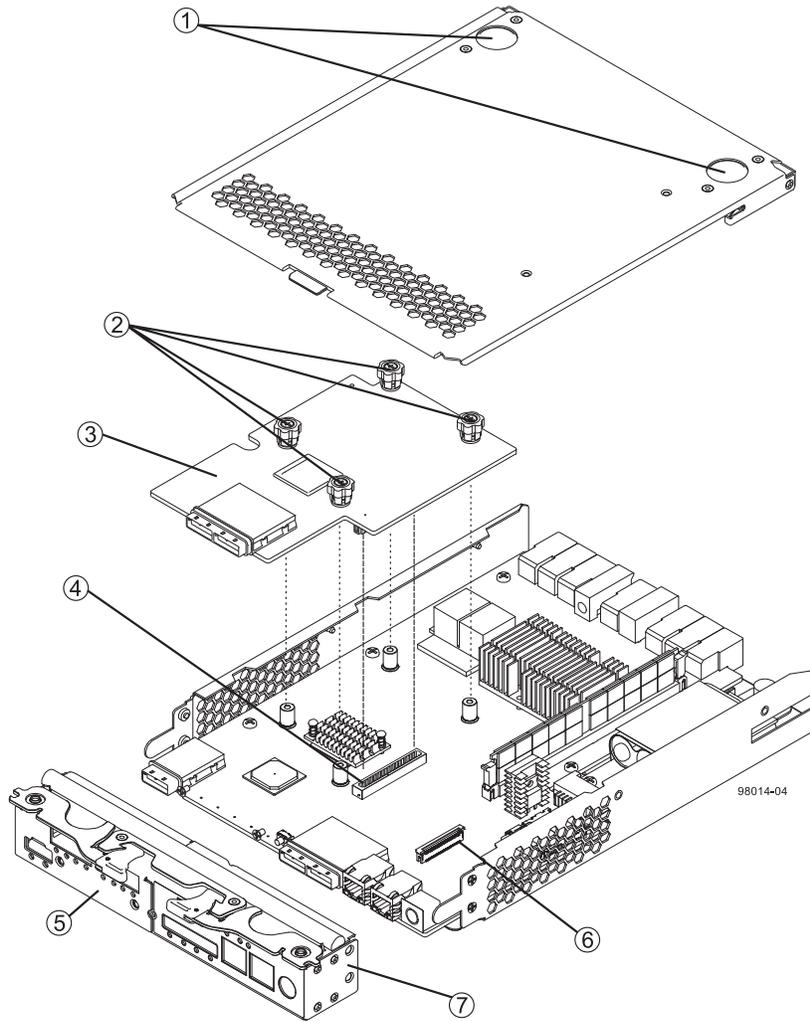

1. Top Cover Latch Buttons
2. HIC Thumbscrews
3. Host Interface Card
4. HIC Interface Connector
5. HIC Subplate
6. Zero Insertion Force (ZIF) Socket
7. Front Bezel

13. Disconnect the front bezel flex harness by gently opening the zero insertion force (ZIF) socket.

NOTE The ZIF socket is very fragile and is easily broken. Either use your fingers or a screwdriver to gently pull the ZIF socket open.

14. Remove the four screws holding the front bezel to the controller canister with a phillips screwdriver.

NOTE The front bezel can suddenly pop loose and cause damage to either the front bezel flex harness or the zero insertion force (ZIF) socket that is attached to the controller card. Make sure that you gently angle the front bezel away from the controller canister to allow access to the HIC.

15. Remove the front bezel from the controller canister, carefully working it from side-to-side until you can slide it off and gain access to the HIC.
16. Loosen the HIC thumbscrews that secure the HIC to the controller card.

NOTE If the thumbscrews were overtightened, you can use a phillips screwdriver to help you loosen them.

17. Gently disengage the HIC from the controller card, and remove the HIC.

NOTE The connector is located on the edge of the HIC next to the thumbscrews.

NOTE You must place the HIC in the same location in the new controller canister, being careful not to scratch or bump any of the components on the bottom of the HIC or the top of the controller card.

18. If you are changing the HIC type, remove the HIC subplate.
19. Place the HIC that you removed on a static-free surface.

Removing the Host Interface Card from the E2660 Controller-Drive Tray

To install a new host interface card (HIC), you must first remove the controller canister.

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES

From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.

Command line interface

Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Put on antistatic protection.
3. Use the Locate Controller Tray function in the storage management software to identify the controller canisters to upgrade.

ATTENTION Potential degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

4. Label each copper cable or fiber-optic cable that is attached to the controller canister so that you can reconnect each cable correctly after the controller canister is reinstalled.
5. Use one of the following options to place controller A offline. and wait for the blue Controller Service Action Allowed LED to come on.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=offline";

In this command,
<DNS-network-name-or-IP-address> is the applicable address.

If necessary, wait for the Controller Service Action Allowed LED to come on.

Figure 52 Controller LEDs

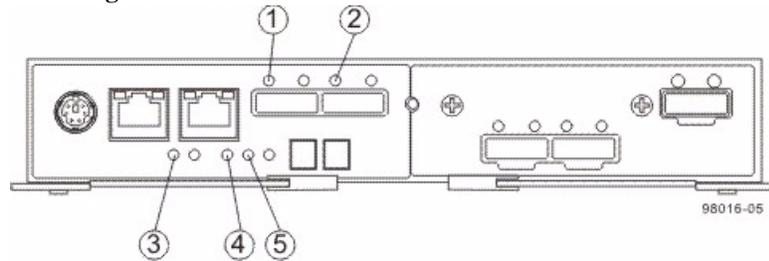


1. Host Link 1 Service Action Required LED (Amber)
2. Host Link 2 Service Action Required LED (Amber)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)

6. Disconnect all cables from the controller canister that contains the HIC.

If fiber-optic cables are present, you can use the two release levers to partially remove the controller canister. Opening these release levers makes it easier to press down the fiber-optic cable release tab. If the storage array is running while you perform this replacement, do not disturb the second controller canister.

7. Remove the controller canister.
 - a. Unlock and pull out the release levers to release the controller canister.
 - b. Using the release levers and your hands, pull the controller canister out of the controller-drive tray.

Figure 53 Removing and Reinstalling a Controller Canister

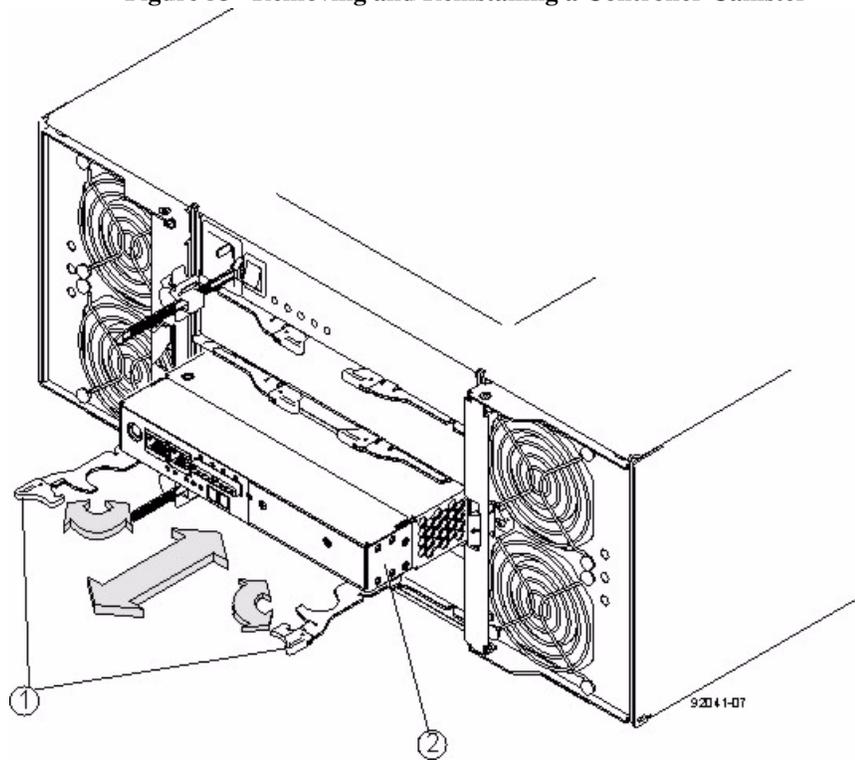


8. Set the controller canister on a flat, static-free surface with the release levers up.

ATTENTION Possible equipment damage – The controller slot cannot remain open for more than three minutes because of the possibility of overheating the equipment. The controller air blocker fills the controller slot so that the equipment will not overheat.


9. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 54 Controller Air Blocker

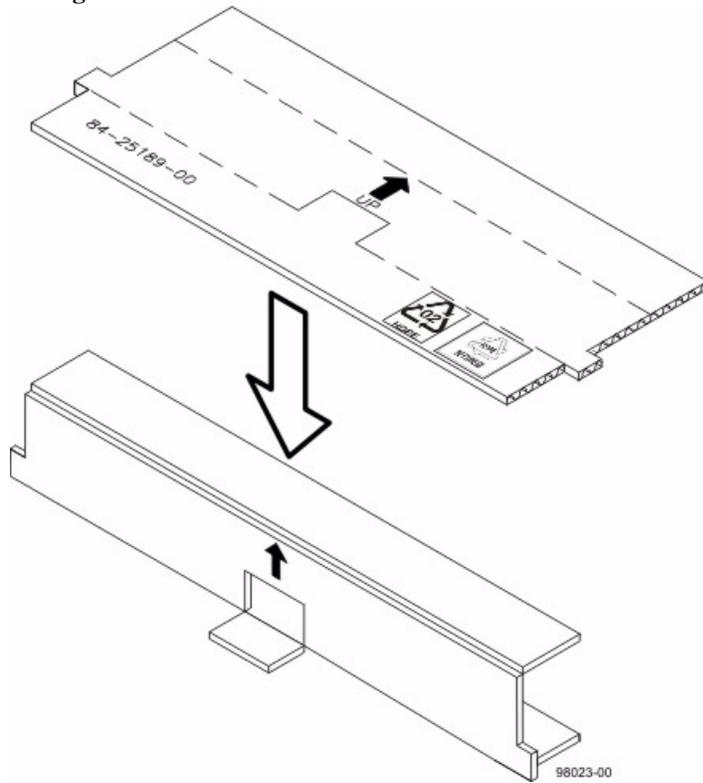


10. Insert the controller air blocker into the open controller slot to make sure that correct airflow is maintained.

Figure 55 Inserting the Controller Air Blocker into the Open Controller Slot

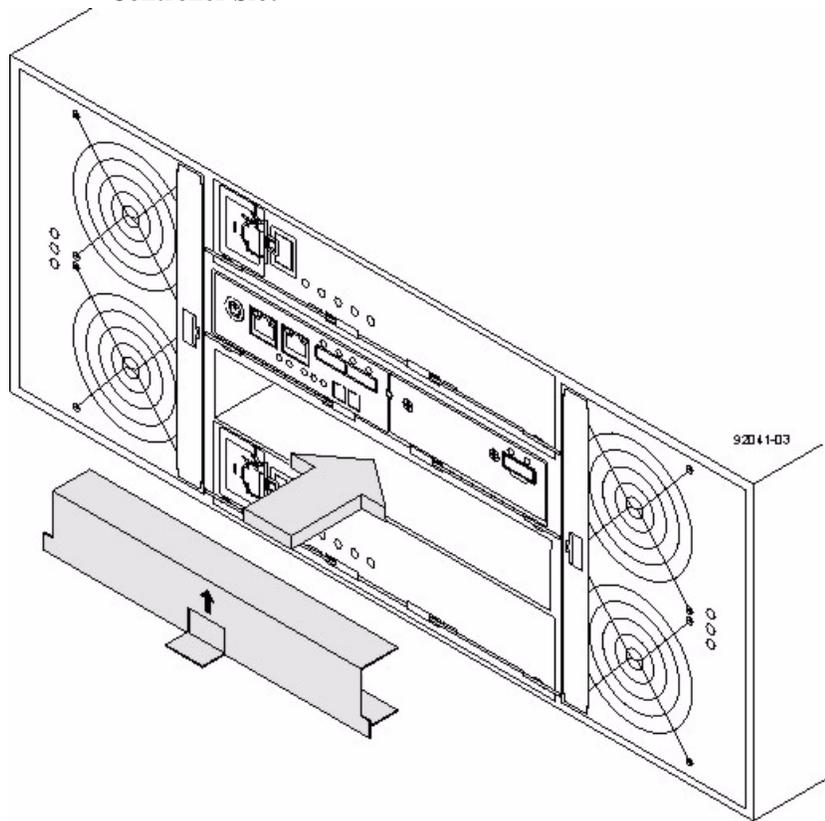

11. If Small Form-factor Pluggable (SFP) transceivers are present, record the ports to which they are attached, and remove them.
12. On the controller-drive tray canister, press down on both of the top cover latch buttons, and slide the top cover to the rear. Remove the top cover.

Figure 56 Host Interface Card Replacement

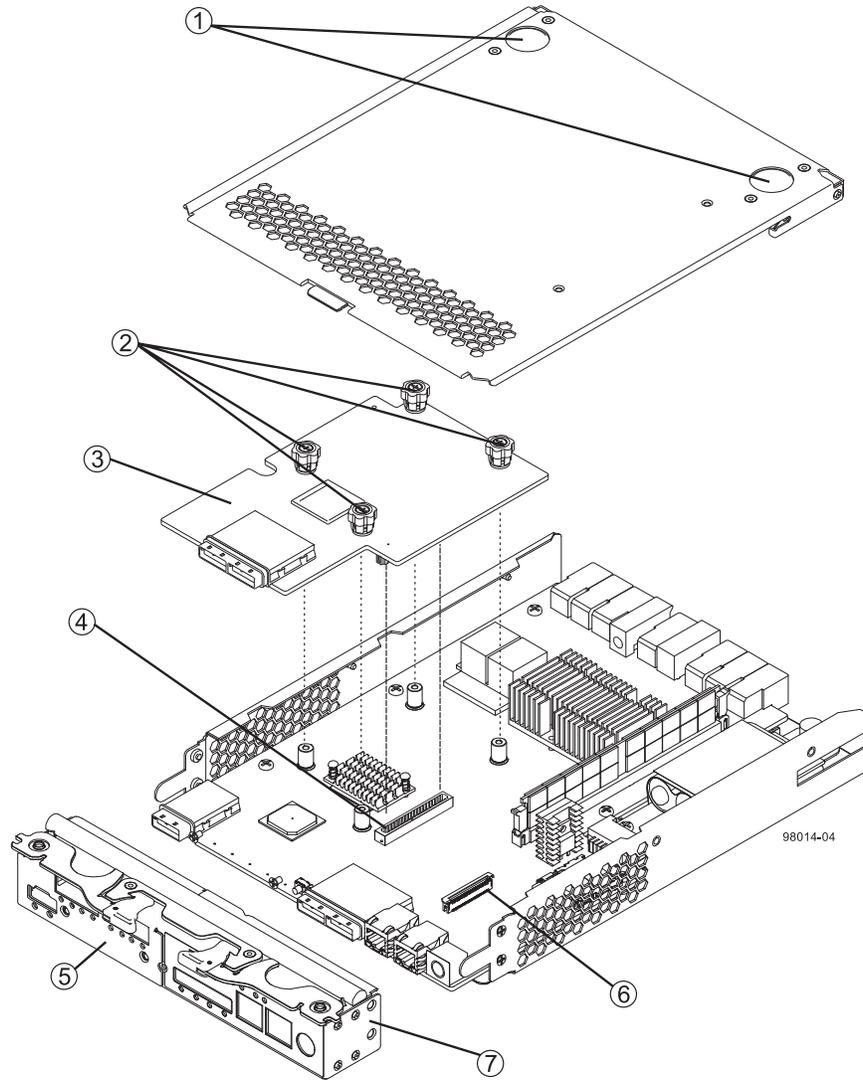

1. Top Cover Latch Buttons
2. HIC Thumbscrews
3. Host Interface Card
4. HIC Interface Connector
5. HIC Subplate
6. Zero Insertion Force (ZIF) Socket
7. Front Bezel

13. Disconnect the front bezel flex harness by gently opening the zero insertion force (ZIF) socket.

NOTE The ZIF socket is very fragile and is easily broken. Either use your fingers or a screwdriver to gently pull the ZIF socket open.

14. Remove the four screws holding the front bezel to the controller canister with a phillips screwdriver.

NOTE The front bezel can suddenly pop loose and cause damage to either the front bezel flex harness or the zero insertion force (ZIF) socket that is attached to the controller card. Make sure that you gently angle the front bezel away from the controller canister to allow access to the HIC.

15. Remove the front bezel from the controller canister, carefully working it from side-to-side until you can slide it off and gain access to the HIC.
16. Loosen the HIC thumbscrews that secure the HIC to the controller card.

NOTE If the thumbscrews were overtightened, you can use a phillips screwdriver to help you loosen them.

17. Gently disengage the HIC from the controller card, and remove the HIC.

NOTE The connector is located on the edge of the HIC next to the thumbscrews.

NOTE You must place the HIC in the same location in the new controller canister, being careful not to scratch or bump any of the components on the bottom of the HIC or the top of the controller card.

18. If you are changing the HIC type, remove the HIC subplate.
19. Place the HIC that you removed on a static-free surface.

NOTE Make sure that you have the correct host interface cards, Small Form-factor Pluggable (SFP) transceivers, and host bus adapters, host channel adapters, or Ethernet adapters. Because you are replacing one host interface card (HIC) with a potentially different type of HIC, you might not be able to reuse the SFP transceivers. For more information, refer to the *Hardware Cabling Guide*.

1. Install the new HIC by gently connecting the HIC to the HIC interface connector.
2. Install and tighten the four HIC thumbscrews that secure the HIC to the controller card.

Installing the Host Interface Card in the E2600 Controller-Drive Tray

NOTE Tighten the thumbscrews by hand only. A screwdriver can overtighten the screws.

NOTE Make sure that the seven-segment display ribbon cable is still connected to the motherboard connector. If the ribbon cable is not connected, you must lift the center piece of the motherboard connector, and insert the ribbon cable into the motherboard connector.

3. If you are changing the HIC type, attach the replacement HIC subplate.
4. Reattach the front bezel to the controller canister by reinserting the four screws.
5. Reattach the bezel flex harness by gently lifting the latch on the ZIF socket, and inserting the ribbon cable into the ZIF socket. Then push the ZIF socket closed.
6. Reinstall the top cover on the controller canister.
7. If the SFP transceivers were present, reinstall them.
8. Remove the controller air blocker.
9. Slide the controller canister all the way into the controller-drive tray. Rotate the release levers towards the center of the controller canister to lock that component into place.
10. Reconnect all of the cables that were disconnected when you removed the controller canister.

NOTE When you upgrade a HIC, additional system cabling and configuration might be necessary. Refer to the *Hardware Cabling Guide* on the SANtricity ES Storage Manager Installation DVD.

11. Use one of the following options to bring the controller online.


SANtricity ES	From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select Advanced >> Place >> Online .
Command line interface	Enter the following command on the command line: smCLI <DNS-network-name-or-IP-address> -c "set controller [<controller>] availability=online"; In this command, <DNS-network-name-or-IP-address> is the applicable address and <controller> is the applicable controller (A or B).

12. Look at the LEDs on the controller canister to make sure that the controller is rebooting correctly.

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controller by using the storage management software.

Depending on your version of HIC, you might receive an error message about a failed host I/O card. If this problem occurs, follow the instructions in the Recovery Guru.

Figure 57 Controller LEDs

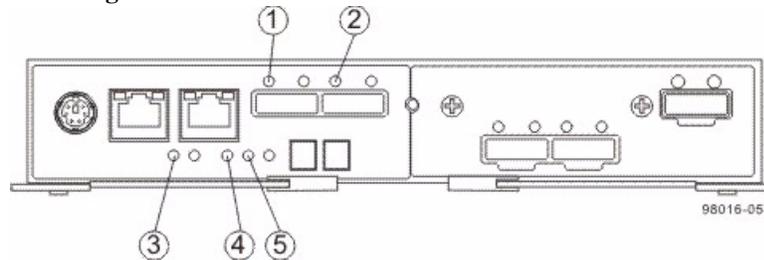

1. Host Link 1 Service Action Required LED (Amber)
2. Host Link 2 Service Action Required LED (Amber)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)

13. Look at the Controller Service Action Required LED, and look at all of the controller-drive tray's Service Action Required LEDs. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window indicates an Optimal status** – Go to step 15.
 - **Any of the controller-drive tray's Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Check that the controller canister has been installed correctly. Reinstall the controller canister if necessary. Go to step 14.

NOTE If your storage array does not have an Optimal status, click the **Recovery Guru** toolbar button in the Array Management Window to determine if any other actions are required.

14. Did this action correct the problem?
 - **Yes** – Go to 15.
 - **No** – If the problem is not resolved, contact your Technical Support representative.
15. Complete any remaining Recovery Guru procedures, if necessary.
16. Using the LEDs and the storage management software, check the status of all of the trays in the storage array.
17. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to 18.
18. Remove the antistatic protection.
19. Gather support data about your updated storage array by using one of these methods:

SANtricity ES	From the Array Management Window toolbar, select Monitor >> Health >> Collect Support Data . Then name and specify a location on your system where you want to store the support bundle.
Command line interface	Enter the following command on the command line: <pre>save storageArray supportData</pre> <p>This command gathers comprehensive support data about the storage array. For more information about this command, refer to <i>Command Line Interface and Script Commands Programming Guide</i>. Running this command can temporarily impact performance on your storage array.</p>

Upgrading a Host Interface Card in the E5400 Controller-Drive Trays

ATTENTION Possible equipment damage – Only a qualified service technician should perform this procedure, or equipment damage might result.

Use this procedure to upgrade a host interface card (HIC). The new HIC can have Fibre Channel, or InfiniBand connections. Both controllers in a duplex controller-drive tray must have the same arrangement of HICs. Each controller must have the same type of HIC in the same relative position as the other controller.

NOTE IB host ports do not support the Data Assurance (DA) premium feature.

ATTENTION Potential loss of connectivity – If both controllers in a duplex controller-drive tray are powered up at the same time with different types of HICs, a mismatch results that causes both controllers to lock down (shut down and stop operating). If one controller is already running, and you replace the alternate controller with a controller that has a different HIC, only the replacement controller locks down, and the running controller remains operational.

Before you upgrade an HIC, gather antistatic protection, a new HIC, and the controller air blocker. If you are changing your current configuration, you might need to replace these items in addition to the HIC:

- Small Form-factor Pluggable (SFP) transceivers.
- Host bus adapters or host channel adapters.
- Cables – InfiniBand uses copper cable, and Fibre Channel uses copper cable or fiber-optic cable.
- The correct HIC subplate for the front of the controller.

ATTENTION Possible hardware damage – If you perform this procedure with the power turned on, the equipment might overheat if the controller slot is left open for more than three minutes. To prevent the possibility of overheating, you must insert the controller air blocker into the controller slot when servicing the controller.

Removing the Host Interface Card from the E5412 or E5424 Controller-Drive Tray

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES

From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.


Command line interface

Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

Figure 58 Controller Positions in the E5412 Controller-Drive Tray and the E5424 Controller-Drive Tray

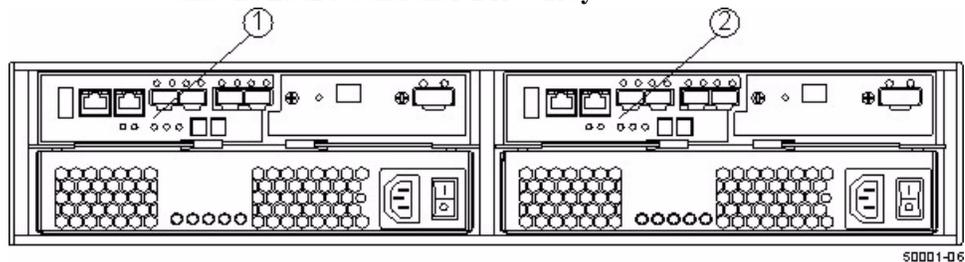

1. Controller A

2. Controller B

3. Put on antistatic protection.

ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.
5. Use one of the following options to place controller A offline.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [a]
availability=offline";

In this command,
<DNS-network-name-or-IP-address> is the applicable address.

ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.

Figure 59 Controller LEDs

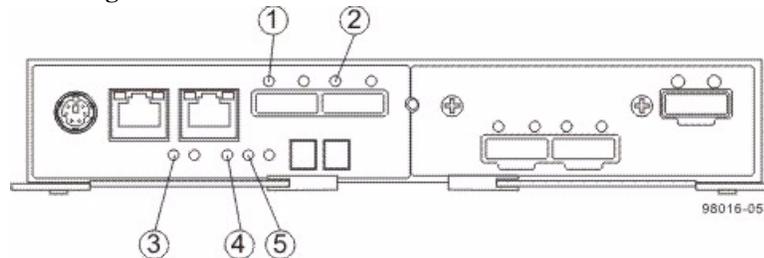

1. Host Link 1 Service Action Required LED (Amber)
2. Host Link 2 Service Action Required LED (Amber)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)


6. Disconnect the following cables from the controller canister that contains the HIC you are replacing.
 - Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab. If the storage array is running while you perform this replacement, do not disturb the second controller canister.

7. Remove the controller canister from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.

Figure 60 Removing a Controller Canister

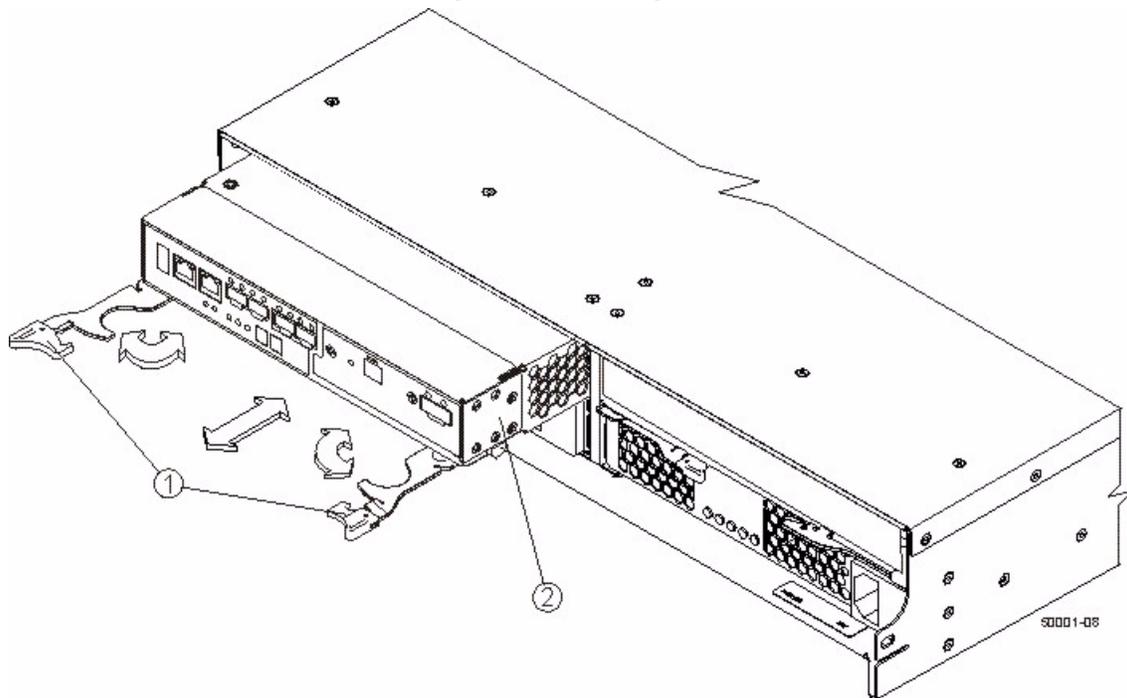


1. Release Levers
2. Controller Canister

8. Set the controller canister on a flat, static-free surface with the release levers up.

ATTENTION Possible equipment damage – The controller slot cannot remain open for more than three minutes because of the possibility of overheating the equipment. The controller air blocker fills the controller slot so that the equipment will not overheat.


9. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 61 Controller Air Blocker

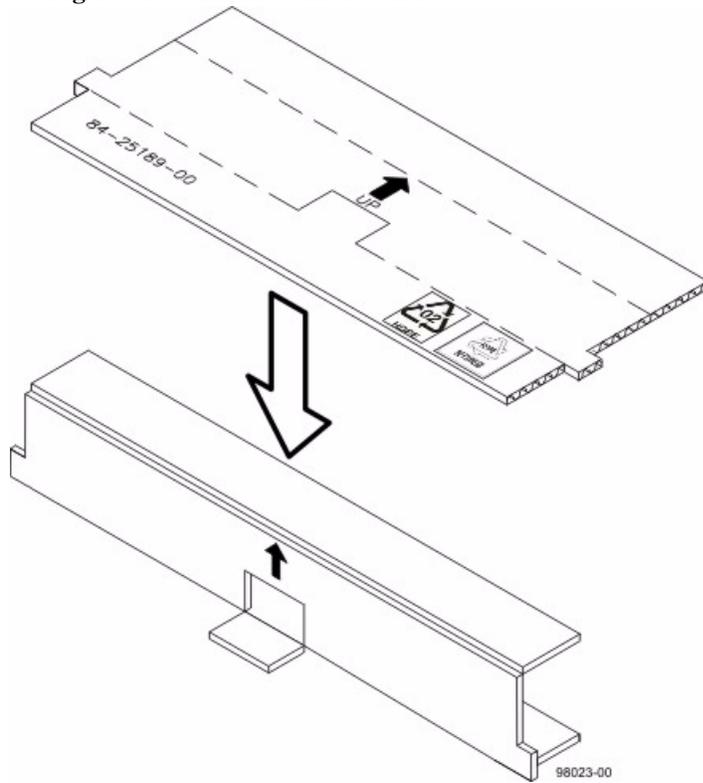


10. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 62 Inserting the Controller Air Blocker into the Open Controller Slot

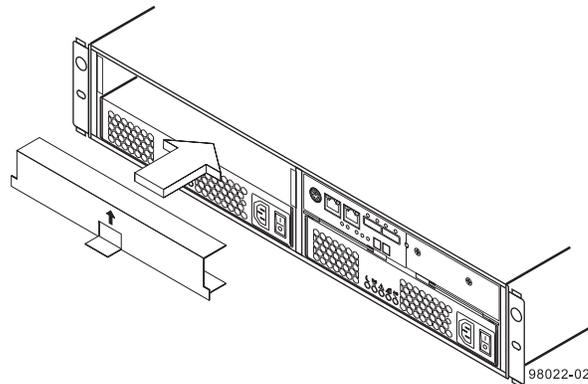

11. On the controller canister, press down on both of the top cover latch buttons, and slide the top cover to the rear. Remove the top cover.

Figure 63 Host Interface Card Replacement

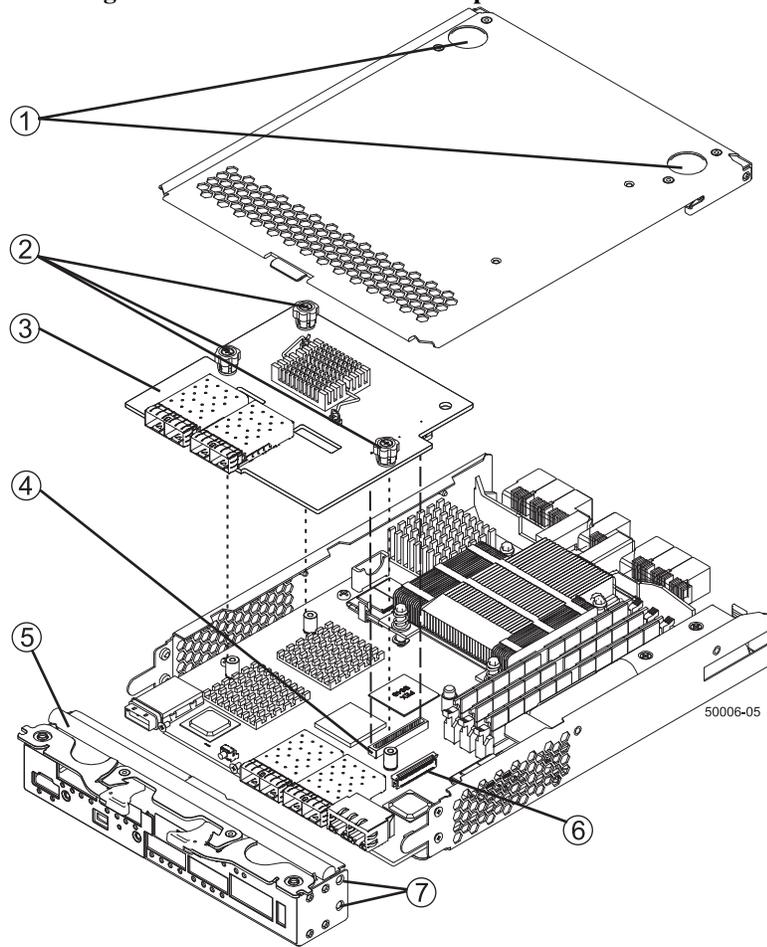

1. Top Cover Latch Buttons
2. HIC Thumbscrews
3. Host Interface Card
4. HIC Interface Connector
5. Front Bezel
6. Zero Insertion Force (ZIF) Socket
7. Front Bezel Screws

12. Disconnect the front bezel flex harness by gently opening the zero insertion force (ZIF) socket.

NOTE The ZIF socket is very fragile and is easily broken. Either use your fingers or a screwdriver to gently pull the ZIF socket open.

13. Remove the screws holding the front bezel to the controller canister with a phillips screwdriver.

NOTE The front bezel can suddenly pop loose and cause damage to either the front bezel flex harness or the zero insertion force (ZIF) socket that is attached to the controller card. Make sure that you gently move the front bezel away from the controller canister to allow access to the HIC.

14. Remove the front bezel from the controller canister, carefully working it from side-to-side until you can slide it off and gain access to the HIC.
15. Loosen the HIC thumbscrews that secure the HIC to the controller card.

NOTE If the thumbscrews were overtightened, you may use a phillips screwdriver to help you loosen them.

16. Gently disengage the HIC from the controller card, and remove the HIC.

NOTE The connector is located on the edge of the HIC next to the thumbscrews.

17. If you are changing the HIC type, remove the HIC subplate from the front bezel.
18. Place the HIC that you removed on a static-free surface.
19. Go to "[Removing the Controller Canisters from the E5460 Controller-Drive Tray](#)" on page 99.

Removing the Controller Canisters from the E5460 Controller-Drive Tray

NOTE Before you remove the controller canisters, make sure that you set controller A offline, as described in the following steps, to make sure that all the data currently in the cache in controller A is successfully written to disk before the upgrade. This step also makes sure that the data currently in the cache in controller B is successfully written to disk before you turn off the power to both of the controller canisters.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

1. Gather support data about your storage array by using one of these methods:

SANtricity ES

From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.


Command line interface

Enter the following command on the command line:
`save storageArray supportData`

This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

2. Use the Locate function in the storage management software to identify the controller canisters to upgrade as shown in the following figure.

Figure 64 Controller Positions in the E5460 Controller-Drive Tray

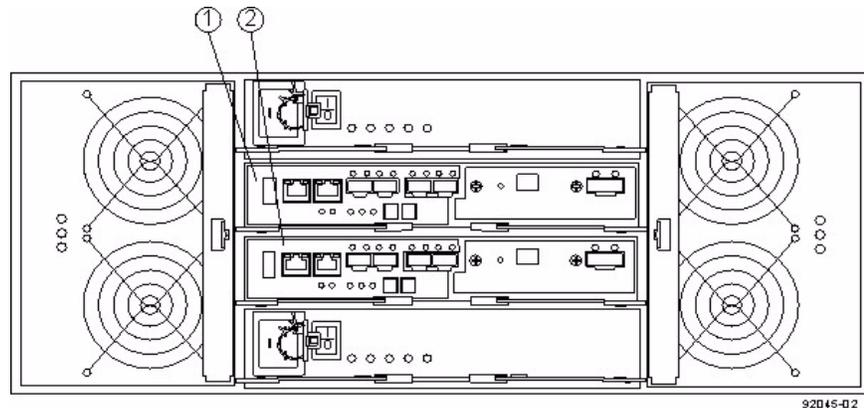

1. Controller A
2. Controller B

3. Put on antistatic protection.
4. Label each cable that is attached to each controller canister so that you can reconnect each cable correctly after the controller canisters are reinstalled.

ATTENTION Possible degraded performance – To prevent degraded performance, do not twist, fold, pinch, or step on the fiber-optic cables. Do not bend the fiber-optic cables tighter than a 5-cm (2-in.) radius.

5. Use one of the following options to place controller A offline.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Offline**.

Command line interface Enter the following command on the command line:
 smCLI
 <DNS-network-name-or-IP-address> -c
 "set controller [a]
 availability=offline";

In this command,
 <DNS-network-name-or-IP-address> is the applicable address.

ATTENTION Possible data loss or corruption – Wait for the blue Controller Service Action Allowed LED on controller A to come on before you turn off the power to either controller; otherwise, possible data loss or corruption might occur.

Figure 65 Controller LEDs

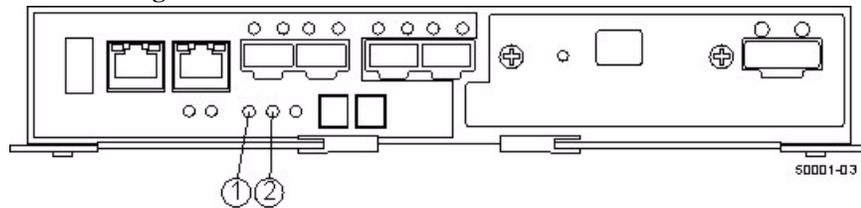

1. Controller Service Action Allowed LED (Blue)
2. Controller Service Action Required LED (Amber)


6. Disconnect the following cables from both controller canister that contains the HIC you are replacing.
 - Host interface cables
 - Drive interface cables
 - Ethernet cables

If fiber-optic cables are present, you can lift the two release levers and partially remove the controller canister. Opening these release levers makes it easier to press down on the fiber-optic cable release tab.

7. Remove both controller canisters from the controller-drive tray as shown in the following figure.
 - a. Unlock and pull out the release levers to release the controller canisters.
 - b. Using the release levers and your hands, pull both controller canisters out of the controller-drive tray.
 - c. Set each controller canister on a flat, static-free surface near the controller-drive tray. Position the controller canister so that you can access the top cover.

NOTE The following figure shows controller A being removed. You remove controller B in the same way.

Figure 66 Removing and Reinstalling a Controller Canister

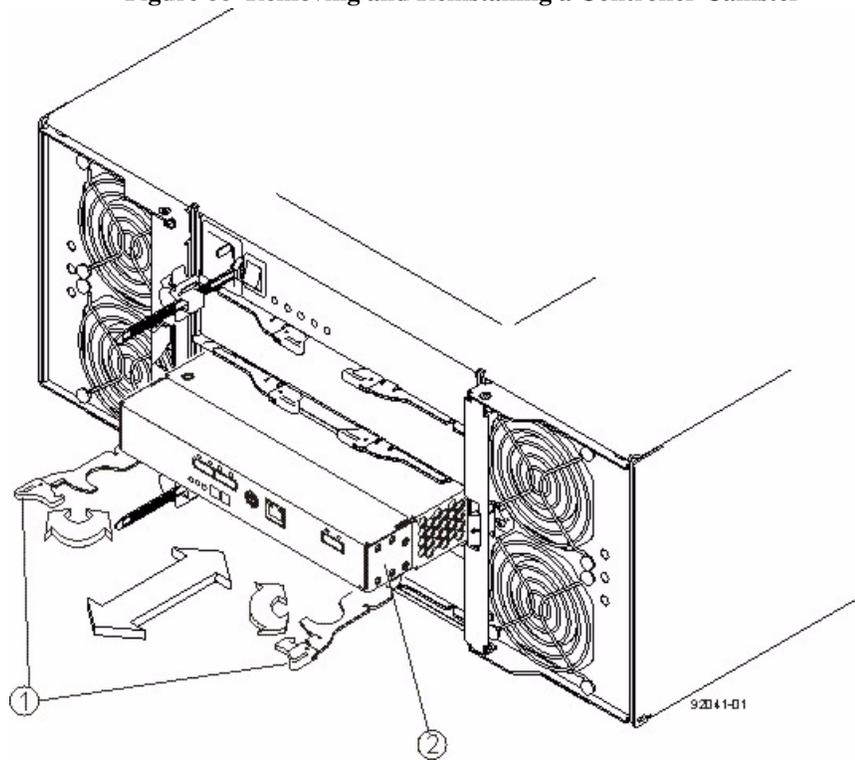


1. Release Lever
2. Controller Canister

8. Set the controller canister on a flat, static-free surface with the release levers up.

ATTENTION Possible equipment damage – The controller slot cannot remain open for more than three minutes because of the possibility of overheating the equipment. The controller air blocker fills the controller slot so that the equipment will not overheat.


9. Prepare the controller air blocker by removing it from its packaging and folding it inward at right angles so it is ready to insert into the open controller slot.

Figure 67 Controller Air Blocker

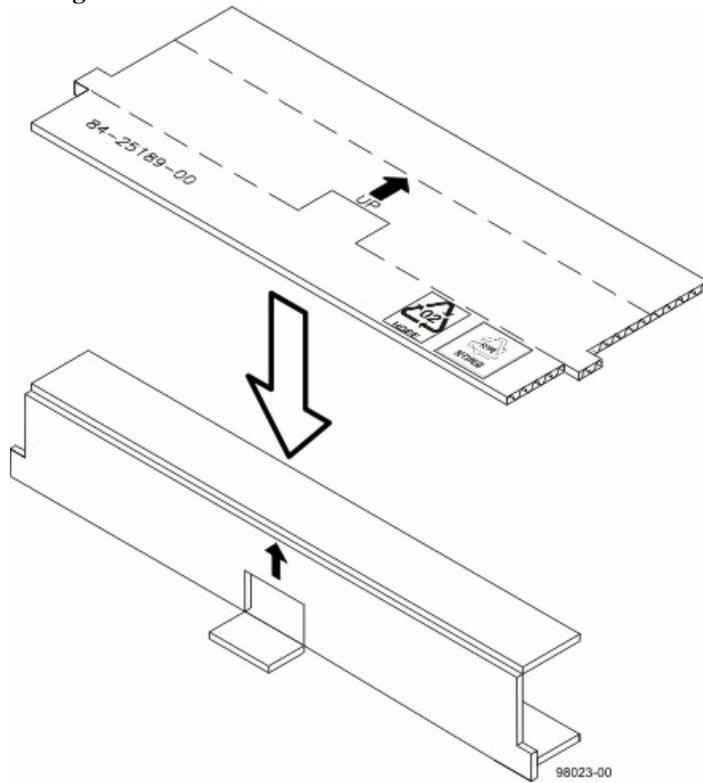


10. Insert the controller air blocker into the open controller slot to make sure that the correct airflow is maintained.

Figure 68 Inserting the Controller Air Blocker into the Open Controller Slot

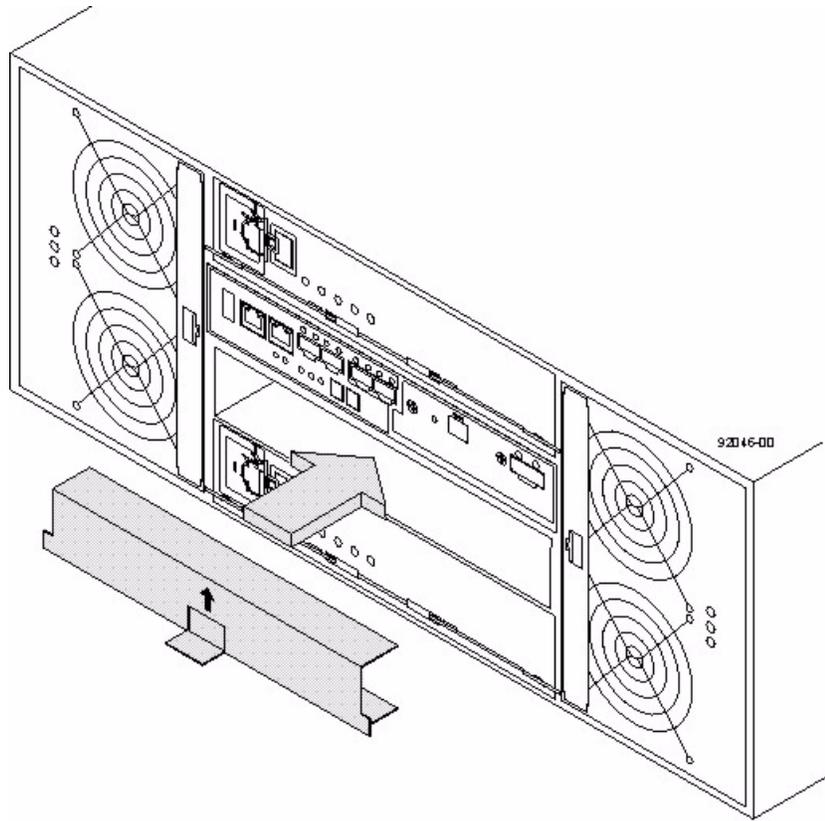

11. On the controller canister, press down on both of the top cover latch buttons, and slide the top cover to the rear. Remove the top cover.

Figure 69 Host Interface Card Replacement

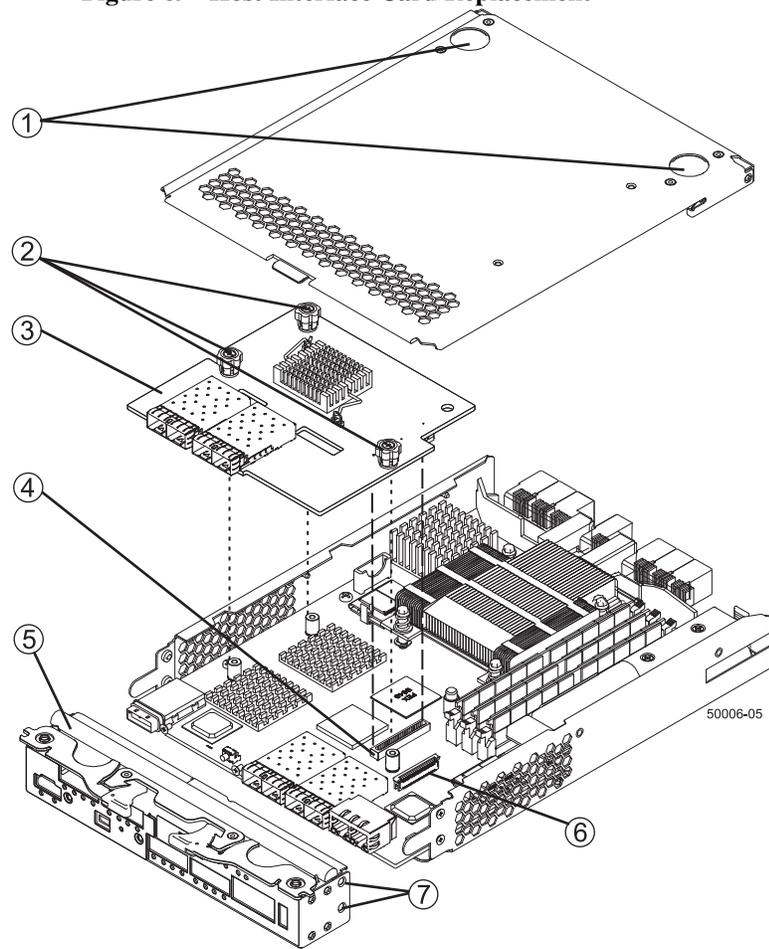

1. Top Cover Latch Buttons
2. HIC Thumbscrews
3. Host Interface Card
4. HIC Interface Connector
5. Front Bezel
6. Zero Insertion Force (ZIF) Socket
7. Front Bezel Screws
8. Disconnect the front bezel flex harness by gently opening the zero insertion force (ZIF) socket.

NOTE The ZIF socket is very fragile and is easily broken. Either use your fingers or a screwdriver to gently pull the ZIF socket open.

9. Remove the screws holding the front bezel to the controller canister with a phillips screwdriver.

NOTE The front bezel can suddenly pop loose and cause damage to either the front bezel flex harness or the zero insertion force (ZIF) socket that is attached to the controller card. Make sure that you gently move the front bezel away from the controller canister to allow access to the HIC.

10. Remove the front bezel from the controller canister, carefully working it from side-to-side until you can slide it off and gain access to the HIC.
11. Loosen the HIC thumbscrews that secure the HIC to the controller card.

NOTE If the thumbscrews were overtightened, you may use a phillips screwdriver to help you loosen them.

12. Gently disengage the HIC from the controller card, and remove the HIC.

NOTE The connector is located on the edge of the HIC next to the thumbscrews.

13. If you are changing the HIC type, remove the HIC subplate from the front bezel.
14. Place the HIC that you removed on a static-free surface.
15. Go to "[Removing the Controller Canisters from the E5460 Controller-Drive Tray](#)" on page 99.

Installing the Host Interface Card in the E5400 Controller-Drive Tray

NOTE Make sure that you have the correct host interface card (HIC), Small Form-factor Pluggable (SFP) transceivers, and host bus adapters or host channel adapters. Because you are replacing one HIC with a potentially different type of HIC, you might not be able to reuse the SFP transceivers. For more information, refer to the *Hardware Cabling Guide*.

1. Install the new HIC by gently connecting the HIC to the HIC interface connector. Do not scratch or bump any of the components on the bottom of the HIC or the top of the controller card.

ATTENTION Potential loss of connectivity – If both controllers in a duplex controller-drive tray are powered up at the same time with different types of HICs, a mismatch results that causes both controllers to lock down (shut down and stop operating). If one controller is already running, and you replace the alternate controller with a different HIC, then only the replacement controller locks down, and the running controller remains operational.

2. Install and tighten the HIC thumbscrews that secure the HIC to the controller card.

NOTE Tighten the thumbscrews by hand only. A screwdriver can overtighten the screws.

NOTE Make sure that the seven-segment display ribbon cable is still connected to the motherboard connector. If the ribbon cable is not connected, you must lift the center piece of the motherboard connector, and insert the ribbon cable into the motherboard connector.

3. Attach the replacement HIC subplate to the front bezel.
4. Align the connectors in the controller canister with the corresponding openings in the front bezel, and reattach the front bezel to the controller canister by reinserting the screws.
5. Reattach the bezel flex harness by gently lifting the latch on the ZIF socket, and inserting the ribbon cable into the ZIF socket. Then push the ZIF socket closed.
6. Reinstall the top cover on the controller canister.
7. If the SFP transceivers were present, reinstall them.
8. Remove the controller air blocker.
9. Slide the controller canister all the way into the controller-drive tray. Rotate the release levers towards the center of the controller canister to lock it into place.
10. Reconnect all of the cables that were disconnected when you removed the controller canister.
11. Use one of the following options to bring the controller online.


SANtricity ES From the Hardware pane in the Array Management Window, right-click the picture of the controller, and select **Advanced >> Place >> Online**.

Command line interface Enter the following command on the command line:
smCLI
<DNS-network-name-or-IP-address> -c
"set controller [<controller>]
availability=online";

In this command,
<DNS-network-name-or-IP-address> is the applicable address and <controller> is the applicable controller (A or B).

12. Look at the LEDs on the controller canister to make sure that the controller is rebooting correctly.

Figure 70 Controller LEDs

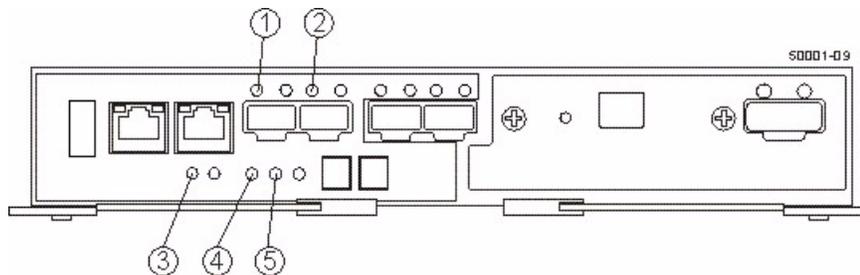

1. Host Link 1 Service Action Required LED (Green)
2. Host Link 2 Service Action Required LED (Green)
3. Battery Service Action Required LED (Amber)
4. Controller Service Action Allowed LED (Blue)
5. Controller Service Action Required LED (Amber)

The seven-segment display shows the sequence OS+ Sd+ blank- to indicate that the controller is performing Start-of-day (SOD) processing. After the controller successfully completes rebooting, the seven-segment display shows the tray ID matching the seven-segment display on the second controller. After this time, you can discover the controller by using the storage management software.

Depending on your type of HIC, you might receive an error message about a failed host I/O card. If this problem occurs, follow the instructions in the Recovery Guru.

13. Look at the Controller Service Action Required LED, and look at all of the controller-drive tray's Service Action Required LEDs. Based on the LED status, perform one of these actions:
 - **All of the Service Action Required LEDs are off, and the Array Management Window indicates an Optimal status** – Go to step 14.
 - **Any of the controller-drive tray's Service Action Required LEDs are on, or the Controller Service Action Required LED is on** – Check that the controller canister has been installed correctly. Reinstall the controller canister, if necessary. Go to step 13.
14. Did this action correct the problem?
 - **Yes** – Go to step 14.
 - **No** – If the problem is not resolved, contact your Technical Support representative.
15. Using the LEDs and the storage management software, check the status of all of the trays in the storage array.

16. Does any component have a Needs Attention status?
 - **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support representative.
 - **No** – Go to step [17](#).
17. Remove the antistatic protection.
18. Gather support data about your updated storage array by using one of these methods:

SANtricity ES From the Array Management Window toolbar, select **Monitor >> Health >> Collect Support Data**. Then name and specify a location on your system where you want to store the support bundle.

Command line interface Enter the following command on the command line:
`save storageArray supportData`
This command gathers comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*. Running this command can temporarily impact performance on your storage array.

The firmware upgrade utility helps you to upgrade your firmware quickly and easily. You can upgrade to controller firmware version 7.15 from any controller firmware version 6.14 or later. The firmware upgrade utility not only upgrades the controller firmware and NVSRAM, but it also migrates the drive configuration databases (DACstores) to the new format and size.

This utility also makes sure that these conditions are met for any storage array selected for upgrade:

- The storage array is at the supported levels of hardware firmware and controller firmware.
- The storage array has no existing conditions that prevent the upgrade from completing successfully.
- The storage array has the configuration and Major Event Log (MEL) saved before the upgrade, in case this information is needed for later use.
- The storage array is offline for the least amount of time possible.
- For most failover drivers to take effect, a host reboot is required, which means stopping user applications. Keep system quiescence or reboot time to a minimum.

If you are upgrading from controller firmware 6.14 or earlier to version 7.15, you must perform the activation portion of the upgrade offline. This restriction allows for the rewrite of the configuration database and keeps the down time to a minimum. For most failover drivers to take effect, you must reboot the host.

If you are upgrading from controller firmware version 7.10 to version 7.15, you can use the storage management software to perform this upgrade; the use of the firmware upgrade utility is not required. You can use the firmware upgrade utility to check the health of the storage array and to see if the storage array uses RAIDCore 2.

All devices should have Optimal status before you download the firmware. You can also check the current firmware level.

NOTE The `readme.txt` file, accessed by a link in the firmware upgrade utility, contains restrictions, limitations, recommendations, and instructions for using the firmware upgrade utility.

NOTE RAID Level 6 is a premium feature for the CDE3992 controller and the CDE3994 controller. You must enable RAID Level 6 with the feature key file before you can use the Dynamic RAID-Level Migration feature in storage management software. For more information on how to use the Dynamic RAID-Level Migration Feature, refer to the *Command Line Interface and Script Commands Programming Guide*.

Upgrade Instructions for the HP-UX OS

4

Use the procedures in this chapter to upgrade the storage management software on the HP-UX operating system.

System Requirements for HP-UX

Review these specifications to make sure that your system meets the minimum installation requirements.

Operating system version for I/O attached hosts	11.3
Processor support	Itanium 2, PA-RISC
Controller trays and controller-drive trays	<ul style="list-style-type: none">■ E2600■ CE4900■ E5400■ CE7900
Host adapters	<ul style="list-style-type: none">■ AB378A (4 Gb/s)■ AB379A (4 Gb/s)■ AH400A (8 Gb/s)■ AH401A (8 Gb/s)
Fibre Channel configurations	<ul style="list-style-type: none">■ Direct connect■ Fabric
JRE version	1.6.x
Rootboot supported?	Yes
SCSI driver	edisk version 1
I/O path failover	TPGS (11.31)
Preferred failover mode	ALUA
Node failover	None
Providers	None

The storage management software installation program does not verify the updates. Some updates might be superseded by other updates. For information about the latest updates, refer to

<http://www1.itrc.hp.com/service/patch/mainPage.do>.

NOTE On the web page from which you download the patch, click the **dependency** link to make sure that you install all required updates.

Make sure that the maximum kernel parameters are configured depending on the requirements as shown in the following table.

Table 1 HP-UX Storage Management Station – Kernel Configuration Requirements

Parameter	Description	Configuration
max_thread_proc 64	Maximum threads per process	1024
maxfiles	Soft file limit per process	2048
maxuser	Influences other parameters	256 or greater
ncallout	Number of pending timeouts	4144

Installing the Storage Management Software on the HP-UX OS

Use this procedure to install the storage management software packages on the HP-UX OS.

ATTENTION Possible loss of data – Downgrades from storage management software version 10.83 to a previous version can cause data loss and are not supported.

NOTE When you use the SMinstaller command to install the new software, earlier versions of the software are automatically removed as part of that process.

Modify these instructions as required for your specific installation.

1. Make sure that you have root privileges, which are required to install the software.
2. Insert the installation CD into the CD-ROM drive.
3. If necessary, mount the CD-ROM drive. In the example command that follows, the installation CD is mounted at /cdrom.

NOTE This mount point is shown here only as an example. You might need to modify this command for your operating system. If you need more information about mounting devices on your operating system, refer to the documentation that came with your operating system.

```
mount -o cdcase /dev/dsk/c#t#d0 /cdrom
```

4. Uncompress the `SMIA-HPUX-90.10.xx.xx.bin` file from the CD-ROM to an existing directory on your hard drive.
5. To change to the installation directory, type this command, and press **Enter**. In this command, `<install>` is the name of the directory where the installation files are located.

```
cd <install>
```

6. At the prompt, type this command, and press **Enter**. In this command, `SMIA-HPUX.bin` is the name of the installation program on the CD.

```
sh SMIA-HPUX.bin
```

After the software is loaded, the **Introduction** window appears.

7. Click **Next**.

The **License Agreement** window appears.

8. Select the option that accepts the terms of the License Agreement.
9. Click **Next**.

The **Select Installation Type** window appears.

10. The steps in this procedure describe a typical (full) installation. Based on the type of installation that you are performing, select one of these options.
 - **Typical (Full Installation)** – This selection, which is the default, installs all of the packages on the system. Choose this option if you do not know which installation type to select.
 - **Management Station** – This selection installs the software that is needed to configure, manage, and monitor a storage array. This option is for your workstation or management computer.
 - **Host** – This selection installs the storage array server software. Use this type of installation for the host (server) that is connected to the storage array.
 - **Custom** – This selection lets you customize the features to be installed.

NOTE The target directory for installing the `SMclient` utility must be the root directory of the host system. Do not try to force the installation program to install the `SMclient` utility in a different location.

The selected installation type is selected in blue text.

11. Click **Next**.

The **Pre-Installation Summary** window appears.

12. Click **Install**.

The **Installing** window appears while the software is loading. When the software is loaded, the **Install Complete** window appears.

NOTE If you cancel an installation before the installation completes or while the progress bar is still visible, the installation stops prematurely. The software creates an installation log. You must manually uninstall the software.

If you cancel the installation *before* the progress bar is visible, you do not need to uninstall the software.

13. To exit the installation program, click **Done**.

Several files and program packages are installed to the `/opt/SM9` directory and the `/opt/StorageManager` directory.

Checking the Installation on the HP-UX OS

After you have completed installing the software packages, check that they installed successfully.

1. At the prompt, type this command, and press **Enter**:

```
swlist | grep SM*
```

This command lists the storage management software packages that you installed.

2. At the prompt, type this command, and press **Enter**:

```
swverify -v <package name>
```

In this command, `<package name>` is the name of a package that you installed.

3. Note any failure reported.
4. For each package you installed, repeat step 2 through step 3.
5. Was the installation successful (no problems were reported)?
 - **Yes** – Go to step 6.
 - **No** – From the `/opt/StorageManager` directory, review any error messages from the error message log, and correct the problem. If the problem persists, contact your Technical Support representative.
6. For each system that is used as a storage management station or host, perform the software installation and removal procedures that are described in this chapter.

7. Start the storage management software. At the prompt, type this command, and press **Enter**:

```
SMclient
```

After the client software starts, the Enterprise Management Window and these dialogs appear:

- **Select Addition Method**
- **Enterprise Management Window Task Assistant**

Refer to the online help topics in storage management software for more information about how to manage your storage array.

Uninstalling the Storage Management Software on the HP-UX OS

If you have installed the storage management software but you have determined that you need to uninstall it, perform this procedure.

NOTE Uninstalling the software is not the same as removing previous versions of the software.

1. To change to the **Uninstall** directory, from the `/opt/StorageManager` directory, type this command, and press **Enter**:

```
cd "Uninstall SANtricity"
```

2. From the `Uninstall SANtricity` directory, type this command, and press **Enter**:

```
cd ./Uninstall_SANtricity
```

The **Uninstall** window appears.

3. Click **Next**.

The **Uninstall Options** window appears. You can choose either to perform a complete uninstallation or to select specific packages to uninstall individually.

4. Either select the packages that you want to uninstall, or select a complete uninstallation.
5. Click **Next**.

While the software is uninstalling, the **Uninstall** window appears. When the procedure has completed, the **Uninstall Complete** window appears.

6. Click **Done**.

The uninstallation process is complete.

Upgrade Instructions for the Solaris OS

5

Use the procedures in this chapter to upgrade the storage management software on the Solaris operating system.

Supported Components for Solaris

Review these specifications to make sure that your system meets the minimum general requirements.

NOTE Solaris supports only Fibre Channel host connections.

Operating system version for I/O attached hosts	<ul style="list-style-type: none">■ Solaris 10 u9■ Solaris 11
Processor support	Sun Sparc, Intel Xeon 32 bit, Intel Xeon 64 bit, AMD Opteron 32 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	<ul style="list-style-type: none">■ E2600■ CE4900■ E5400■ CE7900

Host adapters	<p>Emulex</p> <ul style="list-style-type: none"> ■ LP11000, LP11002 ■ LPE12000/12002 <p>Qlogic</p> <ul style="list-style-type: none"> ■ QLA246x ■ QLE246x ■ QLE2560/2562 <p>Sun</p> <ul style="list-style-type: none"> ■ SG-XPCI1FC-QF4 (QLA2460) ■ SG-XPCI2FC-QF4 (QLA2462) ■ SG-XPCIE1FC-QF4 (QLE2460) ■ SG-XPCIE2FC-QF4 (QLE2462) ■ SG-XPCIE1FC-QF8-N (QLe2560) ■ SG-XPCIE2FC-QF8-N (QLe2562) ■ SG-XPCI1FC-EM4 (LP11000) ■ SG-XPCI2FC-EM4 (LP11002) ■ SG-XPCIE1FC-EM4 (Lpe11000) ■ SG-XPCIE2FC-EM4 (Lpe11002) ■ SG-XPCIE2FC-EM8-Z Dual Port (LPe12002) ■ SG-XPCIE1FC-EM8-Z Single Port (LPe12000)
Fibre Channel configurations	<ul style="list-style-type: none"> ■ Direct connect ■ Fabric
JRE version	1.6.x
Rootboot supported?	Yes, where supported by the HBA
SCSI driver	sd/ssd/Leadville
I/O path failover	<ul style="list-style-type: none"> ■ Solaris 10 MPxIO ■ Solaris 11 MPxIO <p>ALUA is supported only on Solaris 11</p>

Preferred failover mode	<ul style="list-style-type: none"> ■ Solaris 10 u9 non-TPGS ■ Solaris 11 TPGS/ALUA
Node failover	SunCluster 3.2 or latest
Providers	SMI

Installing the Storage Management Software on the Solaris OS

Use this procedure to install the storage management software packages on the Solaris OS. Refer to the *Failover Drivers User Guide* for information about failover driver installation and configuration on the Solaris OS.

ATTENTION Possible loss of data – Downgrades from storage management software version 10.83 to a previous version can cause data loss and are not supported.

Modify these instructions as required for your specific installation.

1. Make sure that you have root privileges, which are required to install the software.
2. Insert the installation CD into the CD-ROM drive.
3. If necessary, mount the CD-ROM drive;. In this procedure, the installation CD is mounted at `/mnt/cdrom`.

NOTE This mount point is shown here only as an example. You might need to modify this command for your operating system. If you need more information about mounting devices on your operating system, refer to the documentation that came with your operating system.

```
mount -F hsfs -r /dev/c#t#d0s2 /mnt/cdrom
```

4. To change to the CD-ROM drive, type this command, and press **Enter**. In this command, `<cdrom>` is the name of the CD-ROM drive where the CD is mounted.

```
cd <cdrom>
```

5. Uncompress the installation packages from the CD-ROM to an existing folder on your hard drive.
6. To change to the installation directory, type this command, and press **Enter**. In this command, `<install>` is the name of the directory where the installation files are located.

```
cd <install>
```

7. At the prompt, type this command, and press **Enter**. In this command, `SMIA-SOL.bin` is the name of the installation program on the CD.

`SMIA-SOL.bin`

After the software is loaded, the **Introduction** window appears.

8. Click **Next**.

The **License Agreement** window appears.

9. Select the option that accepts the terms of the License Agreement.
10. Click **Next**.

The **Select Installation Type** window appears.

11. The steps in this procedure describe a typical (full) installation. Based on the type of installation you are performing, select one of these options.

- **Typical (Full Installation)** – This selection, which is the default, installs all of the packages on the system. Choose this option if you do not know which installation type to select.
- **Management Station** – This selection installs the software that is needed to configure, manage, and monitor a storage array. This option is for your workstation or management computer.
- **Host** – This selection installs the storage array server software. Use this type of installation for the host (server) that is connected to the storage array.
- **Custom** – This selection lets you customize the features to be installed.

NOTE The target directory for installing the `SMclient` utility must be the root directory of the host system. Do not try to force the installation program to install the `SMclient` utility in a different location.

The selected installation type is selected in blue text.

12. Click **Next**.

The **Pre-Installation Summary** window appears.

13. Click **Install**.

The **Installing** window appears while the software is loading. When the software is loaded, the **Install Complete** window appears.

NOTE If you cancel an installation before the installation completes or while the progress bar is still visible, the installation stops prematurely. The software creates an installation log. You must manually uninstall the software.

If you cancel the installation *before* the progress bar is visible, you do not need to uninstall the software.

14. To exit the installation program, click **Done**.

Several files and program packages are installed to the `/opt/SM9` directory and the `/opt/StorageManager` directory.

Checking the Installation on the Solaris OS

After you have completed installing the software packages, check that they installed successfully.

1. At the prompt, type this command, and press **Enter**.

```
pkginfo -l <package name>
```

In this command, `<package name>` is the name of a package that you installed.

- a. To determine which software packages reside on your system, type this command at the prompt.

```
pkginfo | grep SM
```

Look for the storage management software packages, such as `SMagent`, `SMclient`, `SMutil`, and `SMruntime`.

- b. To determine whether the RDAC driver package resides on your system, type this command at the prompt. In this command, `<rdac>` is the RDAC package name.

```
pkginfo | grep <rdac>
```

Look for the storage management softwareRDAC package.

2. From the `/opt/StorageManager` directory, review any error messages from the error message log, and correct the problem. If the problem persists, contact your Technical Support representative.
3. For each package you installed, repeat step 1 through step 2.

4. Start the storage management software. At the prompt, type this command, and press **Enter**:

```
SMclient
```

After the client software starts, the Enterprise Management Window and these dialogs appear:

- **Select Addition Method**
- **Enterprise Management Window Task Assistant**

Refer to the online help topics in storage management software for more information about how to manage your storage array.

Uninstalling the Storage Management Software on the Solaris OS

If you have installed the storage management software but you have determined that you must uninstall it, perform this procedure.

NOTE Uninstalling the software is not the same as removing previous versions of the software.

1. To change to the `Uninstall` directory, from the `/opt/StorageManager` directory, type this command, and press **Enter**:

```
cd "Uninstall SANtricity"
```

2. From the `Uninstall SANtricity` directory, type this command, and press **Enter**:

```
./Uninstall_SANtricity
```

The **Uninstall** window appears.

3. Click **Next**.

The **Uninstall Options** window appears. You can choose either to perform a complete uninstallation or to select specific packages to uninstall individually.

4. Either select the packages that you want to uninstall, or select a complete uninstallation.
5. Click **Next**.

While the software is uninstalling, the **Uninstall** window appears. When the procedure has completed, the **Uninstall Complete** window appears.

6. Click **Done**.

The uninstallation process is complete.

Upgrade Instructions for the Linux OS

6

Use the procedures in this chapter to upgrade the storage management software on the Linux operating system.

System Requirements for Linux

Review these specifications to make sure that your system meets the minimum general requirements.

Operating system version for I/O attached hosts	<ul style="list-style-type: none">■ RHEL 5.7■ RHEL 6.1■ SLES 10.4■ SLES 11.1
Operating system version for management stations only (no I/O attached hosts)	<ul style="list-style-type: none">■ RH5■ RH6■ SLES 10 client■ SLES 11 client
Processor support	Intel Xeon 32 bit, Intel Xeon 64 bit, AMD Opteron 32 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	<ul style="list-style-type: none">■ E2600■ CE4900■ E5400■ CE7900

Host adapters	<p>Emulex</p> <ul style="list-style-type: none"> ■ LP11000, LP11002 ■ LP1150 ■ LPe11000, LPe11002 ■ LPe1150 ■ LPe12000/12002 ■ LPe1250 <p>Qlogic</p> <ul style="list-style-type: none"> ■ QLA246x ■ QLE246x ■ QLE256 <p>Brocade</p> <ul style="list-style-type: none"> ■ 415 ■ 425 ■ 815, ■ 825
SAS host adapters	<p>LSI</p> <ul style="list-style-type: none"> ■ 3801E ■ 3801X ■ 3442E ■ 3442X ■ 9200-8e

iSCSI host connections	<p>1 Gb/s</p> <ul style="list-style-type: none"> ■ Broadcom NetXtreme II 5708 ■ Broadcom NetXtreme II 5709 ■ Broadcom NetXtreme LF 5721 ■ Intel PRO/1000MT Dual Port ■ Intel PRO/1000PT Dual port <p>10 Gb/s</p> <ul style="list-style-type: none"> ■ Brocade 1020 ■ Qlogic 8142 ■ Emulex OCE10102 ■ Intel 10Gb XSFR ■ Intel 10Gb AFDA Server Adapter ■ Broadcom NetXtreme II 57712 ■ Broadcom NetXtreme II 57711
Fibre Channel configurations	Fabric
JRE version	1.6.x
Rootboot supported?	Yes, where supported by the HBA (not with iSCSI host connections)
SCSI driver	sd_mod
I/O path failover	<p>DMMP (RDAC Handler with ALUA support)</p> <p>For ALUA support, you must install a patch for RHEL 6.1 or SLES 11.1. Refer to the <i>Failover Drivers Guide</i> for instruction to install the requisite patches.</p> <p>ALUA is supported without a patch for RHEL 6.2 and SLES 11.2</p>
Preferred failover mode	DMMP-ALUA
Node failover	<ul style="list-style-type: none"> ■ SIOS (SteelEye) LifeKeeper ■ Native RH Clustering
Providers	SMI

System Requirements for Linux with InfiniBand

Operating system version for I/O attached hosts	<ul style="list-style-type: none"> ■ RHEL 6.1 ■ SLES 5.6
Operating system version for management stations only (no I/O attached hosts)	<ul style="list-style-type: none"> ■ RH5 ■ RH6 ■ SLES 10 client ■ SLES 11 client
Processor support	Intel Xeon 32 bit, Intel Xeon 64 bit, AMD Opteron 32 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	E5400
Host adapters	ConnectX IB QDR PCI Express Adapter Cards <ul style="list-style-type: none"> ■ MHQH19-XSC ■ MHQH19-XTC ■ MHQH29-XSC ■ MHQH29-XTC
	ConnectX-2 QDR PCI Express Adapter Cards <ul style="list-style-type: none"> ■ MHQH19B-XSR ■ MHQH19B-XTR ■ MHQH29B-XSR ■ MHQH29B-XTR ■ MHQH19C-XSR ■ MHQH19C-XTR ■ MHQH29C-XSR ■ MHQH29C-XTR
	ConnectX-3 QDR and FDR PCI Express Adapter Cards <ul style="list-style-type: none"> ■ MCX353A-QCAT ■ MCX353A-FCAT ■ MCX354A-QCAT ■ MCX354A-FCAT

Switches	Mellanox Switches <ul style="list-style-type: none"> ■ SX6036 ■ SX6536 ■ IS5035 ■ IS500 ■ IS5200 ■ IS5300 ■ IS5600 ■ 4036 ■ 4036E ■ 4200 ■ 4799 Qlogic Switches <ul style="list-style-type: none"> ■ 12300 ■ 12800
Fibre Channel configurations	Fabric
JRE version	1.6.x
Rootboot supported?	No
SCSI driver	Mellanox OFED driver
I/O path failover	DMMP only - ALUA
Preferred failover mode	ALUA
Node failover	Lustre
Providers	None

Installing the Storage Management Software on the Linux OS

Use this procedure to install the storage management software packages for the Linux OS. You also can perform the software installation procedure by using a package manager that is compatible with Red Hat Package Manager (RPM) and is graphical user interface (GUI) based.

ATTENTION Possible loss of data – Downgrades from storage management software version 10.83 to a previous version can cause data loss and are not supported.

NOTE Refer to the *storage management software Failover Drivers User Guide* for information about failover driver installation and configuration on the Linux OS. You must complete manual procedures for correct failover driver installation.

NOTE The storage management software supports the use of the storage array as a boot device.

Modify these instructions as required for your specific installation.

1. Make sure that you have root privileges, which are required to install the software.
2. Insert the installation CD into the CD-ROM drive.
3. If necessary, mount the CD-ROM drive. In the example command that follows, the installation CD is mounted at `/mnt`.

NOTE This mount point is shown here only as an example. You might need to modify this command for your operating system. If you need more information about mounting devices on your operating system, refer to the documentation that came with your operating system.

```
mount /dev/hda /mnt
```

4. At the prompt, type this command, and press **Enter**. In this command, `SMIA-LINUX.bin` is the name of the installation program on the CD.

```
sh SMIA-LINUX.bin
```

After the software is loaded, the **Introduction** window appears.

5. Click **Next**.

The **License Agreement** window appears.

6. Select the option that accepts the terms of the License Agreement.
7. Click **Next**.

The **Select Installation Type** window appears.

8. The steps in this procedure describe a typical (full) installation. Based on the type of installation you are performing, select one of these options:
 - **Typical (Full Installation)** – This selection, which is the default, installs all of the packages on the system. Choose this option if you do not know which installation type to select.
 - **Management Station** – This selection installs the software that is needed to configure, manage, and monitor a storage array. This option is for your workstation or management computer.
 - **Host** – This selection installs the storage array server software. Use this type of installation for the host (server) that is connected to the storage array.
 - **Custom** – This selection lets you customize the features to be installed.

The selected installation type is selected in blue text.

9. Click **Next**.

The **Multi-Path Driver Warning** dialog appears.

10. Click **Next**.

The **Pre-Installation Summary** window appears.

11. Click **Install**.

The **Installing** window appears while the software is loading. When the software is loaded, the **Install Complete** window appears.

NOTE If you cancel an installation before the installation completes or while the progress bar is still visible, the installation stops prematurely. The software creates an installation log. You must manually uninstall the software.

If you cancel the installation *before* the progress bar is visible, you do not need to uninstall the software.

12. To exit the installation program, click **Done**.

Several files and program packages are installed to the `/opt/SM9` directory and the `/opt/StorageManager` directory.

13. Do you want to manually install the RDAC package?
 - **Yes** – Go to step 14.
 - **No** – Go to [“Checking the Installation on the Linux OS.”](#)

14. Install the RDAC package.

- a. While in the `/opt/StorageManager` directory, type this command at the prompt, and press **Enter**. In this command, `<rdac-Package-name>` is the name of the RDAC package.

```
tar -xvf <rdac-Package-name>.tar
```

The source files uncompress into the `linuxrdac` directory (2.4 kernel) or the `linuxrdac-09.01.Bx.xx` directory (2.6 kernel).

- b. To change to the directory where the RDAC source is located, type the command for your version of the kernel, and press **Enter**.

2.4 kernel:

```
cd linuxrdac
```

2.6 kernel:

```
cd linuxrdac-09.01.Bx.xx
```

- c. To clean the directory, type this command, and press **Enter**.

```
make clean
```

- d. To compile the modules, type this command, and press **Enter**:

```
make
```

- e. To install RDAC, type this command, and press **Enter**.

```
make install
```

- f. After the `make install` process has completed, modify your bootloader configuration file. For more information about how to modify the bootloader configuration file, refer to the output from the `make install` command for Linux RDAC.

- g. Read the `readme.txt` file in the `linuxrdac` directory to complete the RDAC installation process.

NOTE For further details about installing RDAC, refer to the *Failover Drivers User Guide*.

Checking the Installation on the Linux OS

After you have completed installing the software packages, make sure that they installed successfully.

1. At the prompt, type this command, and press **Enter**:

```
rpm | grep SM*
```

2. At the prompt, type this command, and press **Enter**. In this command, *<package name>* is the name of a package that you installed.

```
rpm -qi <package name>
```

3. Note any problem that is reported.
4. For each package you installed, repeat step 2 through step 3.
5. Was the installation successful (no problems were reported)?
 - **Yes** – Go to step 6.
 - **No** – From the `/opt/StorageManager` directory, review any error messages from the error message log, and correct the problem. If the problem persists, contact your Technical Support representative.
6. For each system that is used as a storage management station or host, perform the software installation and removal procedures that are described in this chapter.
7. Start the storage management software. At the prompt, type this command, and press **Enter**:

```
SMclient
```

After the client software starts, the Enterprise Management Window and these dialogs appear:

- **Select Addition Method**
- **Enterprise Management Window Task Assistant**

Refer to the online help topics in storage management software for more information about how to manage your storage array.

Uninstalling Storage Management Software on the Linux OS

If you have installed the storage management software but you have determined that you need to uninstall it, perform this procedure.

NOTE Uninstalling the software is not the same as removing previous versions of the software.

1. To change to the Uninstall directory, from the `/opt/StorageManager` directory, type this command, and press **Enter**:

```
cd "Uninstall SANtricity"
```

2. From the `Uninstall SANtricity` directory, type this command, and press **Enter**:

```
./Uninstall_SANtricity
```

The **Uninstall** window appears.

3. Click **Next**.

The **Uninstall Options** window appears. You can choose either to perform a complete uninstallation or to select specific packages to uninstall individually.

4. Either select the packages that you want to uninstall, or select a complete uninstallation.
5. Click **Next**.

The **Multi-Path Driver Warning** dialog appears.

6. Click **Next**.

While the software is uninstalling, the **Uninstall** window appears. When the procedure has completed, the **Uninstall Complete** window appears.

7. Manually uninstall the RDAC package.
 - a. Navigate to the `/opt/StorageManager/linuxrdac` directory.

NOTE In this command, `/opt/StorageManager/linuxrdac` is the directory in which the RDAC files are stored.

- b. To uninstall RDAC, type this command, and press **Enter**:

```
make uninstall
```

- c. To clean the directory, type this command, and press **Enter**:

```
make clean
```

8. To completely uninstall storage management software, reverse the changes you made in the boot-loader configuration file.
9. Click **Done**.

The uninstallation process is complete.

Upgrade Instructions for the Windows OS

7

Use the procedures in this chapter to upgrade the storage management software on the Windows operating system.

System Requirements for Windows Server 2003 and XP

Review these specifications to make sure that your system meets the minimum general requirements.

Operating system version for I/O attached hosts	Windows Server 2003 SP2, R2 <ul style="list-style-type: none">■ Standard edition■ Enterprise Edition■ Datacenter edition■ Web edition (client only, no failover supported)
Operating system version for management stations only (no I/O attached hosts)	XP Professional SP3 (or latest edition)
Processor support	Intel Xeon 32 bit, Intel Xeon 64 bit, AMD Opteron 32 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	<ul style="list-style-type: none">■ E2600■ CE4900■ E5400■ CE7900

Fibre Channel host adapters	<p>Emulex</p> <ul style="list-style-type: none"> ■ LP11000, LP11000DC ■ LP101 ■ LP1150 ■ LPe11000, LPe11002 ■ LPe1150 ■ LPe12000/12002 ■ LPe1250
	<p>Qlogic</p> <ul style="list-style-type: none"> ■ QLA246x ■ QLE246x ■ QLE2560/2562
	<p>Brocade</p> <ul style="list-style-type: none"> ■ 415 ■ 425 ■ 815, ■ 825
SAS host adapters	<p>LSI</p> <ul style="list-style-type: none"> ■ 3801E ■ 3801X ■ 3442E ■ 3442X ■ 9200-8e

iSCSI host connections	1 Gb/s <ul style="list-style-type: none"> ■ Broadcom NetXtreme II 5708 ■ Broadcom NetXtreme II 5709 ■ Broadcom NetXtreme LF 5721 ■ Intel PRO/1000MT Dual Port ■ Intel PRO/1000PT Dual port 10 Gb/s <ul style="list-style-type: none"> ■ Brocade 1020 ■ Qlogic 8142 ■ Intel 10Gb XSFR ■ Intel 10Gb AFDA Server Adapter ■ Broadcom NetXtreme II 57712
Fibre Channel configurations	Fabric
JRE version	1.6.x
Rootboot supported?	Yes, where supported by the HBA (not with iSCSI host connections)
SCSI driver	Storport
I/O path failover	Microsoft MPIO with NetApp DSM
Preferred failover mode	MPIO
Node failover	MicroSoft Cluster Server (8nodes)
Providers	<ul style="list-style-type: none"> ■ SM ■ VDS/VSS

NOTE Typically, the `Common Files` directory is on the boot drive under the `Program Files` directory. Although you can choose where to put the `SMclient` software, the Java runtime environment (JRE) for the software is automatically installed in the `Common Files` directory.

- Administrator or equivalent permission
- An Ethernet network interface card (NIC)
- A CD-ROM drive or a DVD-ROM drive
- A mouse or similar pointing device
- An advanced graphics port (AGP) video card (preferred) or a peripheral component interconnect (PCI) video card

NOTE Many dedicated servers are not designed to run graphic-intensive software. If your system has video problems while running the storage management software, you might need to upgrade the server video card.

Computers that use system memory for video memory are not recommended for use with the storage management software.

System Requirements for Windows Server 2008, Hyper-V and Vista

Operating system version for I/O attached hosts	<p>Windows Server 2008 R2 SP1 (64-bit only)</p> <ul style="list-style-type: none"> ■ Standard server and core ■ Enterprise server and core ■ Datacenter server and core ■ Web edition (client only, no failover supported) ■ Foundation server and core <p>Hyper-V Server 2008 R2 SP1 (standalone)</p> <p>Windows Server 2008 R2 SP1 Hyper-V (add on to 2008)</p> <p>Refer to the applicable Microsoft documentation for guest operating systems supported on Hyper-V</p>
Operating system version for management stations only (no I/O attached hosts)	<ul style="list-style-type: none"> ■ Windows Vista SP1 ■ Windows 7 ■ Windows XP
Processor Support	Intel Xeon 64 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	<ul style="list-style-type: none"> ■ E2600 ■ CE4900 ■ E5400 ■ CE7900

Fibre Channel host adapters	Emulex
	<ul style="list-style-type: none"> ■ LP11000, LP11000DC ■ LP101 ■ LP1150 ■ LPe11000, LPe11002 ■ LPe1150 ■ LPe12000/12002 ■ LPe1250
	Qlogic
SAS host adapters	<ul style="list-style-type: none"> ■ QLA246x ■ QLE246x ■ QLE2560/2562
	Brocade
	<ul style="list-style-type: none"> ■ 415 ■ 425 ■ 815, ■ 825
	LSI
	<ul style="list-style-type: none"> ■ 3801E ■ 3801X ■ 3442E ■ 3442X ■ SAS9200-8e

iSCSI host connections	1 Gb/s <ul style="list-style-type: none"> ■ Broadcom NetXtreme II 5708 ■ Broadcom NetXtreme II 5709 ■ Broadcom NetXtreme LF 5721 ■ Intel PRO/1000MT Dual Port ■ Intel PRO/1000PT Dual port 10 Gb/s <ul style="list-style-type: none"> ■ Brocade 1020 ■ Qlogic 8142 ■ Qlogic8242 ■ Intel 10Gb XSFR ■ Intel 10Gb AFDA Server Adapter ■ Broadcom NetXtreme II 57712 ■ Broadcom NetXtreme II 57711
Fibre Channel configurations	Fabric
JRE version	1.6.x
Rootboot supported?	Yes, where supported by the HBA (not with iSCSI host connections)
SCSI driver	Storport
I/O path failover	Microsoft MPIO with Net App DSM
Preferred failover mode	ALUA
Node failover	MicroSoft Cluster Server (16 nodes)
Providers	<ul style="list-style-type: none"> ■ SM ■ VDS/VSS

Installing the Storage Management Software on the Windows OS

Use this procedure to install the storage management software packages on the Windows OS. Refer to the *Failover Drivers User Guide* for information about failover driver installation and configuration on the Windows OS.

ATTENTION Possible loss of data – Downgrades from storage management software version 10.83 to a previous version can cause data loss and are not supported.

ATTENTION Possible data corruption – If the host is allowed to access data on the storage array without RDAC or a valid installation of a path failover product, and has dual paths to the storage array, the data might become unusable.

NOTE Before you start the primary server of a server cluster, complete all applicable configuration procedures for each system. This version of the storage management software does not support 64-bit versions of the Windows XP operating system. All administrator functions using the storage management software must be performed from a 32-bit storage management station.

Configure the Event Monitor on only one storage management station to prevent receiving duplicate event messages. Duplicate alerts are also sent if the Enterprise Management Window and the SMmonitor utility are running simultaneously.

NOTE Do not restart the system during the installation process. You will restart the system after you install all of the storage management software components.

1. Are you installing the Windows boot device on a storage array?
 - **Yes** – Go to Appendix A, “[Boot Device Installation](#),” and read the boot device installation procedures to determine where to install the storage management software. After you have determined where to install the software, return to this procedure.
 - **No** – Go to step 2.
2. Before installing this software, close all other programs.
3. Insert the installation CD into the CD-ROM drive.
4. From the desktop, double-click the name of the CD, such as `SANSM960`.

The CD window appears.
5. Open the install folder.
6. Select your operating system architecture (32-bit or 64-bit), and open the appropriate folder.
7. To launch the installer, double-click the `.exe` file, such as `SMIA-WS32.exe`.

The **InstallAnywhere** dialog appears while the software installs. When the software is installed, the **Introduction** window appears.
8. Click **Next**.

The **License Agreement** window appears.
9. Select the option that accepts the terms of the License Agreement.

10. Click **Next**.

The **Choose Install Folder** window appears, which identifies the default installation location.

11. Click **Next**.

The **Select Installation Type** window appears.

12. The steps in this procedure describe a typical (full) installation. Based on the type of installation you are performing, select one of these options.

NOTE If you want to install the Windows boot device on a storage array, select **Management Station**. This selection installs the software on a storage management station that is attached to the storage array where the boot device will be installed. Go to Appendix A, "[Boot Device Installation](#)" to complete the boot device installation procedures. After you finish the boot device installation procedures, return to this procedure.

- **Typical (Full Installation)** – This selection, which is the default, installs all of the packages on the system. Choose this option if you do not know which installation type to select.
- **Management Station** – This selection installs the software that is needed to configure, manage, and monitor a storage array. This option is for your workstation or management computer.
- **Host** – This selection installs the storage array server software. Use this type of installation for the host (server) that is connected to the storage array (Windows 2000 OS and Windows Server 2003 OS only).
- **Custom** – This selection lets you customize the features to be installed.

The selected installation type is selected in blue text.

13. Click **Next**.

If the software already exists, the **Overwrite Warning** dialog appears.

14. If the **Overwrite Warning** dialog appears, click **OK**.

The **Automatically Start Monitor?** window appears.

15. Select the appropriate option for your system.

If you start the Event Monitor on multiple machines, you might receive duplicate error messages from the same storage array. If you do not want to receive duplicate error messages, start the Event Monitor on only one machine. It is recommended that you run the Event Monitor on one machine that will run continuously.

16. Click **Next**.

The **Pre-Installation Summary** window appears.

17. Click **Install**.

The **Installing** window appears while the software is loading. The **Installation/Remove** status window also appears throughout the installation process.

The **Security Alert** dialog might appear multiple times.

18. Did the **Security Alert** dialog appear?

— **Yes** – Click **Yes**, and go to step 19.

— **No** – Go to step 19.

NOTE When RDAC is not installed, the **Install Complete** window shows an error message that states that the installation has completed and that there are some warnings. The message suggests that you look at the installation log for details. The installation log contains a warning that a Win32 exception can be found. This is normal and expected behavior. The installation was successful.

NOTE If you cancel an installation before the installation completes or while the progress bar is still visible, the installation stops prematurely. The software creates an installation log. You must manually uninstall the software by using the steps in “[Uninstalling Storage Management Software on the Windows OS](#)” on page 136.

If you cancel the installation *before* the progress bar is visible, you do not need to uninstall the software.

When the software is loaded, the **Install Complete** window appears.

19. Make sure that the **Yes, restart my system** option is selected.

20. Click **Done**.

Several files and program packages are stored in the <LOCAL
DRIVE>:\Program Files\StorageManager directory.

NOTE If you repeatedly cancel an installation or uninstallation before the process completes fully and try to install the software again, the installation process might not work. In addition, the software might not be installed after the installation process has completed. The installation complete panel tells you where the software is installed, but it is not there. If this problem occurs, delete the .xml file from the Program Files\Zero G directory.

The installation is completed, and Windows is restarted.

Checking the Installation on the Windows OS

After you have completed installing the software packages, make sure that they installed successfully.

NOTE To make sure that all of the packages installed successfully on the Windows OS, go to the registry settings in the `HKEY_LOCAL_MACHINE\Software\Storage` directory.

1. Select **Start >> Programs**.

The list of installed programs appears.

2. Make sure that storage management software appears in the program list.

If the storage management software does not appear in the list, refer to the *Product Release Notes for Version 10.83*, or contact your Technical Support representative.

3. To start the storage management software, select **Start >> Programs >> SMclient**.

Refer to the online help topics in storage management software for more information about how to manage your storage array.

After the client software starts, the Enterprise Management Window and these dialogs appear:

- **Select Addition Method**
- **Enterprise Management Window Task Assistant**

Uninstalling Storage Management Software on the Windows OS

If you have installed storage management software, but you have determined that you need to uninstall it, perform this procedure.

NOTE Uninstalling the software is not the same as removing previous versions of the software.

NOTE The procedure in step 1 is required only if you are using the storage array as a boot device.

1. Make sure that a single path exists to the storage array. Choose one of two methods to make sure that the alternate path to the storage array has been removed:
 - **Method 1** – Remove the host interface cable to the alternate path. When you are finished, go to step 5.
 - **Method 2** – Modify NVSRAM to *temporarily* disable RDAC multi-path functionality at the storage array by performing these substeps:

ATTENTION Possible data corruption – If no multi-path driver exists in the host and you send I/O to the storage array, data corruption could occur. Do not uninstall the multi-path driver, even if you are not using the storage array as a boot device.

- a. Select the storage array in the Enterprise Management Window.
- b. Select **Tools >> Execute Script**.

The **Script Editor** dialog appears.

- c. In the upper half of the **Script Editor** dialog, type these commands at the prompt, and press **Enter**.

```
set controller[a]  
HostNVSARAMByte[1, 0x16]=0xFF, 0x20;  
  
set controller[b]  
HostNVSARAMByte[1, 0x16]=0xFF, 0x20;
```

- d. Select **Tools >> Execute Only**.
 - e. For the NVSRAM modifications to take effect, turn off the power to the controller tray, wait 30 seconds for the controller tray to turn off the power, and turn on the power again.
2. Remove the software packages.
 - a. Select **Start >> Settings >> Control Panel >> Add or Remove Programs**.

The **Add or Remove Programs** dialog appears.

- b. Select storage management software from the list of programs.
- c. Click **Change/Remove**.

The **Uninstall** window appears.

- d. Click **Next**.
- e. Make sure that the **Complete Uninstall** option is selected.
- f. Click **Next**.

The software uninstallation process begins. The status dialog appears during the uninstallation process. When the procedure has completed, the **Uninstall Complete** window appears.

- g. Make sure that **Yes** is selected so that your computer will restart.
- h. Click **Done**.

3. Is the Windows boot device on a storage array?

ATTENTION Possible data corruption – If the Windows host uses any volumes on the storage array (boot device or otherwise), there is a risk of data corruption if RDAC is removed and there are multiple paths to the storage array.

- **Yes** – Go to step [4](#).
- **No** – You have completed the procedure.

4. Shut down the host system.

ATTENTION Possible data corruption – Because RDAC is removed, only a single path to the storage array is expected. The path goes to the controller that owns the boot volume. If the host is permitted to start without RDAC and still has dual paths to the storage array, the data might become unusable.

5. Start the host system.

Upgrade Instructions for Asymmetric Logical Unit Access (ALUA) with the VMware OS 8

Use the procedures in this chapter to configure VMware to support ALUA/TPGS. Starting with storage management software version 10.83 and controller firmware version 7.83, any storage array with the ALUA/TPGS feature enabled is managed by the VMW_SATP_ALUA plug-in on VMware.

To use a host running VMware as a management station, SANtricity ES is installed on one of the guest OSs running over VMware. Use the procedures in the guide for the supported guest OS to upgrade SANtricity ES on such a management station.

System Requirements for VMware

Systems running VMware are supported only as I/O attached hosts. You must run SANtricity ES Storage Manager on a management station with a supported OS or on a guest OS running with VMware. For a management station running a guest OS on VMware, you must use out-of-band management.

Operating system version for I/O attached hosts	VMware <ul style="list-style-type: none">■ 4.1u2■ 5.0 (M/N release) Refer to the applicable VMware documentation for guest operating systems supported.
Processor Support	Intel Xeon 64 bit, AMD Opteron 64 bit
Controller trays and controller-drive trays	<ul style="list-style-type: none">■ E2600■ CE4900■ E5400■ CE7900

Fibre Channel host adapters	Emulex <ul style="list-style-type: none"> ■ LP11000, LP110002 ■ LPe11000, LPe11002 ■ LPe12000/12002
	Qlogic <ul style="list-style-type: none"> ■ QLA246x ■ QLE246x ■ QLE2560/2562
	Brocade <ul style="list-style-type: none"> ■ 415 ■ 425 ■ 815, ■ 825
SAS host adapters	LSI <ul style="list-style-type: none"> ■ 3801E ■ 3801X ■ 3442E ■ 3442X ■ 9200-8e

iSCSI host connections	<p>1 Gb/s</p> <ul style="list-style-type: none"> ■ Broadcom NetXtreme II 5708 ■ Broadcom NetXtreme II 5709 ■ Broadcom NetXtreme LF 5721 ■ Intel PRO/1000MT Dual Port ■ Intel PRO/1000PT Dual port <p>10 Gb/s</p> <ul style="list-style-type: none"> ■ Brocade 1020 ■ Qlogic 8142 ■ Emulex OCE10102 ■ Intel 10Gb XSFR ■ Intel 10Gb AFDA Server Adapter ■ Broadcom NetXtreme II 57712 ■ Broadcom NetXtreme II 57711
JRE version	1.6.x
Rootboot supported?	Yes, where supported by the HBA (not with iSCSI host connections)
SCSI driver	Storport
I/O path failover	VMware Native failover - TPGS
Preferred failover mode	SATP-ALUA
Node failover	<ul style="list-style-type: none"> ■ VMware HA ■ VMware FT (fault tolerance)
Providers	None

Installing ALUA Support for VMware Versions ESX4.1U2, ESXi5.0, and Prior Versions

1. Make sure that the host software on your management station is upgraded to version 10.83.
2. Use one of the following command sequences to manually add a claim rule to select VMW_SATP_ALUA to claim any storage array that has its target port group support (TPGS) bit set.
 - For ESX4.1, enter the following commands on the command line of the host. Replace <VID> and <PID> with the appropriate vendor ID (LSI) and Product ID (INF-01-00) strings.

```
# esxcli nmp satp deleterule -s VMW_SATP_LSI -V <VID> -M <PID>
# esxcli nmp satp addrule -V <VID> -M <PID> -c tpgs-off -s VMW_SATP_LSI
```
 - For ESXi5.0, enter the following commands on the command line of the host, replacing <VID> and <PID> with the appropriate vendor ID and Product ID strings:

```
# esxcli storage nmp satp rule add -s VMW_SATP_ALUA -V <VID> -M <PID> tags_on
```
3. Reboot the host.
4. Use one of the following command sequences to verify that the correct claim rule was added.
 - For ESX4.1, enter the command # `esxcli nmp satp listrules -s VMW_SATP_LSI` on the command line of the host and check that the output for the applicable VID/PID combination shows the Claim Options with the `tpgs_off` flag set.
 - For ESXi5.0, enter the command # `esxcli storage nmp satp rule list -s VMW_SATP_ALUA` on the command line of the host and check that the output for the applicable VID/PID combination shows the Claim Options with the `tpgs_off` flag set.
5. Upgrade the controllers in the storage array to controller firmware version 7.83 and the corresponding NVSRAM version.
6. From host management client, verify that the host OS type is set to *VMWARE*. Starting with host software version 10.83, the *VMWARE* host type will have the ALUA and TPGS bits enabled by default.

7. Use one of the following command sequences to verify that the TPGS/ALUA enabled devices are claimed by the VMW_SATP_ALUA plug-in.
 - For ESX4.1, enter the command `#esxcli nmp device list` on the command line of the host. Check that the output shows `VMW_SATP_ALUA` as the value of `Storage Array Type` for every storage array whose host software level is 10.83. Storage arrays with lower level host software show `VMW_SATP_LSI` as the value of `Storage Array Type`.
 - For ESXi5.0, enter the command `#esxcli storage nmp device list` on the command line of the host. Check that the output shows `VMW_SATP_ALUA` as the value of `Storage Array Type` for every storage array whose host software level is 10.83. Storage arrays with lower level host software show `VMW_SATP_LSI` as the value of `Storage Array Type`.

Installing ALUA Support for VMware Versions ESX4.1U3, ESXi5.0U1, and Subsequent Versions

Starting with ESXi5.0 U1 and ESX4.1U3, VMware will automatically have the claim rules to select the VMW_SATP_ALUA plug-in to manage storage arrays that have the target port group support (TPGS) bit enabled. All arrays with TPGS bit disabled are still managed by the VMW_SATP_LSI plug-in.

1. Make sure that the host software on the management station is upgraded to version 10.83.
2. Upgrade the controllers in the storage array to controller firmware version 7.83 and the corresponding NVSRAM version.
3. From host management client, verify that the host OS type is set to *VMWARE*. Starting with storage management software version 10.83, the *VMWARE* host type will have the ALUA and TPGS bits enabled by default.
4. Use one of the following command sequences to verify that the TPGS/ALUA enabled devices are claimed by the VMW_SATP_ALUA plug-in.
 - For ESX4.1, enter the command `#esxcli nmp device list` on the command line of the host. Check that the output shows `VMW_SATP_ALUA` as the value of `Storage Array Type` for every storage array whose host software level is 10.83. Storage arrays with lower level host software show `VMW_SATP_LSI` as the value of `Storage Array Type`.
 - For ESXi5.0, enter the command `#esxcli storage nmp device list` on the command line of the host. Check that the output shows `VMW_SATP_ALUA` as the value of `Storage Array Type` for every storage array whose host software level is 10.83. Storage arrays with lower level host software show `VMW_SATP_LSI` as the value of `Storage Array Type`.

Boot Device Support

Not all operating system support the use of a storage array as a boot device. The following table shows which operating systems support this configuration.

Table 1 Operating System Support for Using a Storage Array as a Boot Device

Operating System	Boot Device Support	Comments
Windows Server 2003 Windows XP	Yes, where supported by the HBAs	
Windows Server 2008 Hyper-V Windows Vista	Yes, where supported by the HBAs	Not supported with iSCSI connections
Solaris Sparc Solaris x86	Yes, where supported by the HBAs	Not supported with LP11xxx
HP-UX	Yes	
Linux	Yes, where supported by the HBAs	Not supported with iSCSI or InfiniBand connections
VMware	Yes,	Not supported with iSCSI connections

Installing the Boot Device

This section contains procedures to install a boot device on a storage array.

Before you install the storage management software components on the host, you must prepare the storage array and the host.

ATTENTION Possible loss of data access – To make sure that you have failover protection, the storage array that you want to assign as a boot device must have dual controllers connected to two HBAs. If the storage array has a single controller or dual controllers that are connected to the same HBA (host path), you do not have failover protection and could lose access to the boot device when the controller fails or has connection problems. For this reason, do not use this type of controller configuration with a boot device installation.

You must have administrator privileges to access this software. You must use the volume mapped to LUN 0 as the boot device. Some operating systems support booting only from LUN 0.

Storage Array and Host Preparation

To prepare the storage array as a boot device, perform these procedures in order:

1. Perform the instructions in “[Preparing the Storage Array as a Boot Device](#)” on page 146.
2. Perform the instructions in “[Preparing the Host](#)” on page 151.

Before you proceed with the installation, complete these actions:

- Make sure that you have installed the SMclient from the storage management software on a host or a storage management station that is attached to the storage array.

NOTE Before you install the storage management software components on the host, complete the installation and configuration of the storage array and the host.

- For information about host bus adapters (HBAs) that support storage arrays as boot devices, refer to the *Storage System Product Release Notes for Version 10.83*.
- If you have questions or concerns about the installation procedures, contact your Technical Support representative.

NOTE On Itanium 64-bit hosts, the storage array can be successfully used as a boot device, but only when the original, local boot disk remains in the host system. Do not remove the local disk from the host system, or you will not be able to boot from the storage array.

Preparing the Storage Array as a Boot Device

Starting the Client Software

Perform the following tasks in the order in which they appear.

1. Go to the storage management station on which you installed the client software.
2. Start the existing storage management software with the procedure for your operating system:
 - **UNIX-based operating systems** – At the prompt, type `SMclient`, and press **Enter**.
 - **Windows operating systems** – Select **Start >> Programs >> SANtricity ES Storage Manager SMclient**.

After the client software starts, the Enterprise Management Window and these dialogs appear:

- Select Addition Method
 - Enterprise Management Window Task Assistant
3. To close the **Select Addition Method** dialog, click **Cancel**.
 4. To close the **Task Assistant** dialog, click **Close**.

5. Select **Edit >> Add Device**.

The **Add Device** dialog appears.

6. Add the Internet Protocol (IP) addresses or host names of the controllers in the storage array.

You must add the IP addresses or host names of the controllers one at a time. For more information, refer to the online help topics in the Enterprise Management Window.

The storage array that you plan to use as the boot device appears in the Enterprise Management Window.

7. Go to [“Configuring the Boot Volume on the Storage Array”](#) on page 147.

Configuring the Boot Volume on the Storage Array

1. In the Enterprise Management Window, select the storage array in the Device Tree.

2. Select **Tools >> Manage Device**.

The Array Management Window for the selected storage array appears.

3. Select the **Logical/Physical** tab.
4. To determine where you can create a boot volume for the host, examine the Free Capacity nodes and Unconfigured Capacity nodes on the storage array.

Do you have 2 GB of capacity on either the Unconfigured Capacity node or a Free Capacity node?

- **Yes** – Go to step 5.
- **No** – You need to free enough capacity for the boot volume from either the Unconfigured nodes or the Free Capacity nodes. If you have multiple Free Capacity nodes on a volume group, but none of the nodes are 2 GB or larger, go to [“Consolidating Free Capacity Nodes”](#) on page 148. Otherwise, go to [“Deleting Volumes to Free Capacity”](#) on page 148.

5. Decide which type of capacity you will use:
 - **Unconfigured Capacity node** – Go to [“Configuring the Boot Volume on an Unconfigured Capacity Node”](#) on page 148.
 - **Free Capacity node** – Go to [“Configuring the Boot Volume on a Free Capacity Node”](#) on page 149.

Consolidating Free Capacity Nodes

1. Select the volume group that contains the Free Capacity nodes.
2. Select **Volume Group >> Defragment**.

This operation consolidates all of the Free Capacity nodes on the volume group.

3. Is the Free Capacity node that results from the procedure 2 GB or larger?
 - **Yes** – Go to [“Configuring the Boot Volume on a Free Capacity Node”](#) on page 149.
 - **No** – Go to [“Deleting Volumes to Free Capacity”](#) on page 148.

Deleting Volumes to Free Capacity

1. Delete one or more volumes to create at least 2 GB of available capacity.

For additional information about how to delete volumes, refer to the online help topics in the Array Management Window.

2. Examine the Free Capacity nodes and Unconfigured Capacity nodes on the storage array. Based on the amount of available capacity, choose one of these actions:
 - **You now have 2 GB of capacity available on the Unconfigured Capacity node** – Go to [“Configuring the Boot Volume on an Unconfigured Capacity Node”](#) on page 148.
 - **You now have 2 GB of capacity available on a Free Capacity node** – Go to [“Configuring the Boot Volume on a Free Capacity Node”](#) on page 149.

Configuring the Boot Volume on an Unconfigured Capacity Node

1. Right-click the Unconfigured Capacity node, and click **Create Volume**.

The **Default Host Type** dialog appears.

2. Select the default host type from the list, and click **OK**.

The **Create Volume Wizard Introduction** dialog appears.

3. Click **Next**.
4. Select **Unconfigured Capacity** (create new volume group), and click **Next**.

The **Specify Volume Group Parameters** dialog appears.

5. Specify the RAID level and capacity that you want for the volume group.

A two-drive, RAID Level 1 volume group is recommended. However, you can specify more drives and RAID Level 3, RAID Level 5, or RAID Level 6.

6. Click **Next**.

The **Specify Volume Parameters** dialog appears.

7. Specify the boot volume capacity.

A capacity of 4 GB is recommended. The capacity must be at least 2 GB.

8. Name the volume to identify it as the boot volume.
9. From the Advanced Volume Parameters area, select **Customize settings**.

10. Click **Next**.
11. In the **Specify Advanced Volume Parameters** dialog, perform these steps:
 - a. From the Volume I/O characteristics area, select **File System**.
 - b. From the Preferred controller ownership area, select **Slot A**.
 - c. From the Volume-to-LUN Mapping area, select **Map Later with Storage Partitioning**.
12. To create the volume and the volume group, click **Finish**.
The **Create Volume Wizard – Creation Successful** dialog appears.
13. Click **No**.
14. Click **OK**.
15. Use the Storage Partitioning premium feature to map the volume to the host that uses LUN 0.

NOTE For additional information about how to map volumes that use Storage Partitioning, refer to the online help topics in the Array Management Window.

16. Go to [“Ensuring a Single Path to the Storage Array”](#) on page 150.

Configuring the Boot Volume on a Free Capacity Node

1. Right-click the Free Capacity node that you want to use, and click **Create Volume**.
The **Default Host Type** dialog appears.
2. Select the default host type from the list, and click **OK**.
The **Create Volume Wizard Introduction** dialog appears.
3. Click **Next**.
The **Specify Volume Parameters** dialog appears.
4. Specify the boot volume capacity.
A capacity of 4 GB is recommended. The capacity must be at least 2 GB.
5. Name the volume to identify it as the boot volume.
6. From the Advanced Volume Parameters area, select **Customize settings**.
7. Click **Next**.
8. In the **Specify Advanced Volume Parameters** dialog, perform these steps:
 - a. From the Volume I/O characteristics area, select **File System**.
 - b. From the Preferred controller ownership area, select **Slot A**.
 - c. From the Volume-to-LUN Mapping area, select **Map Later with Storage Partitioning**.

9. To create the volume and the volume group, click **Finish**.

The **Create Volume Wizard – Creation Successful** dialog appears with a prompt to configure another boot volume.

10. Click **No**.
11. Click **OK**.
12. Use the Storage Partitioning premium feature to map the volume to the host by using LUN 0.

NOTE For additional information about how to map volumes that use Storage Partitioning, refer to the online help topics in the Array Management Window.

13. Go to “[Ensuring a Single Path to the Storage Array](#)” on page 150.

Ensuring a Single Path to the Storage Array

After you have configured a boot volume, make sure that there is a single path to the storage array. The path must be configured to the controller that owns the boot volume (controller A).

NOTE If you removed a previously installed version of RDAC in a root-boot environment, you do not need to remove the installed version of RDAC again.

1. Choose one of two methods to make sure that the alternate path to the storage array is removed:
 - **Method 1** – Remove the host interface cable to the alternate path.
 - **Method 2** – Modify NVSRAM to *temporarily* disable RDAC multi-path functionality at the storage array by performing these substeps.
 - a. Select the storage array in the Enterprise Management Window.
 - b. Select **Tools >> Execute Script**.

The **Script Editor** dialog appears.

- c. In the upper half of the **Script Editor** dialog, type these commands at the prompt, and press **Enter**.

```
set controller[a]  
HostNVSRAMByte[1, 0x16]=0xFF, 0x20;  
set controller[b]  
HostNVSRAMByte[1, 0x16]=0xFF, 0x20;
```
- d. Select **Tools >> Execute Only**.
- e. For the NVSRAM modifications to take effect, turn off the power to the controller tray, wait 30 seconds for the controller tray to turn off the power, and turn on the power again.

ATTENTION Possible data corruption – When you start from the storage array, there must be only a single path to the storage array when RDAC is removed. The path must be to the controller that owns the boot volume. If the host is permitted to start without RDAC and still has dual paths to the storage array, the data might become unusable.

2. Boot the host system.
3. Go to “[Preparing the Host](#)” on page 151.

Preparing the Host

ATTENTION Possible loss of access to the boot device and the operating system – After you install the boot device, never delete the volume mapped to LUN 0 or select **Configure >> Reset Configuration**. Performing these actions causes loss of access to the boot device and the operating system.

In this procedure, the default boot path refers to controller A, which owns the boot volume. The alternate boot path refers to controller B.

1. Enable the BIOS on the HBA that is connected to the default boot path.

For procedures about how to enable the HBA BIOS, refer to the host system documentation and the HBA documentation. After the BIOS is enabled, the host reboots automatically.

2. Make sure that the HBA with enabled BIOS is connected to the default boot path (controller A), and the HBA with disabled BIOS is connected to the alternate boot path (controller B).
3. Install the operating system on the host.
4. After the installation is complete, restart the operating system.
5. To enable the alternate path to the storage array, complete the steps in “[Completing the Installation Process](#)” on page 151.

Completing the Installation Process

This procedure completes the root-boot environment setup. Use this procedure to restart the system or set the path for the command line interface (CLI), if necessary.

1. Do you want to install the software in a root-boot environment?
 - **Yes** – Go to step 2.
 - **No** – Go to step 5.
2. Based on the method that you used to disable the alternate path in “[Ensuring a Single Path to the Storage Array](#)” on page 150, perform one of these actions to enable the alternate path to the storage array:
 - **You removed the host interface cable to the storage array** – Reattach the host interface cable to the alternate controller. Go to step 5.
 - **You modified NVSRAM to temporarily disable RDAC multi-path functionality at the storage array** – Go to step 3.

3. Will you download new controller firmware and NVSRAM to the storage array after the host software installation?
 - **Yes** – The new NVSRAM file is pre-configured to enable RDAC multi-path functionality. Go to step 5.
 - **No** – Go to step 4.
4. Open a command prompt window.
 - a. Type these commands, and press **Enter**.

```
"set controller[a]  
HostNVSRAMByte[1,0x16]=0xFF,0x20;"  
"set controller[b]  
HostNVSRAMByte[1,0x16]=0xFF,0x20;"
```
 - b. For the NVSRAM modifications to take effect, turn off the power to the controllers, wait 30 seconds for the controllers to turn the power off, and turn on the power.
 - c. Go to step 5.
5. Restart the host system.

NOTE You can run the command line interface (CLI) from the installation target, or you can set the path to run the CLI from any location.

6. Do you want to set the path for the CLI?
 - **No** – Go to step 7.
 - **Yes** – Perform these substeps:
 - a. Select **Start >> Settings >> Control Panel >> System**.

The **System Properties** dialog appears.
 - b. Select the **Advanced** tab.
 - c. Click **Environment Variables**.
 - d. From the System variables area of the **Environment Variables** dialog, select the Path entry, and click **Edit**.
 - e. From the **Variable Value** text box of the **Edit System Variable** dialog, type this command at the end of the current value, and press **Enter**. In this command, *<path>* is the path to the SMclient installation directory.
<path>
 - For example:

```
%SystemRoot%\system32;%SystemRoot%;C:\Program  
Files\StorageManager\client;
```
 - f. Click **OK**. At the next dialog, click **OK**.

7. Based on your installation environment, perform one of these actions:
 - **Cluster environment** – Go to step 8.
 - **Standard environment** – Start the software. Go to step 9.
8. Install the host software on each host in the server cluster.

NOTE Do not configure the server cluster software at this time. You are instructed when to configure the server cluster software after you complete the storage management software installation.

You cannot mix two architectures in the same server cluster. For example, a server cluster cannot contain both the 32-bit and 64-bit versions of the Windows OS.

9. Start the storage management software with the procedure for your operating system:
 - **UNIX-based operating systems** – At the prompt, type `SMclient`, and press **Enter**.
 - **Windows operating systems** – Select **Start >> Programs >> SANtricity ES Storage Manager SMclient**.

After the client software starts, the Enterprise Management Window and these dialogs appear:

- **Select Addition Method**
- **Enterprise Management Window Task Assistant**

Refer to the online help topics in storage management software for more information about how to manage your storage array.

Copyright © 2012 NetApp, Inc. All rights reserved.

