
Origin200™ and Origin200 GIGACHannel™ Documentation Errata

The manual *Origin200 and Origin200 GIGACHannel Owner's Guide* (p/n 007-3708-001) contains several errors that are noted on this errata sheet.

Page	Problem	Correction
xxi	Figure i does not show the complete documentation set.	Figure i should show both the <i>Origin200 and Origin200 GIGACHannel Owner's Guide</i> and the <i>Origin200 and Origin200 GIGACHannel Maintenance Guide</i> .
31	Typographical errors in Table 1-1.	"sec0 ndary" should be "secondary" "0"32 MB" should be "32 MB"
55	The section "Air Flow Through the GIGACHannel Expansion Chassis" refers to fans. Although the accompanying illustration (Figure 1-18) is correct, the text in this section is not.	Text should read: "The GIGACHannel cabinet is cooled by a single blower that draws air from the front of the chassis to the rear. Figure 1-18 shows the direction of air flow through the GIGACHannel expansion chassis."
56	The section "Temperature and Fan Speed In the GIGACHannel Expansion Chassis" is incorrect.	The section should be titled "Temperature and Blower Speed In the GIGACHannel Expansion Cabinet." The text of this section should read: "The blower in the GIGACHannel expansion cabinet operates at a single speed at all times."
57	The section "If a Fan Fails In The GIGACHannel Expansion Chassis" is incorrect.	The section should be titled "If the Blower Fails In the GIGACHannel Expansion Cabinet." The text of this section should read: "If the blower inside the GIGACHannel expansion chassis fails, the entire server (both the expansion chassis and the Origin200 CPU module) shuts down immediately."
68, 70	Figures 2-3 and 2-4 show only one manual included with the server.	These illustrations should show both the <i>Origin200 and Origin200 GIGACHannel Owner's Guide</i> and the <i>Origin200 and Origin200 GIGACHannel Maintenance Guide</i> .

